

Disconnecting Gprs - Asus P535 User Manual

Asus cell phone user manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

 
16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132



•

[Table of Contents](#)

•

Bookmarks



If you have set a default GPRS connection, it automatically connects when you launch an application that connects to the Internet.

1. Launch any application that connects to the Internet (e.g. Internet Explorer).

The device will automatically connect your default GPRS connection. A pop-up callout appears to display the connection status.

2. When connected, you can start browsing the Internet. If you are using Internet Explorer, the default site will be displayed.



Disconnecting GPRS

To disconnect GPRS:

1. Tap

from the status bar.

2. From the pop-up callout, tap

Disconnect.

3. Tap

to exit.

NOTE:

- If your ActiveSync is set to sync with Exchange Server automatically, synchronization will occur after you connect again.

- GPRS will automatically reconnect everytime you launch an application that requires GPRS connection (e.g., Internet Explorer or Pocket MSN).

Pop-up callout



[Previous Page](#)
[Next Page](#)

1
...
66
67
68
69
70
71
72
73

Related Manuals for Asus P535

[PDA Asus P535 Assembly & Disassembly Instructions](#)

(33 pages)

[Cell Phone Asus P535 Quick Start Manual](#)

(27 pages)

[Cell Phone Asus P535 Quick Start Manual](#)

P535 quick start guide (26 pages)

[Cell Phone Asus P525 Quick Start Manual](#)

(25 pages)

[Cell Phone Asus P526 User Manual](#)

Asus cell phone user manual (122 pages)

[Cell Phone Asus P526 Service Manual](#)

Asus p526 cell phone service manual (12 pages)

[Cell Phone Asus P526 Service Manual](#)

Repair lv3 4 sop (113 pages)

[Cell Phone Asus P527 Quick Start Manual](#)

Asus p527: quick start (39 pages)

[Cell Phone Asus 90A-S5G1007T User Manual](#)

User manual (174 pages)

[Cell Phone Asus P527 Firmware Update](#)

(9 pages)

[Cell Phone Asus P550 User Manual](#)

Asus p550 user manual in traditional chinese (140 pages)

[Cell Phone Asus P550 User Manual](#)

(176 pages)

[Cell Phone Asus P565 Troubleshooting Manual](#)

(97 pages)

[Cell Phone Asus P565 User Manual](#)

User manual (190 pages)

[Cell Phone Asus P552w User Manual](#)

User manual (186 pages)

[Cell Phone Asus P552W Manual](#)

Level 3,4 (117 pages)

Related Content for Asus P535

[P320 Disconnecting Gprs](#)

Asus P320

[90A-S5G1007T Disconnecting Gprs](#)

Asus 90A-S5G1007T

[P527 Disconnecting Gprs](#)

Asus P527

[P526 Disconnecting Gprs](#)

Asus P526

[P525 Disconnecting Gprs](#)

Asus P525

[J201S Gprs Connection](#)

Asus J201S

[J201 Gprs Connection](#)

Asus J201

[J501 Gprs Counter](#)

Asus J501

[Save PDF](#)