



# Toshiba RAS-5M34UAV-E1 Owner's Manual

Toshiba split type air conditioners owner's manual



1  
2  
3  
4  
5  
6  
7  
8

|  |
|--|
|  |
|--|


•

[Table of Contents](#)

•

## Bookmarks

Available languages

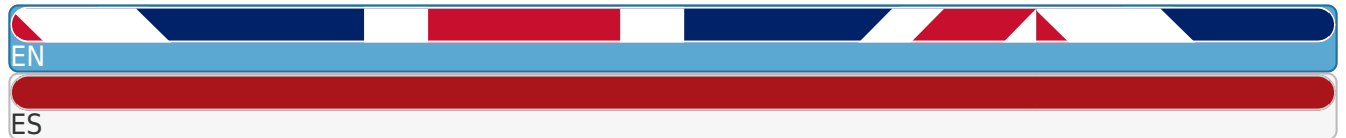

## Quick Links

[Download this manual](#) See also: [Service Manual](#), [Installation Manual](#)





# OWNER'S MANUAL

AIR CONDITIONER (SPLIT TYPE)

For general purposes

# TOSHIBA

Indoor unit

RAS-B10, 13, 16, 22N3KV2 Series

RAS-M07, 24N3KV2 Series

Outdoor unit

RAS-10, 13, 16, 22N3AV2 Series

RAS-M14GAV-E

RAS-M18UAV-E

RAS-3M16S/V-E

RAS-4M17S/V-E

RAS-3M26UAV-E

RAS-4M27UAV-E

RAS-5M34UAV-E1

# TOSHIBA

DEUTSCH

PORTUGUÊS

POLSKI

ESKY

P C

HRVATSKI

MAGYAR

TÜRKÇE

NEDERLANDS

SVENSKA

SUOMI

NORSK

DANSK

ROMÂN

EESTI

LATVISKI

SLOVEN INA

SLOVENŠ INA



[ManualsLib.com](http://ManualsLib.com)



1110650175

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba RAS-5M34UAV-E1

[Air Conditioner Toshiba RAS-18N3KV2-E1 Installation Manual](#)

(276 pages)

[Air Conditioner Toshiba RAS-16N3AV2 Series Installation Manual](#)

(124 pages)

[Air Conditioner Toshiba 16N3KVP Series Owner's Manual](#)

(105 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-B10N3KVP Series Installation Manual](#)

Air conditioner (split type) (80 pages)

[Air Conditioner Toshiba RAS-107SKV-E5 Technical Handbook](#)

(78 pages)

[Air Conditioner Toshiba RAS-M07N3KV2 Series Installation Manual](#)

(78 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Installation Manual](#)

Indoor/outdoor unit (67 pages)

[Air Conditioner Toshiba 24N3KV2 Series Owner's Manual](#)

(26 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Installation Manual](#)

(23 pages)

[Air Conditioner Toshiba RAS-B10N3KV2 Series Owner's Manual](#)

Air conditioner (split type) indoor and outdoor units (11 pages)

[Air Conditioner Toshiba RAS-5M34UAV-E1 Installation Manual](#)

Air conditioner (multi-split type) toshiba ras-5m34uav-e1 (10 pages)

[Air Conditioner Toshiba RAS-B10 SERIES Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-B10N3KVP series Installation Manual](#)

Split type (9 pages)

[Air Conditioner Toshiba RAS-B10N3KVP Owner's Manual](#)

Toshiba air conditioner (split type) owner's manual (5 pages)

## Summary of Contents for Toshiba RAS-5M34UAV-E1

**Page 1** AIR CONDITIONER (SPLIT TYPE) For general public use DANSK Indoor unit ROMÂN RAS-B10, 13, 16, 22N3KV2 Series RAS-M07, 24N3KV2 Series EESTI Outdoor unit LATVISKI RAS-10, 13, 16, 22N3AV2 Series RAS-M14GAV-E SLOVEN INA RAS-M18UAV-E SLOVENŠ INA RAS-3M18SAV-E LIETUVI RAS-4M23SAV-E RAS-3M26UAV-E RAS-4M27UAV-E RAS-5M34UAV-E1 1110650175...

### **Page 2: Precautions For Safety**

PRECAUTIONS FOR SAFETY The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual. Store this owner's manual in a location where it can be easily accessed when needed. Be sure to read this owner's manual carefully

before operating. It is recommended that maintenance be performed by a specialist when the unit has been operated for a long time.

[Page 3](#) When the air-conditioning unit does not cool or warm, there may be a leakage of refrigerant. Please consult the supplying retail dealership. The refrigerant used in the air-conditioning unit is safe. It will not leak under normal operating conditions but if it leaks into the room and contacts a heat source such as a heater, or stove, it may cause a harmful reaction.

[Page 4](#) “ONE- 4 TIMER (Yellow) TOUCH” of the button. If you prefer other settings you can select from the many other operating functions of your Toshiba unit. 5 OPERATION (Green) 6 RESET button Press : Start the operation.

[Page 5](#) Setting Everyday Timer OPERATION AND PERFORMANCE Press : Set the ON timer. Press 1. Three-minute protection feature: To prevent the unit from being activated for 3 minutes when suddenly restarted or switched to ON. 2. Preheating operation: Warm up the unit for 5 minutes before blowing warm air.

### [Page 6: Precauciones Sobre Seguridad](#)

PRECAUCIONES SOBRE SEGURIDAD El fabricante no asume responsabilidad alguna por los daños causados por no seguir el contenido e instrucciones de este manual. Guarde este manual del propietario en un lugar de fácil acceso para futuras referencias. Lea atentamente este manual del propietario antes de utilizar el aparato. Se recomienda realizar una operación de mantenimiento por un especialista cuando la unidad lleve utilizándose mucho tiempo.

[Page 7](#) Si la unidad de aire acondicionado no enfría o no calienta, puede deberse a una fuga de refrigerante. Por favor, consulte con su distribuidor. El refrigerante utilizado en la unidad de aire acondicionado es inocuo. En condiciones normales no deberían producirse fugas pero si se derrama en la habitación y entra en contacto con una fuente de calor, por ejemplo un calefactor u hornilla, podría producir una reacción nociva.

### [Page 8: Funcionamiento Automático](#)

FILTER (Naranja) del aire, y otras características para proporcionarle contacto alterno con “ONE-TOUCH” PRE.DEF (Precalentamiento/ del botón. Si prefiere otra configuración, puede seleccionarla desde cualquier otra función operativa de su unidad Toshiba. Desescarche) (Naranja) Pulse : Empezar la operación. TIMER (Amarilla)

This manual is also suitable for:

[Ras-4m23sav-eRas-4m27uav-eRas-3m18sav-eRas-m18uav-eRas-3m26uav-eRas-m14gav-e](#) ... [Show all](#)