



# About This Guide; How This Guide Is Organized; Where To Find More Information - Asus ASMB3-SOL User Manual

Server management board



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70



•

Table of Contents

- 

Troubleshooting

•

## Bookmarks







# About this guide

This user guide contains the information you need when installing and configuring the server management board.

## How this guide is organized

This guide contains the following parts:

- 

### Chapter 1: Product introduction

This chapter describes the server management board features and the

new

technologies it supports.

•

## Chapter 2: Installation

This chapter provides instructions on how to install the board to the server system and install the utilities that the board supports.

•

## Chapter 3: Software support

This chapter tells you how to use the software applications that the server management board supports.

•

## Appendix: Reference Information

The Appendix shows the location of the LAN port for server management and BMC socket on several motherboards. This section also presents common problems that you may encounter when installing or using the server management board.

## Where to find more information

Refer to the following sources for additional information and for product and software updates.

1.

### ASUS websites

The ASUS website provides updated information on ASUS hardware and software products. Refer to the ASUS contact information.

2.

### Optional documentation

Your product package may include optional documentation, such as warranty

flyers, that may have been added by your dealer. These documents are not part of the standard package.

vii

[Previous Page](#)  
[Next Page](#)

1  
...  
4  
5  
6  
7  
8  
9  
10  
11

## Related Manuals for Asus ASMB3-SOL

### [Server Board ASUS ASMB3-SOL User Manual](#)

Server management board (62 pages)

### [Server Board Asus ASMB2 User Manual](#)

Asus asmb2 server management board (62 pages)

### [Server Board Asus ASMB-LE User Manual](#)

Server management board (52 pages)

### [Server Board Asus ASMB4-IKVM User Manual](#)

Server management board (84 pages)

### [Server Board Asus ASMB7-iKVM User Manual](#)

Server management board (98 pages)

### [Server Board Asus ASMB9-iKVM User Manual](#)

Server management board (70 pages)

### [Server Board Asus AAEON ARES-WH10 User Manual](#)

(76 pages)

## Related Content for Asus ASMB3-SOL

### [ASMB4-IKVM About This Guide](#)

Asus ASMB4-IKVM

### [ASMB2 About This Guide](#)

Asus ASMB2

This manual is also suitable for:

[Asmb3-sol plus](#)

[Save PDF](#)