

Connecting To Work; Setting Up Connections - Asus MyPal A632N User Manual

Asustek computer user manual pocket pc

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104



•

[Table of Contents](#)

•

Bookmarks



Connecting to Work

1. Obtain the following information from your network administrator:

server phone number, user name, and password.

> Settings > Connections tab > Connections.

2. Tap



3. Under My Work Network, set up either a modem, network card, wireless network, or VPN server connection. Refer to the section "Set

up connections" for the procedure.

4. To start the connection, start using a desired program. For example, switch to Pocket Internet Explorer and browse to a Web page. Your device automatically starts connecting.

Setting up connections

Modem connections

To set up a modem connection:

Obtain the following information from your ISP or network administrator:

telephone number, user name, password, domain name, and TCP/IP settings.

If your device does not have access to a mobile phone network, insert a modem card.

> Settings > Connections tab > Connections.

1. Tap

2. To create a new connection, in either My ISP or My Work Network, tap Add a new modem connection, then follow the instructions in the

New Connection wizard.

3. To view additional information for any screen in the wizard or while changing settings, tap

NOTE

To change modem connection settings in either My ISP or My Work Network, tap Manage existing connections > Modem tab. Select the desired modem connection, tap Edit, and follow the instructions on the screen.

Get Connected



.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
74
75
76
77
78
79
80
81

Quick Links:

[Connecting to a Power Source](#)

[Setting up Gps](#)

Related Manuals for Asus MyPal A632N

[Handhelds Asus MyPal A620BT User Manual](#)

Asus mypal a620bt user's manual (156 pages)

[Handhelds Asus MyPal A620BT User Manual](#)

(18 pages)

[Handhelds Asus MyPal A716 Quick Start Manual](#)

Asus mypal a716: quick start (6 pages)

[Handhelds Asus MyPal A716 User Manual](#)

Asus mypal a716: user guide (166 pages)

[Handhelds Asus MyPal A716 Manual De L'utilisateur](#)

Asus mypal a716 french user guide (166 pages)

[Handhelds Asus MyPal A730 Handbook](#)

Asus mypal a730: user guide (204 pages)

[Handhelds Asus MyPal A730W Handbook](#)

Asus mypal a730w: user guide (218 pages)

[Handhelds Asus MyPal A730 User Manual](#)

(80 pages)

[Handhelds Asus MyPal A730W Quick Start Manual](#)

Asus mypal a730w: quick start (6 pages)

[Handhelds Asus MyPal A632 Quick Start Manual](#)

Asus gps receiver user manual (6 pages)

[Handhelds Asus MyPal A632 User Manual](#)

Asus mypal a632: user guide (104 pages)

[Handhelds Asus A626 - MyPal - Win Mobile 6.0 312 MHz User Manual](#)

Mypal pocket pc (109 pages)

[Handhelds Asus MYPAL A639 User Manual](#)

User manual (106 pages)

[Handhelds Asus MyPal A600 User Manual](#)

Asustek computer inc. user's manual pocket pc mypal a600 (110 pages)

[Handhelds Asus MyPal A620 User Manual](#)

Asustek computer user's manual mypal a620 (136 pages)

[Handhelds Asus MyPal A620 User Manual](#)

User manual (136 pages)

Related Content for Asus MyPal A632N

[MyPal A730W Connect To Work](#)

Asus MyPal A730W

[MyPal A730 Connect To Work](#)

Asus MyPal A730

[MyPal A716 Connect To Work](#)

Asus MyPal A716

[MyPal A620 Connect To Work](#)

Asus MyPal A620

[MyPal A620BT Connect To Work](#)

Asus MyPal A620BT

[MyPal A600 Connect To Work](#)

Asus MyPal A600

This manual is also suitable for:

[Mypal a636n](#)

[Save PDF](#)