

TOSHIBA

Toshiba Strata AirLink User Manual

External wireless handset

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#), [Installation Manual](#)



Telecommunication Systems Division
TM

TOSHIBA

External Wireless Handset User Guide

May 1999

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba Strata AirLink

[Handsets Toshiba Strata AirLink User Manual](#)

Integrated wireless handset (132 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

Integrated wireless handset (131 pages)

[Telephone System □□□Toshiba Strata AirLink Installation Manual](#)

Digital business telephone systems (117 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

External wireless handset (48 pages)

[Telephone Accessories Toshiba Strata DK User Manual](#)

Standard telephone digital business telephone systems (24 pages)

[Telephone Accessories Toshiba STRATA CTX Installation Manual](#)

Attendant console (24 pages)

[Telephone Accessories Toshiba Strata CT Manual](#)

Acid agent guide (37 pages)

[Telephone Accessories Toshiba Strata DK 280 Installation Manual](#)

Digital business telephone system (878 pages)

[Telephone Accessories Toshiba DKT3014-SDL Quick Reference Manual](#)

Dkt / ipt telephone (2 pages)

[Telephone Accessories Toshiba Perception 4000 Quick Reference Manual](#)

Attendant console (9 pages)

[Telephone Accessories Toshiba Perception 4000 Quick Reference Manual](#)

Attendant console (17 pages)

Summary of Contents for Toshiba Strata AirLink

[Page 1](#) Telecommunication Systems Division External Wireless Handset User Guide May 1999...

[Page 2](#) Telecommunication Systems Division, also reserves the right, without prior notice, to make such changes in equipment design Strata is a registered trademark of Toshiba Corporation. Strata or components as engineering or manufacturing methods may AirLink and Call Center Viewer are trademarks of Toshiba warrant.

[Page 3: Table Of Contents](#)

Powering ON and OFF14 Making and Receiving Calls.....14 Menu Operation15 Auto Answer.....16 Change Idle Message.....17 Click Volume18 Delete Last Number Dialed18 Display Contrast 19 Strata AirLink External Wireless Handset...

[Page 4](#) Using the Hookswitch (Flash)22 Adjusting Volume..... 23 Mute.....23 Locking the Dial Pad24 FCN Feature Access24 Speed Dial.....25 Appendix33 Troubleshooting.....33 Specifications.....36 Index37 Strata AirLink External Wireless Handset...

[Page 5: Introduction](#)

Introduction This guide describes the features and operation of the Strata AirLink External Wireless handset. If you are a new user, you should read this entire guide. It introduces you to all the features and enables you to start working with the wireless handset quickly.

[Page 6: Conventions](#)

Elaborates specific items or references other information. Note Important! Calls attention to important instructions or information. Advises you that hardware, software applications, or data could CAUTION! be damaged if the instructions are not followed closely. Strata AirLink External Wireless Handset...

[Page 7: Related Documents](#)

In the electronic version of this manual (Strata DK Library CD-ROM or FYI Internet download), cross-references appear in blue hypertext. Related Documents The Strata AirLink Wireless System Installation Guide can be used as a reference for more information. Introduction...

[Page 8 Related Documents](#)

----- Strata AirLink External
Wireless Handset...

[Page 9: Chapter 1 - The Grand Tour](#)

The Grand Tour Your wireless telephone brings mobility and productivity to office telephones. Greater call access cuts down on "telephone tag" delays, and its compact design makes it easy to take with you. The wireless telephone was designed and engineered to provide reliability, long life, and outstanding performance.

[Page 10: Handset](#)

Table 1 briefly describes the functions of the LCD fields and the buttons. Scroll/Lock Buttons Do not make changes to system and handset IDs without contacting Important! your System Administrator. Strata AirLink External Wireless Handset...

[Page 11](#)

Handset Table 1 LCD Fields and Button Descriptions Handset Description Idle Message Displays an idle message. Date Displays the current date. LCD Fields Time/Call Duration Displays the call duration. Displays icons that represent different battery and Icon Display Area handset conditions.

[Page 12](#) The handset is in alpha mode—you can use the dial pad to enter letters in the display. The handset is locked onto a base station. The number of bars indicate signal strength. You can make and receive calls only when the lock icon is Strata AirLink External Wireless Handset...

[Page 13: Charger Base](#)

----- Charger Base Charger
Base The handset comes with a charger base (shown at the right). The rear slot of the charger is for the spare battery and automatically starts its discharge function when it detects that discharging is necessary. Battery LED The front slot functions as a cradle for the handset and a charger for the handset...

[Page 14 Charger Base](#)

----- Strata AirLink
External Wireless Handset...

[Page 15: Chapter 2 - Installation](#)

Installation This chapter describes installation procedures, including charging the batteries for your wireless telephone. Your wireless telephone system must be programmed before the handset Important! operates. Please see your System Administrator for more information. Step 1: Select Location 1. Select a location for your handset and charger base. Avoid excessive heat or humidity.

[Page 16](#) "trickle charge" until you remove the handset or battery. Do not use the handset

before its battery has completed the rapid Important! charge cycle (steady red), even if the battery icon reports full strength. The handset has reduced talk/standby time under these conditions. Strata AirLink External Wireless Handset...

[Page 17: Lcd Low-Battery Indicator](#)

----- Charge the Batteries LCD
Low-battery Indicator When the handset battery is low, the message shown at the right displays. The handset beeps every 30 seconds in standby or every minute in conversation before shutting off. Table 4 lists low-battery symptoms. 2965 Table 4 Low-battery Symptoms...

[Page 18: Removing And Re-Installing The Handset Battery](#)

To re-install the battery 1. Fit the battery notches into the Handset without Battery base of the handset (shown at right). 2. Snap the upper part of the Handset Battery battery into the handset. 3020 Notches Strata AirLink External Wireless Handset...

[Page 19](#)

----- Verify the
System/Handset IDs Step 3: Verify the System/Handset IDs Your System Administrator can program one or more system and handset IDs into your handset to enable you to use your handset in one or more telephone systems. If you need to use your wireless telephone in a system that you were not originally programmed to use, you can ask your System Administrator to program the appropriate IDs into your telephone.

[Page 20](#) Verify the System/Handset IDs

----- Strata AirLink External Wireless
Handset...

[Page 21: Chapter 3 - Features](#)

Features This chapter describes all of the available wireless telephone features that include: Powering ON and OFF Making and receiving calls Menu operation Adjusting the volume Muting voice and ring Locking the dial pad FCN feature access See your System Administrator to find out which system features and access Note codes apply to your telephone and the handset software version.

[Page 22: Powering On And Off](#)

Your call terminates. To redial the last number you called &\$/ 1. Press Wait for the last number dialed to appear in the display. &\$/ 2. Press The last number dials. again. 3. Press Your call terminates. Strata AirLink External Wireless Handset...

[Page 23: Menu Operation](#)

----- Menu Operation To
receive a call &\$/ 1. Press The call connects. If you are in Auto Answer mode, you automatically connect with an incoming call without having &\$/ to press 2. If you want to The call mutes. mute the ringing of an incoming call,...

[Page 24: Auto Answer](#)

FCN + 3 Ringer Volume Sets the ringer volume. FCN + 6 Time Format Sets the time format. FCN + 10 System Configuration For Toshiba use only. Auto Answer)&1 1. Press)&1 ...or)&1 2. Press Strata AirLink External Wireless Handset...

[Page 25: Change Idle Message](#)

----- Menu Operation)&1 3.
Press again. 3499 You can toggle ON and OFF once you perform Note Step 2. 4. Press Clears the display and saves the value selected last. Change Idle Message The handset displays a message when it is idle, which you can change or delete. The message can have up to 18 characters.

[Page 26: Click Volume](#)

Clears the display and saves the last value selected. Delete Last Number Dialed The handset stores the last number that you dialed and displays it when you press &\$/ To delete the last number dialed)&1 1. Press)&1 ...or Strata AirLink External Wireless Handset...

[Page 27: Display Contrast](#)

----- Menu Operation)&1 2.
Press again.)&1 3. Press once If you confirm, the LDN is deleted. more to confirm ...or cancel. 4.
Press Display Contrast)&1 1. Press)&1 ...or)&1 2. Press until There are seven types of contrast
available. the contrast that you want displays.

[Page 28: Display Test Option](#)

When the test is ON, all icons display and the alphanumeric area fills with boxes. 3. Press Ringer
Type)&1 1. Press)&1 ...or)&1 2. Press You hear the chosen (1~8) ringer type. 3. Press Strata
AirLink External Wireless Handset...

[Page 29: Ringer Volume](#)

----- Menu Operation Ringer
Volume)&1 1. Press)&1 ...or 3163)&1 2. Press You hear levels of volume or this displays: Your
choices are VOL1~3 and silent. Note 3. Press Time Format)&1 1. Press)&1 ...or)&1 2. Press
Your format displays, or displays.

[Page 30: Using The Hookswitch \(Flash\)](#)

BBBBB 2. Press The access code depends upon the Centrex or Note PBX that you have. Check
with your System Administrator. 3. Enter a Centrex or PBX feature access code or extension
number. Strata AirLink External Wireless Handset...

[Page 31: Adjusting Volume](#)

----- Adjusting Volume
Adjusting Volume You have 13 volume settings in your handset to make adjustments to the
calling party's voice level. To raise the volume Press until The selected volume setting briefly
displays as VL01~12. you reach the level you want. To lower the volume Press until...

[Page 32: Locking The Dial Pad](#)

)&1 party on hold before you press Use of these buttons requires system programming and can
vary depending on Note your office telephone system. Your System Administrator can provide
information specific to your telephone system. Strata AirLink External Wireless Handset...

[Page 33: Speed Dial](#)

----- Speed Dial Speed
Dial Your handset stores 70 speed dial numbers, 10 of which can be dialed by pressing one
button. You can also assign memory locations or names. Before you store any numbers or
names, you need to know how many locations are available. To find the available memory
locations É...

[Page 34](#) To search for the name you want É 1. Press You scroll through the memory lcoations
to locate the É name. 5&/ ...or The handset searches for a match for you. &\$// 2. Press Your call
connects. Strata AirLink External Wireless Handset...

[Page 35](#)

----- Speed
Dial To program a pause 1. Press and hold A " " displays. É 2. Enter A one-second pause is
programmed. and . To enter a "wait" &\$// 1. Press You can continue dialing. 2. Press and hold A
"..."

[Page 36](#) Power OFF the handset before removing the battery or all Speed Dial numbers will
be lost. Table 6 Entering Special Characters and Names Press Result □ once □ twice - □ once □
twice □ three times Strata AirLink External Wireless Handset...

[Page 37](#)

----- Speed
Dial Entering Special Characters and Names (continued) Table 6 Press Result □ four times □ four
times □ five times □ five times É É space 0 (zero) É Wait or press to advance to the next letter
position before entering Important! another character.

[Page 38](#) You are prompted to confirm the deletion. &/5 3. Press The number/name is deleted.
again ...or cancel. To delete all numbers/names)&1 1. Press until the message at right displays

...or (in idle mode),)&1 Strata AirLink External Wireless Handset...

[Page 39](#) ----- Speed Dial)&1 2. Press)&1 3. Press All Speed Dial numbers/names are deleted, and this again displays: ...or cancel. 4. Press again to exit. Features...

[Page 40](#) Speed Dial ----- Strata AirLink External Wireless Handset...

[Page 41: Appendix](#)

Appendix This appendix contains additional information about your wireless handset. It is divided into: Troubleshooting Specifications Troubleshooting If your wireless handset is not performing to your expectations, try the suggestions in Table 7. If you are still unable to resolve the problem, contact your telephone System Administrator.

[Page 42](#) ON. NO SERVICE! message. &\$// You can get this message if you pressed a handset that is not locked, is out of range, or all eight channels are busy. Reset handset to factory defaults. Strata AirLink External Wireless Handset...

[Page 43](#) ----- Troubleshooting Troubleshooting Suggestions (continued) Table 7 Problem Suggestion Check to see if one or more base station channels are in a maintenance busy state; or, your handset SYSTEM BUSY message. may not be locked well enough to complete the request for service.

[Page 44: Specifications](#)

Maximum output peak 15 dbm \pm 1dbm Rechargeable Nickel Metal Hydride Capacity: Battery Volts 3.6 Talk Mode 4 hours (typical) Standby Mode 40 hours (typical) Width 2.3 inches Depth 1.0 inches Size Height 6.0 inches Weight Approximately 7 oz. Strata AirLink External Wireless Handset...

[Page 45: Index](#)

Index buttons, charger base, accessing features with FCN button, charger LEDs, adjusting volume, icons, appendix, hookswitch operation, specifications, troubleshooting, auto answer, icons, installation, battery life buttons, low battery, charge the handset and batteries, select location, changing the idle message, delete the last number dialed, low battery indicator, display contrast, locking the dial pad,...

[Page 46](#) Strata AirLink External Wireless Handset...

[Page 47](#) stored number or name, deleting, storing a speed dial name, testing the display feature, time format feature, troubleshooting, suggestions, unlock the dial pad, voice mute, volume click, ringer, wait, Index...