



Asus PL-N12 Quick Start Manual

300mbps av500 wi-fi powerline extender

1
2

--


•

Bookmarks

--

[Download this manual](#)

Quick Links

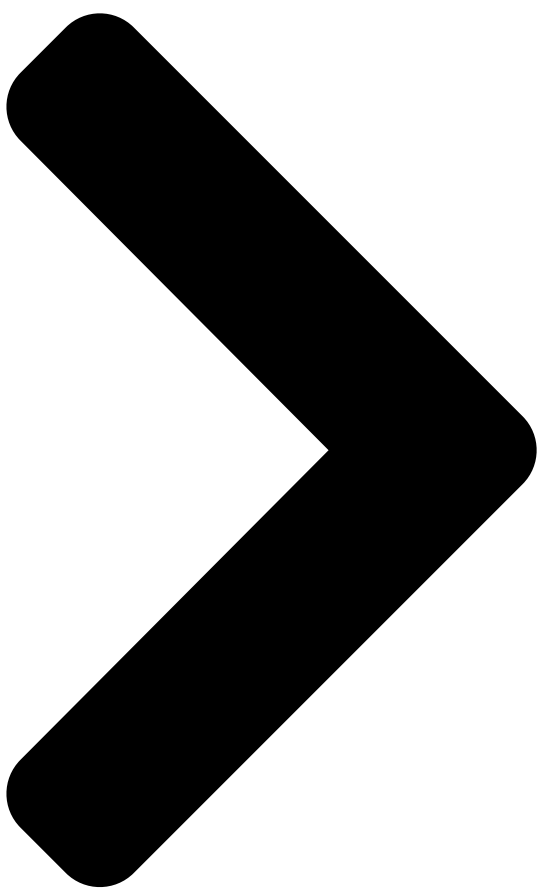

PL-N12 Kit

300Mbps AV500 Wi-Fi PowerLine Extender

Quick Start Guide

Applicable to PL-N12 and its multiple-pack kits.
This QSG uses PL-E41 powerline adapter to work with PL-N12 powerline extender.
PL-N12 Kit includes:

- PL-N12 Wireless-N300 Wi-Fi PowerLine
- PL-E41 Homeplug AV 500Mbps PowerLine Adapter

Plug-n-Play

Setting up your wireless network

NOTE:
Use the same steps to set up more
Wi-Fi powerline devices.

PL-E41

Wi-Fi Clone (optional)

Use your router's wireless network name and password to
PL-N12 settings.

1. Place your PL-N12 next
- 3.

Press the Clone
to your router, and turn
button on your
both devices on.

2. Press the WPS button on
your router.
- 4.

NOTE:
If Wi-Fi Clone succeeds, move your PL-N12 to your preferred
location. If it fails, follow the steps in PL-N12 Wireless Settings.

NOTE:
power LEDs turn on.
PL-N12
your


Your extender blinks
slowly for a few seconds
Model No. PL-N12
Your PL-N12 and your router
now have the same wireless
network name and password.
Wait until the powerline and

Have fun!

To connect devices to your PL-N12 Wi-Fi powerline,
refer to the Wi-Fi information sticker for the default
network name (SSID) and password.

To customize your PL-N12 network name (SSID)
and password, refer to the section PL-N12 Wireless
Settings.

Customized Wireless Network Name
Customized Wireless Password

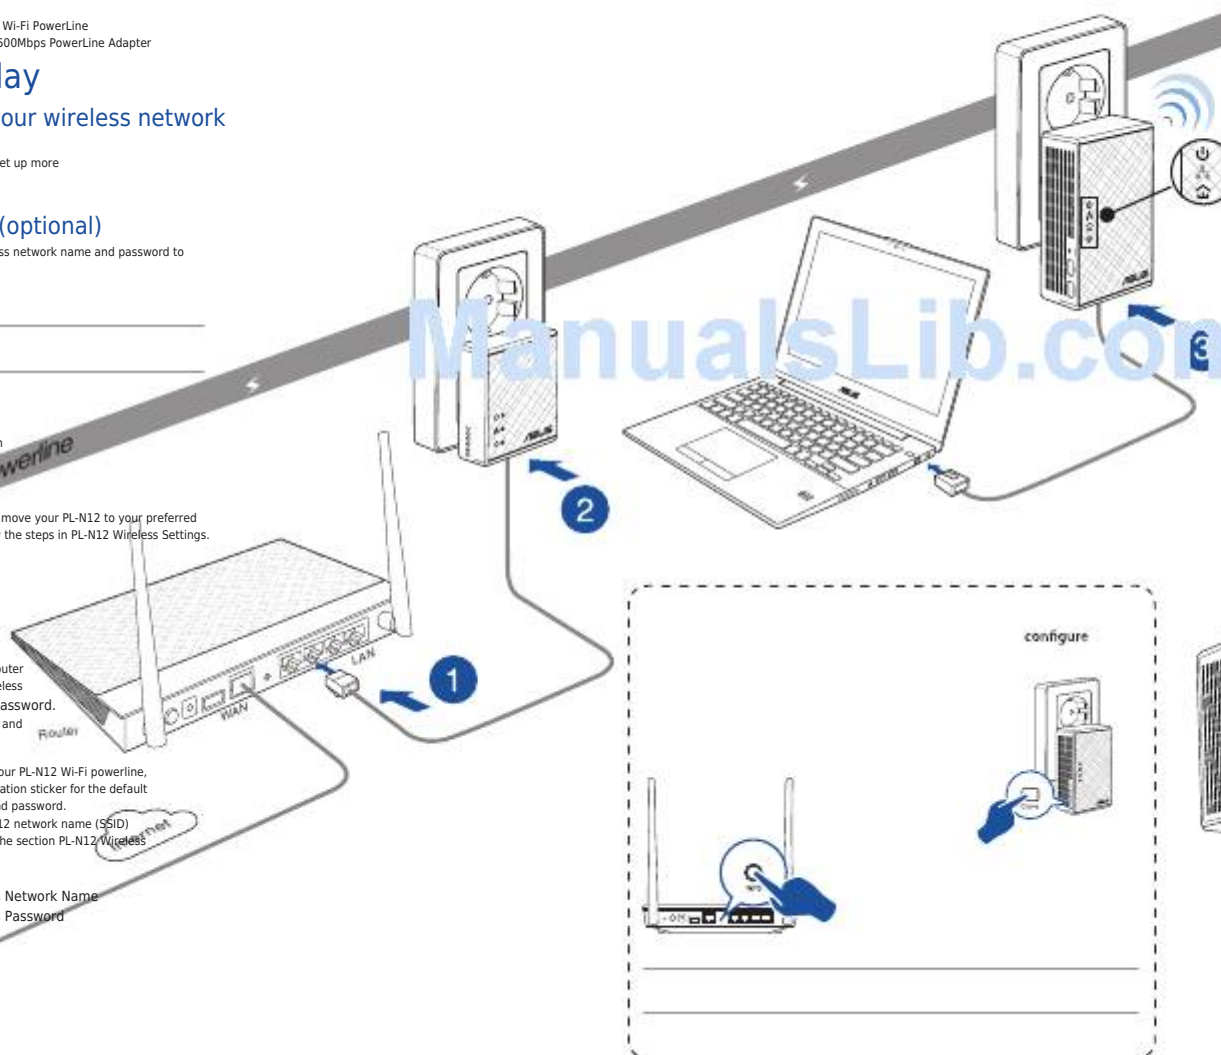

[Next Page](#)

1
2

Related Manuals for Asus PL-N12

[Extender Asus PL-N12 Kit Quick Start Manual](#)

Pl-n12 wireless-n300 wi-fi powerline and pl-e41 homeplug av 500mbps powerline

adapter (194 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

(155 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

Dual band wireless-n600 wall-plug (39 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

Dual band wireless-n600 wall-plug range extender (119 pages)

[Extender Asus RP-AX58 Quick Start Manual](#)

Ax3000 dual-band wifi range extender (2 pages)

[Extender Asus RP-N12 Quick Start Manual](#)

Wireless-n300 range extender (2 pages)

[Extender Asus RP-AC56 Quick Start Manual](#)

Wireless-ac1200 (2 pages)

[Extender Asus RP-AC52 Quick Start Manual](#)

Dual band wireless-ac750 range extender (75 pages)

[Extender Asus RP-AC56 Quick Start Manual](#)

Wireless-ac1200 range extender (9 pages)

[Extender Asus RP-N12 Quick Start Manual](#)

Wireless-n300 range extender (37 pages)

[Extender Asus WiCast EW2000 User Manual](#)

Wireless hdmi kit (24 pages)

[Extender Asus RP-AC68U Quick Installation Manual](#)

Dual band wireless ranger extender (4 pages)

[Extender Asus RP-AC52 Quick Start Manual](#)

Dual range wireless-ac750 range extender (2 pages)

[Extender ASUS EA-N66 Quick User Manual](#)

3-in-1 dual-band wireless-n900 range extender/ap/wi-fi bridge (36 pages)

[Extender Asus EA-N66 Quick Start Manual](#)

(179 pages)

Summary of Contents for Asus PL-N12

[Page 1: Quick Start Guide](#)

PL-N12 Kit 300Mbps AV500 Wi-Fi PowerLine Extender Quick Start Guide Applicable to PL-N12 and its multiple-pack kits. This QSG uses PL-E41 powerline adapter to work with PL-N12 powerline extender. PL-N12 Kit includes: • PL-N12 Wireless-N300 Wi-Fi PowerLine NOTE: Wait until the powerline and •...

[Page 2](#) Set up your PL-N12 via wired or wireless connection. For details, refer to the section PL-N12 Extender How do I reset my PL-N12? PL-E41 Adapter Plug-n-Play on the previous page. With your PL-N12 switched on, use a pin to press and hold the Reset button until the Wi-Fi LED starts blinking. When the power LED turns green and the Wi-Fi LED is on, the reset process is completed. Power LED Ethernet LED Powerline LED My devices cannot connect to the Internet.