

Connecting To Wired Networks; Configuring A Dynamic Ip/Pppoe Network Connection - Asus E502M E- Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114


-

[Table of Contents](#)

•

Bookmarks

--

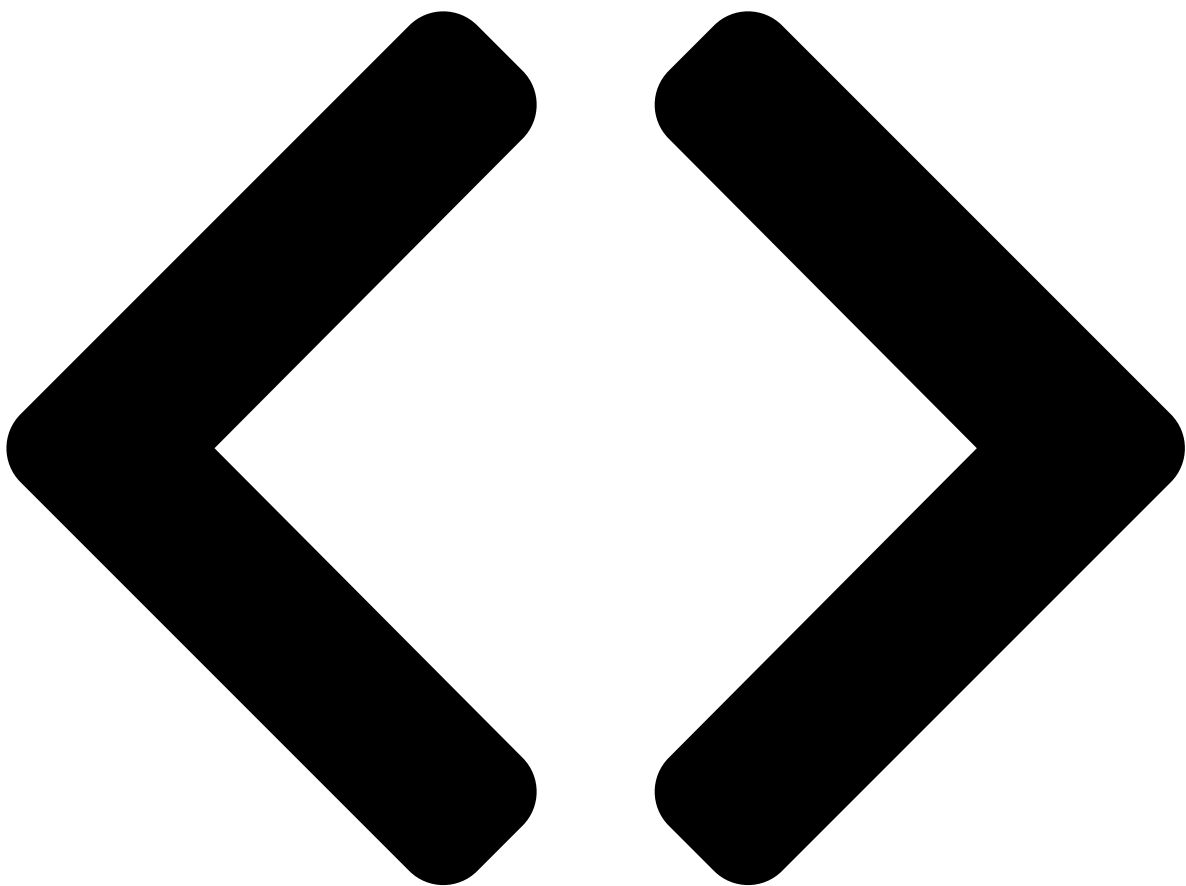

Connecting to wired networks

You can also connect to wired networks, such as local area networks and broadband Internet connection, using your Notebook PC's LAN port.

NOTE: Contact your Internet Service Provider (ISP) for details or your network administrator for assistance in setting up your Internet

connection.

To configure your settings, refer to the following procedures.
IMPORTANT! Ensure that a network cable is connected between your Notebook PC's LAN port and a local area network before performing the following actions.

Configuring a dynamic IP/PPPoE network connection

1. _____
2. _____
3. _____
4. _____
5. _____
6. _____

NOTE: Proceed to the next steps if you are using PPPoE connection.

54

Launch Settings.

Select Network & Internet.

Select Ethernet > Network and Sharing Center.

Select your LAN then select Properties.

Select Internet Protocol Version 4(TCP/IPv4) then select Properties.

Select Obtain an IP address automatically then select OK.

Notebook PC E-Manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
51
52
53
54
55
56
57
58

Quick Links:

[Table of Contents](#)

[Getting to Know Your Notebook Pc](#)

[Chapter 5: Upgrading Your Notebook Pc](#)

[Installing the Hard Disk Drive](#)

[Hardware Faqs](#)

Related Manuals for Asus E502M

[Laptop Asus E5165 User Manual](#)

Asus laptop user manual (108 pages)

[Laptop Asus ASUSPRO ESSENTIAL PU500CA User Manual](#)

(100 pages)

[Laptop Asus ASUSPRO ESSENTIAL P55VA User Manual](#)

(108 pages)

[Laptop Asus A550CA E-Manual](#)

User's manual for english edition (128 pages)

[Laptop Asus K42JY User Manual](#)

Notebook pc (110 pages)

[Laptop Asus NX90JN User Manual](#)

Asus nx90jn: user guide (108 pages)

[Laptop ASUS PU550C E-Manual](#)

Notebook pc (140 pages)

[Laptop Asus N73JF User Manual](#)

Notebook pc (112 pages)

[Laptop ASUS E5946 User Manual](#)

Notebook pc with internal modem (118 pages)

[Laptop Asus X552W E-Manual](#)

(118 pages)

[Laptop Asus G73JH User Manual](#)

Notebook pc (30 pages)

[Laptop Asus PU500C User Manual](#)

(102 pages)

[Laptop Asus E502MA E-Manual](#)

Notebook pc (120 pages)

[Laptop Asus E5462 User Manual](#)

(114 pages)

[Laptop Asus E510MA Series Disassembly Procedure](#)

(47 pages)

[Laptop Asus E410KA Repair Manual](#)

(29 pages)

Related Content for Asus E502M

[PRO P3540FA Connecting To Wired Networks](#)

Asus PRO P3540FA

[ROG Strix G531GV AL172 Connecting To Wired Networks](#)

Asus ROG Strix G531GV AL172

[FX504GM EN102T Connecting To Wired Networks](#)

Asus FX504GM EN102T

[ExpertBook B9 Connecting To Wired Networks](#)

Asus ExpertBook B9

[X540BA-GQ212 Connecting To Wired Networks](#)

Asus X540BA-GQ212

[GL552VW-CN108T Connecting To Wired Networks](#)

Asus GL552VW-CN108T

[P2451FA Connecting To Wired Networks](#)

Asus P2451FA

[RX571GT Connecting To Wired Networks](#)

Asus RX571GT

This manual is also suitable for:

E502sL502mL502sR517sR517mX502s ... [Show all](#)