



Toshiba TY-AS100TW Operation Manual

Dvd

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

21

22

23

24

25

26

27

28

29

30


31

32

33

Table Of Contents

 34



•

[Table of Contents](#)

•


Bookmarks

Quick Links

- [1 Operation Manual](#)
- [2 Connecting an External Device](#)
- [3 Setting the Clock](#)
- [4 Initial Setting](#)
- [5 Sound Mode](#)
- [6 Basic Operations](#)

7 Program Play

[Download this manual](#)

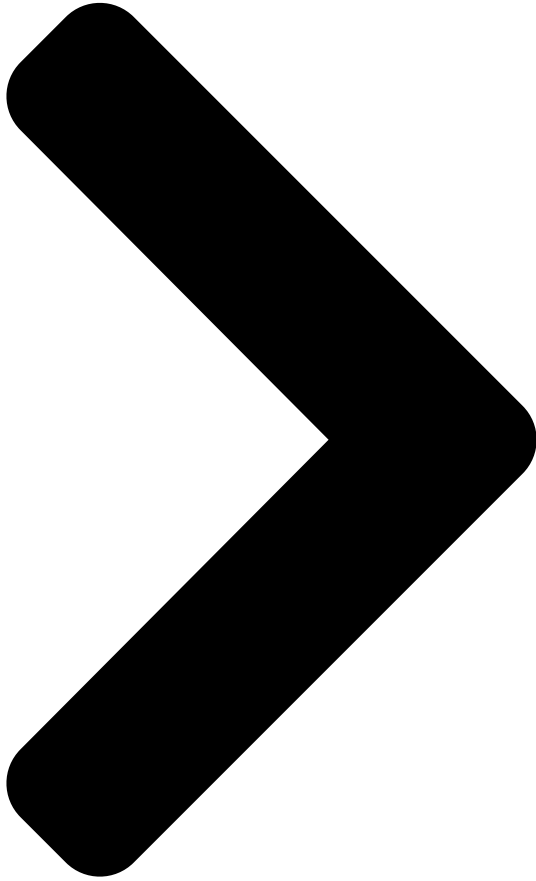

TO: MKG

JOB NO.: /

PART NAME

IB

REF. NO.: TO: MKG

FROM: Aiway

DATE

MateStar

MATESTAR DIG

COMMENT:

JOB NO.: /

BRAND NAME: TOS

* 148 x 210 mm

* PART NAME: IB

PART NO.:601-S10000

* 70g

REF. NO.:

CLIENT MODEL : TY

*

* COMMENT: * 尺寸: 148 x 210 mm

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba TY-AS100TW

[Stereo System Toshiba TY-SP3 Operation Manual](#)

2.1ch stereo sound system portable bluetooth wireless speaker and speaker phone (2 pages)

[Stereo System Toshiba SL-3329 Owner's Manual](#)

Stereo sound system (39 pages)

[Stereo System Toshiba TY-ASW8000 Operation Manual](#)

(2 pages)

[Stereo System Toshiba SX-150C Service Data](#)

Stereo radio-phonograph (22 pages)

[Stereo System Toshiba ASC400-T Operation Manual](#)

Wireless sound system (4 pages)

Summary of Contents for Toshiba TY-AS100TW

[Page 1](#) 28/08/2012 JOB NO.: / BRAND NAME: TOSHIBA PART PART NAME: NO.: 601-S10000-020 REF. NO.: CLIENT MODEL : TY-AS100TW COMMENT: * 148 x 210 mm * 70g * TY-AS100TW Toshiba DVD MICRO COMPONENT SYSTEM Operation Manual Thank you for purchasing the DVD MICRO COMPONENT SYSTEM.

[Page 2: Operation Manual](#)

TY-AS100TW Toshiba DVD MICRO COMPONENT SYSTEM Operation Manual Thank you for purchasing the DVD MICRO COMPONENT SYSTEM. 5006900 To use this product safely, read and understand this operation manual thoroughly before using it. After reading this manual, keep it in a safe place so that it can be used when necessary.

[Page 3](#) Operation Manual3 17 Dolby and the double-D symbol are trademarks of Dolby Laboratories. Dolby D Manufactured under license from Dolby Laboratories. ® DivX , DivX Certified and associated logos are trademarks of DivX, LLC and are used under license.

[Page 4: Safety Precautions](#)

Safety precautions The information you need to prevent danger to the user and other people as well as property damage is described below. "Description of signs" shows different categories of the degree of danger or damage that may occur due to wrong handling. "Description of symbols"...

[Page 5: Installation](#)

Toshiba shall not be responsible for any damage caused by an earthquake, thunderstorm, flood damage, fire for which Toshiba is not responsible, acts of a third party, other accidents, or damages caused by the user's willful acts or negligence, misuse, or use in abnormal conditions.

[Page 6: Part Names](#)

Part names [Front] DISC cover DISC/USB STOP button Display Unit Push to open or close the DISC cover DISC/USB PLAY/PAUSE button USB terminal FM/LINE IN button STANDBY-ON button REMOTE SENSOR TAPE button TIMER button PROGRAM button CLOCK/SLEEP button TUNING button LINE IN terminal PRESET/SKIP/SEARCH REW button PRESET/SKIP/SEACH FW button...

[Page 7](#) [Remote Control] POWER FM/LINE IN TAPE LINE IN DISC/USB TIMER CLOCK/SLEEP REPEAT/RANDOM SET UP MENU DISPLAY CURSOR B OK (ENTER) CURSOR C CURSOR c CURSOR b PLAY/PAUSE c/W VOLUME + - STOP v MUTE AUDIO ZOOM TITLE PROGRAM/ANGLE GO TO

[Display Unit] Group playing Random playing...

[Page 8: Playable Discs/Files](#)

ABOUT DISC/FILE/CASSETTE TAPE Playable discs/files Discs with one of the marks below on the surface. For Disc playback: Files in Audio CD format, MP3, WMA and JPEG files on a finalized CD-R or CD-RW. MP3, WMA and JPEG files on a finalized DVD-R/-RW, +R or +RW can also be played.

[Page 9: License And Trademark](#)

When playing a file of a large transfer rate, sounds may be dropped during playback. Some USB mass storage class devices may not be recognized or may not work properly. TOSHIBA bears no responsibility for any loss of data in the USB mass storage class device while using this unit. On cassette tapes Type-I tape is recommended for playback on this unit.

[Page 10: To Connect The Speaker Cords](#)

CONNECTION Do not connect the AC cord until all other connections have been made. NOTE: Make sure the antenna conductors do not touch any other terminals, connecting cords or the power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. Otherwise, it could cause poor reception.

[Page 11: Setting The Color System](#)

Connecting a TV Do not connect the power cord until a TV connections have been made. Connect your TV with the video cord to the Video output terminal. Audio cords (Not supplied) the speakers of the device connected via the audio cord. Input terminal of Yellow another audio device...

[Page 12: Initial Setting](#)

3. Press TIMER button. INITIAL SETTING The "Hour" in flashing Setting the clock 1. You can set the clock only when the System is turned off (on standby.) Press and hold CLOCK/SLEEP button.
4. Press the PRESET Z or z button to adjust the hour and press the TIMER button.

[Page 13: Basic Operations](#)

11. Press POWER 1 button to turn off the unit into VOLUME ADJUSTMENT standby. You can adjust the Volume level from level 0 ("VOL MIN.") to level 31 ("VOL MAX.") 12. When the unit has turned on, press the TIMER button, Remote Control Main Unit the timer indicator on the display is off, and the daily...

[Page 14: Playback Operation](#)

4. To program another track number, repeat steps 2 and 3 Remote Control Main unit steps. You can program up to maximum 16 tracks you like. To fast-reverse a track Press and hold Press and hold 5. Press PLAY/PAUSE button to finish the program setting and start playback.

[Page 15: Searching For Stations](#)

FM radio TAPE You can play back type I tapes. This System cannot receive AM broadcast. Playback operations (on the main unit) 1. Select "TAPE" as the source. Searching for stations 1. Press FM/LINE IN button to select RADIO. button or cursor C c button on 2.

[Page 16: Before Recording](#)

Recording an FM broadcast Recording from an external device You can use type I tapes for recording. To connect an external device, see "LINE IN". Before recording Before recording Insert a recordable cassette. 1. Tune into the FM station you want to record. Connect a device and insert a recordable cassette.

[Page 17: Specifications](#)

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. TOSHIBA LIFESTYLE ELECTRONICS TRADING CO.,LTD. 1-1-8, Sotokanda, Chiyoda-ku Tokyo 101-0021, Japan 120820c1_TY-AS100TW_En.indd 16...

[Page 18](#) 環境にやさしい製品とサービスを提供するために、製品の回収とリサイクルを推進しています。ご使用の製品が廃棄される際には、必ず回収システムをご利用ください。TOSHIBA LIFESTYLE ELECTRONICS TRADING CO.,LTD. 1-1-8, Sotokanda, Chiyoda-ku Tokyo 101-0021, Japan 120820c1_TY-AS100TW_En.indd 16...

Page 27 11. [POWER 1] [VOL MIN.] [31] [VOL MAX.] 12. [TIMER] [MP3] [CLOCK/SLEEP] 1. [SLEEP OPEN/CLOSE] 2. [USB] [USB]...

Page 28 4. [PLAY/PAUSE] [DISC PROG.] [MP3] [PROG.] [6] [v] [REPEAT GROUP] [REPEAT 1] [REPEAT LINE IN] [MP3] [RANDOM]...

Page 29 FM [AM] 1. [FM/LINE IN] [RADIO] [C] 2. [TUNING] 3. [FM] [ST]...

Page 30 [FM] [LINE IN] [LINE IN] [LINE IN] [REC] [USB] [REC] [CD/USB]...

Page 31 4.1 kg (1.7 kg) 2.4 kg FM x 1 x 1 x 1 CR2025 x 1 TOSHIBA LIFESTYLE ELECTRONICS TRADING CO.,LTD. 1-1-8 101-0021 120820c2_TY-AS100TW_Ct.indd 30 12.8.28 0:18:48 PM...

Page 32 MEMO 120821_TY_AS100TW.indb 5 12.8.21 4:56:04 PM...

Page 33 TOSHIBA LIFESTYLE ELECTRONICS TRADING CO.,LTD. 5006900 120821_TY_AS100TW.indb 2 12.8.21 4:56:04 PM...