

Connecting Microphone And Speakers - Asus D820MT User Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Connecting microphone and speakers

This desktop PC comes with microphone ports and speaker ports on both the front and rear panels. The audio I/O ports located on the rear panel allow you to connect 2-channel, 4-channel, 6-channel, and 8-channel stereo speakers.

Connecting Headphone and Mic

D820MT(BM2CE) / D620MT(BM2CF)

D820SF(BP1CE/SD790) / D620SF(BP1CF/SD580)

ASUS Desktop PC

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
30
31
32
33
34
35
36
37

Quick Links:

[Asus Desktop Pc](#)

[Configuring the Hdd Security Setting Using...](#)

Related Manuals for Asus D820MT

[Desktop Asus D820MT Installation Manual](#)

(2 pages)

[Desktop Asus D820MT Installation Manual](#)

(2 pages)

[Desktop Asus D830 Series Installation Manual](#)

(2 pages)

[Desktop Asus D830MT User Manual](#)

(76 pages)

[Desktop Asus D840MA User Manual](#)

(74 pages)

[Desktop Asus D810MT User Manual](#)

(80 pages)

[Desktop Asus D800SDR User Manual](#)

(62 pages)

[Desktop Asus ExpertCenter D800SDR Service Manual](#)

(29 pages)

[Desktop Asus D800MDR User Manual](#)

(62 pages)

[Desktop Asus D510MT User Manual](#)

(92 pages)

[Desktop Asus BM3CD User Manual](#)

(98 pages)

[Desktop Asus D500SA User Manual](#)

(70 pages)

[Desktop Asus D700TCES User Manual](#)

(61 pages)

[Desktop Asus D700MC User Manual](#)

(59 pages)

[Desktop Asus D700MA User Manual](#)

(68 pages)

[Desktop Asus D700ME User Manual](#)

(72 pages)

Related Content for Asus D820MT

[S501MD Connecting Microphone And Speakers](#)

Asus S501MD

[ROG G22CH Connecting Microphone And Speakers](#)

Asus ROG G22CH

[S500TE Connecting Microphone And Speakers](#)

Asus S500TE

[D800SDR Connecting Microphone And Speakers](#)

Asus D800SDR

[ROG Strix G10 Connecting Microphone And Speakers](#)

Asus ROG Strix G10

[SD560 Connecting Microphone And Speakers](#)

Asus SD560

[D500TA Connecting Microphone And Speakers](#)

Asus D500TA

[D700SE Connecting Microphone And Speakers](#)

Asus D700SE

This manual is also suitable for:

[D620mtD620sfD820sfMd790Md580](#)