

Configuring The Screen Resolution Settings; Configuring The Internet Connection Settings - Asus D820MT User Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Configuring the screen resolution settings

Windows

7

To configure the screen resolution settings on Windows, follow the following to open the Screen Resolution setting screen:

1. Click on the Settings app.

2. Click on the Start button anywhere on your Windows desktop. When the pop-up menu appears, click on the Settings icon > Display > Change display settings.



Select the display mode from the Multiple displays: drop-down list.

Duplicate these displays: Select this option to use the additional monitor as a duplicate of your main display.

Extend these displays: Select this option to use the additional monitor as an extension display. This increases your desktop space.

Desktop only on 1 / 2: Select this option to show desktop only on monitor 1 or

remove this display: Select this options to remove the selected display.

Click Cancel or OK. Click Keep Changes on the confirmation message.



Configuring the Internet connection settings

Network connection

S

Configuring a dynamic IP/PPPoE network connection

Configure a dynamic IP/PPPoE network

connection:

Go to Start > Control Panel > Network

1. Network and Sharing Center.

2. From the Network and Sharing Center screen, click Change Adapter settings.

3. Right-click on your LAN and select Properties.

82 > Control Panel > Appearance and Personalization > Display > Change

7: Chapter 2: Using Windows 7 functions

[Previous Page](#)
[Next Page](#)

1
...
79
80
81
82
83
84
85
86

Quick Links:

[Asus Desktop Pc](#)

[Configuring the Hdd Security Setting Using...](#)

Related Manuals for Asus D820MT

[Desktop Asus D820MT Installation Manual](#)

(2 pages)

[Desktop Asus D820MT Installation Manual](#)

(2 pages)

[Desktop Asus D830 Series Installation Manual](#)

(2 pages)

[Desktop Asus D830MT User Manual](#)

(76 pages)

[Desktop Asus D840MA User Manual](#)

(74 pages)

[Desktop Asus D810MT User Manual](#)

(80 pages)

[Desktop Asus ExpertCenter D800SDR Service Manual](#)

(29 pages)

[Desktop Asus D800SDR User Manual](#)

(62 pages)

[Desktop Asus D800MDR User Manual](#)

(62 pages)

[Desktop Asus D510MT User Manual](#)

(92 pages)

[Desktop Asus BM3CD User Manual](#)

(98 pages)

[Desktop Asus D500SA User Manual](#)

(70 pages)

[Desktop Asus D700TCES User Manual](#)

(61 pages)

[Desktop Asus D700MC User Manual](#)

(59 pages)

[Desktop Asus D700MA User Manual](#)

(68 pages)

[Desktop Asus D700ME User Manual](#)

(72 pages)

Related Content for Asus D820MT

[D415MT Configuring The Screen Resolution Settings](#)

Asus D415MT

[BT1AG Configuring The Screen Resolution Settings](#)

Asus BT1AG

[BT1AE Configuring The Screen Resolution Settings](#)

Asus BT1AE

[M32AD Configuring The Screen Resolution Settings](#)

ASUS M32AD

[M32BFBF Configuring The Screen Resolution Settings](#)

ASUS M32BFBF

[BM6AF Configuring The Screen Resolution Settings](#)

ASUS BM6AF

[P30AD Configuring The Screen Resolution Settings](#)

Asus P30AD

[BM6AE Configuring The Screen Resolution Settings](#)

Asus BM6AE

This manual is also suitable for:

[D620mtD620sfD820sfMd790Md580](#)