

 


Sanyo FWBP505F K Owner's Manual

Blu-ray disc / dvd player

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Front Panel](#)

[2 Remote Control](#)

[3 Playing Back Contents from a Usb Memory Stick](#)

[4 Troubleshooting](#)

[Download this manual](#)

See also: [Setup Manual](#)



Blu-ray Disc™ / DVD Player

Owner's Manual

Manual del Propietario

ES

FWBP505F

FWBP505F

To obtain a more detailed Electronic Copy of this

SA

Manual or much further contents, go to

Para obtener una Copia Electrónica más detallada de este Manual o mucho otras

ES

contenido, visite

Need help?

¿ Necesita ayuda?

ES

Sitio Web en:

K

sanyo-av.c

sanyo-av.com

sanyo-av.com

Please Call Toll Free 1 866 212 0436 or visit our Web Site above:

Llame por favor sin costo al 1 866 212 0436 ó visite nuestro

C

C

C

C

C

O

O

O

O

O

m

m

SA

ManualsLib.com



m
m
m
m

SA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo FWBP505F K

[Blu-ray Drive Sanyo FWBP505F Setup Manual](#)

Blu-ray disc / dvd player (2 pages)

[Blu-ray Player Sanyo FWBP505F Setup Manual](#)

(2 pages)

[Blu-ray Drive Sanyo CRD-BPDV3 Owner's Manual](#)

(31 pages)

Summary of Contents for Sanyo FWBP505F K

[Page 1](#) To obtain a more detailed Electronic Copy of this Manual or much further contents, go to Para obtener una Copia Electrónica más detallada de este Manual o mucho otras contenido, visite sanyo-av.com sanyo-av.c sanyo-av.com Need help? Please Call Toll Free 1 866 212 0436 or visit our Web Site above: ¿...

[Page 2: Table Of Contents](#)

CONTENTS INTRODUCTION3 SETUPS34 Safety Instructions..... 3 HDMI CEC34 Supplied Accessories3 HDMI Video Resolution 35 Parental36 FEATURES4 Software Update..... 38 Features4 Restore Default Settings39 Product Info.....

[Page 3: Introduction](#)

• Remote Control (NC088UH) • SETUP MANUAL SANYO is a registered trademark of SANYO Electric Co., Ltd. and is used by Funai Electric Co., Ltd. and Funai Corporation, Inc. under license from SANYO Electric Co., Ltd. Any liability related to SANYO products, including design and quality, is the sole responsibility of Funai Electric Co., Ltd.

[Page 4: Features](#)

2. FEATURES 2.1. Features Blu-ray Disc™ Pop Menu You can enjoy Blu-ray Disc™ which is capable of Some BD-videos have a Pop Menu which is a storing fi ve times more data than a conventional DVD. navigation menu that can be called up and be operated on the TV screen without interrupting BD-Java playback.

[Page 5: Product Info](#)

“Product Info” screen provides information about this unit’s software version. You can also download the latest software from the SANYO website and update it yourself if it is newer than the version currently on your unit. The current version of software on your unit can be seen on the “Product Info”...

[Page 6: Functional Overview](#)

3. FUNCTIONAL OVERVIEW 3.1. Front Panel 3* 4* * The unit can also be turned on by pressing this button. 1. Disc tray (POWER-ON) button 2. Infrared sensor window 6. Power-On indicator (OPEN/CLOSE) button* • Flashes while unit is starting up. •...

[Page 7: Remote Control](#)

3.3. Remote Control (SKIP) button • During playback, press once to return to the beginning of the current Title, Chapter, Track or File. • During playback, press twice to return to the previous Title, Chapter, Track or File. • During the JPEG playback, press to return to the previous File.

[Page 8](#) C Using the Remote Control Note • The Power-On indicator on the front panel dims Remote Control Usage Guidelines: and flickers when it receives the IR signal from the • Make

sure that there are no obstacles between the remote control.

[Page 9: Guide To On-Screen Display](#)

3.4. Guide to On-Screen Display C Home Menu When you Turn On the unit, Home Menu will appear automatically. Otherwise, press [HOME]. Disc 1. "Disc": Initiates playback of inserted disc, displays a list of Tracks / Files or the Media Filter Menu 2.

[Page 10: Connections](#)

4. CONNECTIONS 4.1. Connection to a TV C HDMI Connection (Supports up to 1080i , 1080p , 1080p/24 resolution.) Your TV HDMI cable (not supplied) No analog audio connection required. (*1) 1080i: Outputs video data with a frame rate of 30 frames per second. (*2) 1080p: Outputs video data with a frame rate of 60 frames per second.

[Page 11: Connection To An Audio System](#)

4.2. Connection to an Audio System • When you change the connections, all devices should be Turned Off. • When connecting the unit to an external audio system, refer to the User Manual for Setup / Configuration help. C HDMI Audio Connection AV receiver / amplifier with an HDMI input jack HDMI IN...

[Page 12: Hdmi Audio Output](#)

4.3. HDMI Audio Output "Audio Output" "Bitstream" "LPCM" setting A "BD Audio Mode" "HD Audio Output" "Mix Audio Output" "HD Audio Output" "Mix Audio Output" setting A Media Audio Source Which audio format can be output depends on the compatibility of the connected □...

[Page 13: Before You Start](#)

5. BEFORE YOU START 5.1. Finding a Viewing Video Source Input on Your TV After you have completed all of the connections to your TV, review the steps below. 1. Press [(POWER-ON)] to Turn On the unit. 2. Turn On your TV. 3.

[Page 14](#) C How to Reset the OSD Language You can reset the OSD language if you selected the wrong language. 1. Press [HOME] to display the Home Menu. 2. Use [] to select " ", then press [OK]. • This item is "Settings" (English) / "Configuraciones" (Spanish) / "Paramètres" (French). •...

[Page 15: Information On Playback](#)

6. INFORMATION ON PLAYBACK 6.1. Information on Playback C Playable Discs and Files Playable discs Logos Blu-ray Disc™ - BD-video - BD-RE* (ver. 2.1) (Recorded in BDMV format) - BD-R* (ver. 1.1 / 1.2 / 1.3) (Recorded in BDMV format) (Unfi...

[Page 16](#) C Recommended Specifications AVCHD This unit cannot play back stand-alone AVCHD files (*.m2ts, *.mts or *.m2t) written to a DVD or copied to an SD Memory Card. The DVD or SD Memory Card containing AVCHD files must have a proper file and folder structure meeting AVCHD format specifications...

[Page 17: Unplayable Media And Files](#)

C Unplayable Media and Files The following discs will not be played back on this unit. • CD-ROM • CD-I (compact disc-interactive) • DVD-RAM • VSD (video single disc) • DVD-audio • video CD • HD DVD • SVCD • SDXC Memory Card •...

[Page 18: Guide To File List](#)

C Description for Icons] : music file icon - "Folders" refers to the group of files. - "Track" refers to the contents recorded on the audio CD. - "Files" refers to the contents on a disc which are recorded in AVCHD or JPEG file format. Note •...

[Page 19: Basic Playback](#)

7. BASIC PLAYBACK 7.1. Playing Back a Disc [DVD Video] [BD Video] [AVCHD] [CD] [JPEG] 1. Insert a disc (refer to "How to Insert a Disc" on page 18). • For Blu-ray Disc™ / DVD / audio CD or a disc containing only one type of file, playback will start automatically.

[Page 20: Playing Back Contents From A Usb Memory Stick](#)

Note for JPEG Playback • Every press of [] will turn the image by 90 degrees when an image is displayed. • During playback, press [DISC MENU] to display thumbnail screen. • Some unplayable folders or files may be listed due to the recording status. •...

[Page 21: Using The Title / Disc / Pop Menu](#)

7.3. Using the Title / Disc / Pop Menu [DVD Video] [BD Video] [AVCHD] Some BD-videos, DVD-videos or AVCHD files may contain a Title Menu which describes the contents of the disc, or a Disc Menu which guides you through the available functions on the disc. •...

[Page 22: Special Playback](#)

8. SPECIAL PLAYBACK 8.1. Fast Forward / Fast Reverse [DVD Video] [BD Video] [AVCHD] [CD] 1. During playback, press [(FORWARD)] repeatedly for Fast Forward. During playback, press [(REVERSE)] repeatedly for Fast Reverse. 2. Press [(PLAY)] (or [(PLAY/PAUSE)]) on the unit) to return to Normal playback.

[Page 23: Repeat Playback](#)

8.4. Repeat Playback Available repeat functions vary depending on the disc. 1. During playback, press [REPEAT]. 2. Use [] to select the desired repeat mode. • You can also change the repeat mode by pressing [REPEAT] repeatedly. REPEAT MODE AVAILABLE MEDIA Chapter Repeat [DVD Video]...

[Page 24: Pip \(Bonusview™\) Setting](#)

8.6. PiP (BONUSVIEW™) Setting [BD Video] Some BD-videos have the PiP function which enables you to display the Secondary Video in the Primary Video. Primary Video 1 / 8 Secondary Video 1. During playback, press [MODE] to display the Play Menu. 2.

[Page 25: Title / Chapter Search](#)

8.7. Title / Chapter Search [DVD Video] [BD Video] [AVCHD] C Using [(SKIP)] / [(SKIP)] 1. During playback, press [(SKIP)] to Skip the current Title or Chapter and move to the next. The Title or Chapter will move forward one at a time. •...

[Page 26: Time Search](#)

8. 9. Time Search [DVD Video] [BD Video] [AVCHD] [CD] 1. During playback, press [SEARCH] to display the Search Menu. 2. Press [SEARCH] or use [] to select " ", then press [OK]. e.g.) Blu-ray Disc™ Search 00:12:44 / 11:13:14 3.

[Page 27: Switching Subtitles](#)

8.11. Switching Subtitles Some video materials may have subtitles in one or more languages. For commercially available discs, the supported languages can be found on the disc case. Follow the steps below to switch the Subtitle language during playback. [BD Video] 1.

[Page 28: Switching Audio Soundtrack](#)

8.12. Switching Audio Soundtrack When playing back video material recorded with two or more soundtracks (these are often in different audio languages or audio formats), you can switch them during playback. For Blu-ray Disc™, available audio varies depending on "BD Audio Mode" setting. Refer to page 31. [BD Video] 1.

[Page 29: Switching Camera Angles](#)

8.13. Switching Camera Angles [DVD Video] [BD Video] Some BD-videos and DVD-videos contain scenes which have been shot simultaneously from various angles. You can change the Camera Angle when appears on the TV screen. 1. During playback, press [MODE] to display the Play Menu. 2.

[Page 30: Clear](#)

8.15. CLEAR+ [DVD Video] [BD Video] [AVCHD] CLEAR+ enhances the contrast of the picture and makes edges crisp. It is effective especially for DVD's. 1. During playback, press [MODE] to display the Play Menu. 2. Use [] to select "CLEAR+", then press [OK]. 3.

[Page 31: List Of Settings](#)

9. LIST OF SETTINGS In "Settings", you can customize various kinds of settings as you prefer. Refer to the following instructions to navigate through the Setup Menu. 1. Press [HOME] to access the Home Menu. 2. Use [] to select "Settings", then press [OK]. 3.

[Page 32](#) Category Menus / Options Playback Language Auto English Español Français Audio Original Bulgarian Italian Chinese Japanese Czech Korean Danish Norwegian Dutch Polish English Portuguese Finnish Romanian French Russian German Slovak Greek Spanish Hungarian Swedish Icelandic Turkish Irish Other Subtitle Bulgarian Italian Chinese Japanese...

[Page 33](#) Category Menus / Options Others Software Update Disc USB Memory Stick Product Info Initialize Reset Settings Format USB Memory Stick (Unit) Erase Saved BD-ROM Data (USB Memory Stick) Erase Saved BD-ROM Data...

[Page 34: Setups](#)

SETUPS 10.1. HDMI CEC HOME "Settings" "HDMI" "HDMI CEC" HDMI CEC allows integrated system control over HDMI and is part of the HDMI standard. This function may not work properly depending on the device connected to the unit. When "HDMI CEC" setting is set to "On" the functions listed below will be available.

[Page 35: Hdmi Video Resolution](#)

10.2. HDMI Video Resolution HOME "Settings" "HDMI" "Video Resolution" Set the resolution of the video signal being output from the HDMI OUT jack. You can select the desired "Video Resolution" among the settings listed below: "Auto", "480p". Actual Output Resolution: Source Setting in the "Video Resolution"...

[Page 36: Parental](#)

10.3. Parental Some BD-videos or DVD-videos feature parental lock levels. Playback will stop if the ratings exceed the levels you set, it will require you to enter a password before the disc will play back. This feature prevents your children from viewing inappropriate material. 1.

[Page 37](#) C DVD Rating Level HOME "Settings" "Playback" "DVD Rating Level" 1. Use [] to select "Settings" in the Home Menu, then press [OK]. 2. Use [] to select "Playback", then press [OK]. 3. Use [] to select "DVD Rating Level", then press [OK]. 4.

[Page 38: Software Update](#)

You can update the software by using a disc or USB Memory Stick. Prepare a blank disc or USB Memory Stick for software update: Access sanyo-av.com, and download the latest version software to a blank disc or USB Memory Stick using a PC by following the directions described on the website.

[Page 39: Restore Default Settings](#)

10.5. Restore Default Settings HOME "Settings" "Others" "Initialize" Menus to reset player settings, format a USB Memory Stick. 1. Use [] to select "Settings" in the Home Menu, then press [OK]. 2. Use [] to select "Others", then press [OK]. 3.

[Page 40: Troubleshooting](#)

TROUBLESHOOTING Problem No power. Check the AC power cord, if it is properly connected. Try another power outlet. Unplug the AC power cord, and wait for about 5-10 seconds. Plug it back in and attempt to power On the unit. No sound or picture.

[Page 41](#) Problem No return to start-up screen when Soft reset this unit by turning it Off for 30 seconds, then On again. disc is removed. To completely reset the unit, press and hold [(POWER-ON)] on the front panel for 10 seconds to shut down the unit or unplug the AC power cord from the AC outlet for 5-10 seconds.

[Page 42](#) Problem The software update screen Please complete the software update. appears after Turning On the unit. When the software update has failed, the software update screen will keep appearing after turning the unit on. If the software update continues failing, please try it by using a USB Memory Stick with the update software installed in its root directory.

[Page 43: Language Code List](#)

LANGUAGE CODE LIST Language Code Language Code Language Code Language Code French [FRE] 5264 Macedonian 5957 Siswat 6565 Abkhazian 4748 Frisian 5271 Malagasy 5953 Slovak [SLO] 6557 Afar 4747 Galician 5358 Malay 5965 Slovenian 6558 Afrikaans 4752 Georgian 5747 Malayalam 5958 Somali 6561 Albanian...

[Page 44: Specifications](#)

SPECIFICATIONS General Signal system NTSC Color Power requirements 120 V AC, 60 Hz Power consumption 15 W (standby: 0.5 W) Dimensions (width x height x depth) 11.1 x 1.7 x 7.9 inches (280.0 x 41.0 x 198.5 mm) Weight 2.2 lbs. (1.0 kg) Operating temperature 41°F (5°C) to 104°F (40°C) Operating humidity...

[Page 45: Maintenance](#)

Eject the disc (if possible), disconnect the USB Memory Stick (if connected to the unit), place the unit into Standby mode, unplug the AC power plug, and please contact: 1-866-212-0436 or visit : sanyo-av.com C Cleaning the Cabinet •...

[Page 46: Trademark Information](#)

TRADEMARK INFORMATION "Blu-ray Disc™", "Blu-ray" and "Blu-ray Disc™" logo are trademarks of the Blu-ray Disc Association. "x.v.Color" and "x.v.Color" logo are trademarks of Sony Corporation. "BONUSVIEW™" and "BONUSVIEW™" logo are trademarks of the Blu-ray Disc Association. is a trademark of DVD Format/Logo Licensing Corporation.

[Page 47: Glossary](#)

GLOSSARY AAC S Digital Audio Advanced Access Content System (AAC S) is the An indirect representation of sound by numbers. content protection scheme used with Blu-ray discs. During recording, the sound is measured at discrete intervals (44,100 times a second for CD audio) by an Analog Audio analog-to-digital converter, generating a stream of An electrical signal that directly represents sound.

[Page 48](#) PCM (Pulse Code Modulation) The most common system of encoding digital audio, found on CD and DAT. Excellent quality, but requires a lot of data compared to formats such as Dolby Digital and MPEG audio. For compatibility with digital audio recorders (CD, MD and DAT) and AV amplifi...

[Page 49: Español](#)

ESPAÑOL 17.1. Mando a Distancia 6. Botón (REPRODUCIR)* • Púselo para iniciar o reanudar la reproducción. 7. Botón (SALTAR) • Durante la reproducción, púselo una vez para volver al comienzo del título, capítulo, pista o archivo actual. • Durante la reproducción, pulse dos veces sobre la tecla para volver al título, capítulo, pista o archivo anterior.

[Page 50: Encontrar El Canal De Video En Su Televisor](#)

20. Botón AUDIO Nota • Púselo para seleccionar el canal de sonido • El indicador Encendido en el panel frontal se (como idiomas de sonido) de un disco. atenúa y parpadea cuando se recibe la señal IR del control remoto. 21.

[Page 51: Instalacion Inicial](#)

17.3. Instalacion Inicial Por favor, siga las instrucciones que se exponen a continuacion para completar la confi guracion inicial. 1. Utilice [] mientras se presenta la pantalla de bienvenida para seleccionar "Next" y pulse luego [OK]. 2. Aparece la pantalla de confi guracion del idioma. Utilice [] para seleccionar su idioma y pulse luego [OK].

[Page 52: Limited Warranty](#)

Contact the Customer Care Center at: Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can sanyo-av.com result in delay. 1 866 212 0436 WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:...

This manual is also suitable for:

[Fwbp505fp](#)

[Save PDF](#)