



# Sanyo MCD-ZX100F Instruction Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10

--

•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[1 General Operation](#)

[Download this manual](#)

See also: [Service Manual](#)





**MCD-ZX100F**  
**INSTRUCTION MANUAL**  
**CD Portable**  
**Radio Cassette Recorder**

**S**

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Sanyo MCD-ZX100F

### [Cassette Player Sanyo MCD-ZX100F Service Manual](#)

Cd portable radio cassette recorder (10 pages)

### [Portable Radio Sanyo MCD-ZX100F AU Service Manual](#)

Cd portable radio cassette recorder (10 pages)

### [Cassette Player Sanyo MCD-ZX200F Service Manual](#)

Cd portable radio cassette recorder (12 pages)

### [Cassette Player Sanyo MCD-ZX570M Instruction Manual](#)

Cd portable radio cassette recorder (12 pages)

### [Cassette Player Sanyo MCD-ZX680M/XE Service Manual](#)

(6 pages)

### [Cassette Player Sanyo MCD-ZX530F Service Manual](#)

Cd portable radio cassette recorder (16 pages)

### [Cassette Player Sanyo MCD-ZX700F Service Manual](#)

Cd portable radio cassette recorder (18 pages)

### [Cassette Player Sanyo MCD-Z150F Service Manual](#)

Portable cd/stereo radio cassette recorder (33 pages)

### [Cassette Player Sanyo MCD-Z8F Instruction Manual](#)

(13 pages)

### [Cassette Player Sanyo MCD-Z165F Service Manual](#)

Portable cd/stereo radio (27 pages)

### [Cassette Player Sanyo MCD-Z160F Service Manual](#)

(27 pages)

### [Cassette Player Sanyo MCD-Z260F Service Manual](#)

(27 pages)

### [Cassette Player Sanyo MCD-Z110F Service Manual](#)

(17 pages)

### [Cassette Player Sanyo MCD-Z250F Instruction Manual](#)

Cd radio cassette recorder (21 pages)

### [Cassette Player Sanyo MCD-Z46K Service Manual](#)

Remote control cd radio double cassette recorder (21 pages)

### [Cassette Player Sanyo MCD-Z90F Service Manual](#)

Cd portable am/fm stereo cassette recorder (17 pages)

## Summary of Contents for Sanyo MCD-ZX100F

[Page 1](#) MCD-ZX100F INSTRUCTION MANUAL CD Portable Radio Cassette Recorder...

[Page 2](#) PRECAUTIONS CLASS 1 LASER PRODUCT LUOKAN 1 LASERLAITE KLASSE 1 LASERAPPARAT CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM. ADVARSEL-USYNLIG LASER STRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION, UNDGÅ UDSÆTTELSE FOR STRÅLING. VARNING-OSYNLIG LASER STRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD.

[Page 3](#) CONTROLS PAUSE STOP/EJECT F.FWD PLAY FM MODE BEAT CANCEL MONO 1. Stop button (n) 15. Band select switch (BAND) 2. Skip/Search down button (f) 16. Display 3. Memory

button (MEMORY) 17. Repeat button (REPEAT) 4. Function switch (FUNCTION) 18. Skip/Search up button (e) 5.

### [Page 4: Power Supply](#)

POWER SUPPLY Caution on batteries AC POWER To prevent battery electrolyte leakage, which Connect one end of the mains lead to the AC may result in injury and damage to the unit or INPUT ~ socket and the other end to an AC other objects, observe the following precautions: outlet.

[Page 5](#) CD PLAY 6. Press the n button to end disc play. Use compact discs bearing the symbol shown When the last track has been played, the below. In addition to conventional 12 cm CDs, player stops automatically. this system can be used to play 8 cm CDs 7.

### [Page 6: Programmed Play](#)

Repeat play 3. Select a track by using the f or e Press the REPEAT button before or during play button. (or programmed play). 4. Press the MEMORY button. Each time the button is pressed, the repeat 5. Repeat steps 3 - 4 to programme addi- mode changes as follows.

### [Page 7: Listening To The Radio](#)

If this occurs, set the BEAT CANCEL switch to 1 material, permission from the copyright owner is or 2 position that reduces the level of the beat necessary. SANYO does not approve of, and noise. cannot be held responsible for, any unlawful use of this machine.

### [Page 8: Maintenance](#)

MAINTENANCE Cleaning the tape heads Cleaning the CD player lens To ensure continued high performance, use a The lens should never be touched. If dust is on cleaning tape (available from your local audio the lens, blow it off using a camera lens blower. dealer) to clean the head block of the deck after (Consult your dealer.) about every 10 hours of use.

### [Page 9: Specifications](#)

SPECIFICATIONS General CD player Output power: Channels: 1W/ch (DC max.) 2-channel stereo Speakers: Sampling frequency: 10 cm x 2 44.1 kHz Terminals: Pick-up: PHONES: 32 ohms Semiconductor laser Power source: Laser output: AC: 230 ~ 240V, 50Hz 0.6 mW (Continuous wave max.) DC: 12V, 8 "D/R20"...

[Page 10](#) SANYO Electric Co., Ltd. Printed in China (AU) 8804761100001...