

Security - Asus X552W E-Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117



•

[Table of Contents](#)

•

Bookmarks



Security

This menu allows you to set up the administrator and user password of your Notebook PC. It also allows you to control the access to your Notebook PC's hard disk drive, input/output (I/O) interface, and USB interface.

NOTE:

:

Password Description

If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup. If ONLY the user's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup, the User will have

Administrator rights.

Administrator Password Status

User Password Status

User Password

HDD Password Status :

Set Master Password

Set User Password

I/O Interface Security

System Mode state

Secure Boot state

Secure Boot Control

Key Management

2.15.1226. Copyright (C) 2012 American Megatrends, Inc.

Notebook PC E-Manual

If you install a User Password, you will be prompted to input this before entering your Notebook PC's operating system.

If you install an Administrator Password, you will be prompted to input this before entering BIOS.

Security

Exit

NOT INSTALLED

NOT INSTALLED

NOT INSTALLED

User

Enabled

[Enabled]

Set Administrator

Password. The password length must be in the

following range:

Minimum length 3

Maximum length 20

→← : Select Screen

: Select Item

↑↓

Enter: Select

+/-

: Change Opt.

F1

: General Help

F9

: Optimized Defaults

F10

: Save & Exit

ESC

: Exit

69



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
66
67
68
69
70
71
72
73

Quick Links:

[Table of Contents](#)

[Getting to Know Your Notebook Pc](#)

[Accessing Bios](#)

[Installing a Random-Access Memory Module \(on...](#)

[Replacing the Hard Disk Drive \(on...](#)

Related Manuals for Asus X552W

[Laptop Asus A550CA E-Manual](#)

User's manual for english edition (128 pages)

[Laptop Asus A550DP E-Manual](#)

User's manual for english edition (110 pages)

[Laptop Asus X75A User Manual](#)

(116 pages)

[Laptop Asus R403C User Manual](#)

User's manual for english edition (116 pages)

[Laptop Asus A450CA E-Manual](#)

User's manual for english edition (130 pages)

[Laptop Asus A552EA E-Manual](#)

X552 series 15.6"; x452 series 14.0" (128 pages)

[Laptop Asus X552 SERIES E-Manual](#)

(130 pages)

[Laptop Asus A451CA E-Manual](#)

User's manual for english edition (114 pages)

[Laptop ASUS X551 Series E-Manual](#)

15.6" 14.0" (114 pages)

[Laptop Asus X453MA Series E-Manual](#)

(112 pages)

[Laptop Asus X553M User Manual](#)

(9 pages)

[Laptop Asus X555L E-Manual](#)

(120 pages)

[Laptop Asus X551C E-Manual](#)

X551 series; x451 series (108 pages)

[Laptop Asus GL552J E-Manual](#)

(126 pages)

[Laptop Asus X550VX E-Manual](#)

(126 pages)

[Laptop Asus X555QG XO108T E-Manual](#)

(116 pages)

Related Content for Asus X552W

[Transformer Book Flip TP200SA I/O Interface Security](#)

Asus Transformer Book Flip TP200SA

[Transformer Book Flip TP300UA I/O Interface Security](#)

Asus Transformer Book Flip TP300UA

[GL552J Security](#)

Asus GL552J

[X53By Security Setting](#)

Asus X53By

[UX501J Usb Interface Security](#)

Asus UX501J

[5535 Series Security](#)

Asus 5535 Series

[F5Z Security Setting](#)

Asus F5Z

[X205T Security](#)

Asus X205T

This manual is also suitable for:

[Y582wX550wF550wR510wD552wX550j](#) ... [Show all](#)