



# Layout Contents - Asus Trooper H110 D3 Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67



•

Table of Contents

•

## Bookmarks







## 1.2.4

### Layout contents

1.	ATX power connectors (24-pin EATXPWR, 8-pin EATX12V)
2.	Intel
	LGA1151 CPU socket
®	
3.	CPU and chassis fan connectors (4-pin CPU_FAN, 4-pin CHA_FAN1-2)
4.	DDR3 DIMM slots

- 5. USB 3.0 connector (20-1 pin USB3\_34)
- 6. Intel H110 Serial ATA 6.0 Gb/s connector (SATA6G\_1~4 [black])  
®
- 7. System panel connector (20-3 pin PANEL)
- 8. Direct Connector (2 pin DRCT)
- 9. CPU Over Voltage jumper (3-pin CPU\_OV)
- 10. Clear RTC RAM (2-pin CLRRTC)
- 11. USB 2.0 connector (10-1 pin USB910)
- 12. TPM connector (14-1 pin TPM)
- 13. Serial port connector (10-1 pin COM)
- 14. Front panel audio connector (10-1 pin AAFP)
- 15. Digital audio connector (4-1 pin SPDIF\_OUT)

1-4

1-25

1-5

1-23

1-8

1-24

1-26

1-27

1-28

1-19

1-18

1-23

1-28

1-24

1-22

1-22

## Chapter 1: Product Introduction

ManualsLib.com

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
9  
10  
11  
12  
13  
14  
15  
16

## Related Manuals for Asus Trooper H110 D3

[Motherboard Asus H110M2 D3 Manual](#)

(57 pages)

[Motherboard Asus H110I-PLUS D3 User Manual](#)

(72 pages)

[Motherboard Asus H110M-C D3 User Manual](#)

(79 pages)

[Motherboard Asus H110M-D D3 User Manual](#)

(51 pages)

[Motherboard Asus H110I User Manual](#)

(25 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-C User Manual](#)

(77 pages)

[Motherboard Asus H110M-D Instruction Manual](#)

(26 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M2/FPT Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M-P Manual](#)

(28 pages)

[Motherboard Asus H110M-CS Manual](#)

(27 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

[Motherboard Asus H110M-P/DVI Manual](#)

(28 pages)

## Related Content for Asus Trooper H110 D3

[P9D-C Series Layout Contents](#)

[Asus P9D-C Series](#)

[P11C-M/10G-2T Layout Contents](#)

[Asus P11C-M/10G-2T](#)

[M3A78 Layout Contents](#)

Asus M3A78

[P9D-X Layout Contents](#)

Asus P9D-X

[CUW-AM Layout Contents](#)

Asus CUW-AM

[P10S-M-DC Layout Contents](#)

Asus P10S-M-DC

[P10S-E/4L Layout Contents](#)

Asus P10S-E/4L

[P5S-MX SE Layout Contents](#)

Asus P5S-MX SE