

Central Processing Unit (Cpu) - Asus Trooper H110 D3 Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67



•

[Table of Contents](#)

•

Bookmarks



1.3

Central Processing Unit (CPU)

This motherboard comes with a surface mount LGA1151 socket designed for the 6th Generation


Intel

Core™ i7/ i5/ i3/Pentium

®

Unplug all power cables before installing the CPU.

• Upon purchase of the motherboard, ensure that the PnP cap is on the socket and the socket contacts are not bent. Contact your retailer immediately if the PnP cap is missing, or if you see any damage to the PnP cap/socket contacts/motherboard components. ASUS will shoulder

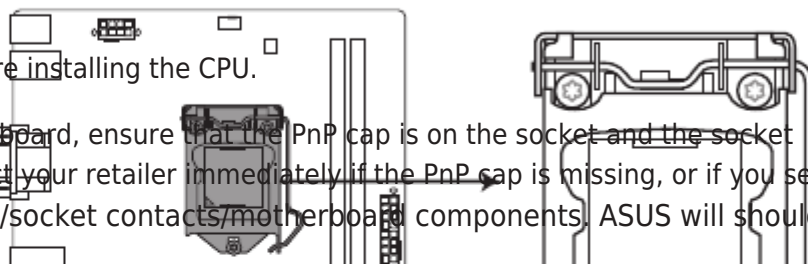


the cost of repair only if the damage is shipment/transit-related.

- Keep the cap after installing the motherboard. ASUS will process Return Merchandise Authorization (RMA) requests only if the motherboard comes with the cap on the LGA1151 socket.

- The product warranty does not cover damage to the socket contacts resulting from incorrect CPU installation/removal, or misplacement/loss/incorrect removal of the PnP cap.

ASUS TROOPER H110 D3
and Celeron
processors.

®
®
1-5

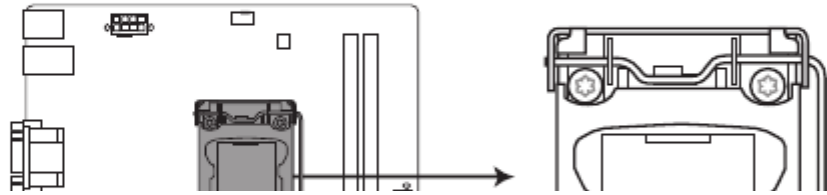

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
10
11
12
13
14
15
16
17

Related Manuals for Asus Trooper H110 D3

[Motherboard Asus H110M2 D3 Manual](#)

(57 pages)

[Motherboard Asus H110I-PLUS D3 User Manual](#)

(72 pages)

[Motherboard Asus H110M-C D3 User Manual](#)

(79 pages)

[Motherboard Asus H110M-D D3 User Manual](#)

(51 pages)

[Motherboard Asus H110I User Manual](#)

(25 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-C User Manual](#)

(77 pages)

[Motherboard Asus H110M-D Instruction Manual](#)

(26 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M2/FPT Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M-P Manual](#)

(28 pages)

[Motherboard Asus H110M-CS Manual](#)

(27 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

[Motherboard Asus H110M-P/DVI Manual](#)

(28 pages)

Related Content for Asus Trooper H110 D3

[WS X299 SAGE Central Processing Unit \(Cpu\)](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Central Processing Unit \(Cpu\)](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Central Processing Unit \(Cpu\)](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Central Processing Unit \(Cpu\)](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI Central Processing Unit \(Cpu\)](#)

Asus H110M-P/DVI

[PRIME X570-PRO Central Processing Unit \(Cpu\)](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Central Processing Unit \(Cpu\)](#)

Asus M3N-H/HDMI

[EX-B660M-V5 D4 Central Processing Unit \(Cpu\)](#)

Asus EX-B660M-V5 D4