

Expansion Slots - Asus Trooper H110 D3 Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67



•

Table of Contents

•

Bookmarks



1.5

Expansion slots

In the future, you may need to install expansion cards. The following sub-sections describe the slots

and the expansion cards that they support.


Unplug the power cord before adding or removing expansion cards. Failure to do so may cause you physical injury and damage motherboard components.

1.5.1



Installing an expansion card

To install an expansion card:

1. Before installing the expansion card, read the documentation that came with it and make the necessary hardware settings for the card.
2. Remove the system unit cover (if your motherboard is already installed in a chassis).
3. Remove the bracket opposite the slot that you intend to use. Keep the screw for later use.
4. Align the card connector with the slot and press firmly until the card is completely seated on the slot. 
5. Secure the card to the chassis with the screw you removed earlier.
6. Replace the system cover.

1.5.2

Configuring an expansion card

After installing the expansion card, configure it by adjusting the software settings.

1. Turn on the system and change the necessary BIOS settings, if any. See Chapter 2 for information on BIOS setup.
2. Install the software drivers for the expansion card.

ASUS TROOPER H110 D3

1-15

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
20
21
22
23
24
25
26
27

Related Manuals for Asus Trooper H110 D3

[Motherboard Asus H110M2 D3 Manual](#)

(57 pages)

[Motherboard Asus H110I-PLUS D3 User Manual](#)

(72 pages)

[Motherboard Asus H110M-C D3 User Manual](#)

(79 pages)

[Motherboard Asus H110M-D D3 User Manual](#)

(51 pages)

[Motherboard Asus H110I User Manual](#)

(25 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-C User Manual](#)

(77 pages)

[Motherboard Asus H110M-D Instruction Manual](#)

(26 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M2/FPT Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M-P Manual](#)

(28 pages)

[Motherboard Asus H110M-CS Manual](#)

(27 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

[Motherboard Asus H110M-P/DVI Manual](#)

(28 pages)

Related Content for Asus Trooper H110 D3

[ROG CROSSHAIR VIII EXTREME Expansion Slots](#)

Asus ROG CROSSHAIR VIII EXTREME

[PRIME X570-PRO Expansion Slots](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Expansion Slots](#)

Asus M3N-H/HDMI

[P5KPL-E Expansion Slots](#)

Asus P5KPL-E

[MAXIMUS VII HERO Expansion Slots](#)

Asus MAXIMUS VII HERO

[AM1M-E Expansion Slots](#)

Asus AM1M-E

[STRIX Z270H GAMING Expansion Slots](#)

Asus STRIX Z270H GAMING

[H81M-D R2.0 Expansion Slots](#)

Asus H81M-D R2.0