

Jumpers; Clear Rtc Ram - Asus Trooper H110 D3 Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67



•

Table of Contents

•

Bookmarks



1.6

Jumpers

1.

 
Clear RTC RAM (2-pin CLRRTC)

This header allows you to clear the Real Time Clock (RTC) RAM in CMOS. You can clear the CMOS memory of date, and system setup parameters by erasing the CMOS RTC RAM data. The onboard button cell battery powers the RAM data in CMOS, which includes system setup information such as system passwords.

To erase the RTC RAM:

1.

Turn OFF the computer and unplug the power cord.



2.
Use a metal object such as a screwdriver to short the two pins.
3.
Plug the power cord and turn ON the computer.
4.
Hold down the key during the boot process and enter BIOS setup to re-enter data. Except when clearing the RTC RAM, never short-circuit the CLRRTC jumper. Shorting the CLRRTC jumper will cause system boot failure!


If the steps above do not help, remove the onboard battery and short the two pins again to clear the CMOS RTC RAM data. After clearing the CMOS, reinstall the battery.

You do not need to clear the RTC when the system hangs due to overclocking. For system failure due to overclocking, use the CPU Parameter Recall (C.P.R.) feature. Shut down and reboot the system, then the BIOS automatically resets parameter settings to default values.

Due to chipset behavior, AC power off is required to enable C.P.R. function. You must turn off and on the power supply or unplug and plug the power cord before rebooting the system.

1-18

Chapter 1: Product Introduction

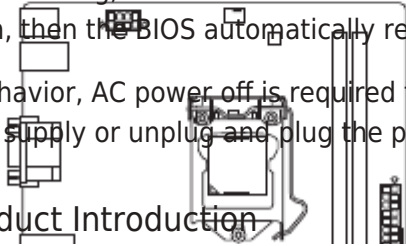

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
23
24
25
26
27
28
29
30

Related Manuals for Asus Trooper H110 D3

[Motherboard Asus H110M2 D3 Manual](#)

(57 pages)

[Motherboard Asus H110I-PLUS D3 User Manual](#)

(72 pages)

[Motherboard Asus H110M-C D3 User Manual](#)

(79 pages)

[Motherboard Asus H110M-D D3 User Manual](#)

(51 pages)

[Motherboard Asus H110I User Manual](#)

(25 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-C User Manual](#)

(77 pages)

[Motherboard Asus H110M-D Instruction Manual](#)

(26 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M2/FPT Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M-P Manual](#)

(28 pages)

[Motherboard Asus H110M-CS Manual](#)

(27 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

[Motherboard Asus H110M-P/DVI Manual](#)

(28 pages)

Related Content for Asus Trooper H110 D3

[AAEON UP Xtreme 7100 Edge Jumpers And Connectors](#)

[Asus AAEON UP Xtreme 7100 Edge](#)

[AAEON UP Xtreme 7100 Jumpers And Connectors](#)

[Asus AAEON UP Xtreme 7100](#)

[P5KPL-E Jumpers](#)

Asus P5KPL-E

[AM1M-E Jumpers](#)

Asus AM1M-E

[STRIX Z270H GAMING Jumpers](#)

Asus STRIX Z270H GAMING

[ASRock B550 Phantom Gaming 4/ac Jumpers Setup](#)

Asus ASRock B550 Phantom Gaming 4/ac

[TUF X470-PLUS GAMING Jumpers](#)

Asus TUF X470-PLUS GAMING

[ROG CROSSHAIR VIII IMPACT Onboard Jumpers](#)

Asus ROG CROSSHAIR VIII IMPACT