

Internal Connectors - Asus Trooper H110 D3 Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67



•

Table of Contents

•

Bookmarks



1.7.2

Internal connectors


1.

Front panel audio connector (10-1 pin AAFP)

This connector is for a chassis-mounted front panel audio I/O module that supports either HD Audio or legacy AC'97 audio standard. Connect one end of the front panel audio I/O module cable to this connector.

We recommend that you connect a high-definition front panel audio module to this connector to avail of the motherboard's high-definition audio capability.

If you want to connect a high-definition front panel audio module to this connector, set the Front Panel Type item in the BIOS setup to [HD Audio]. If you want to connect an AC'97 front

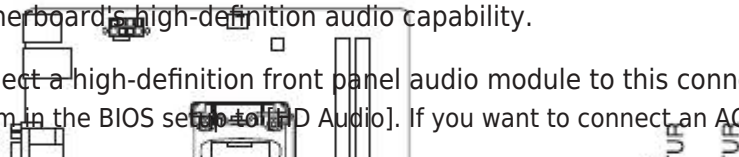

panel audio module to this connector, set the item to [AC97]. By default, this connector is set to [HD Audio].

2.

Digital audio connector (4-1 pin SPDIF_OUT)

This connector is for an additional Sony/Philips Digital Interface (S/PDIF) port. Connect the S/PDIF Out module cable to this connector, then install the module to a slot opening at the back of the system chassis.

The S/PDIF module is purchased separately.

1-22

Chapter 1: Product Introduction

[Table of Contents](#)

[Previous Page](#)

Next Page

1
...
27
28
29
30
31
32
33
34

Related Manuals for Asus Trooper H110 D3

[Motherboard Asus H110M2 D3 Manual](#)

(57 pages)

[Motherboard Asus H110I-PLUS D3 User Manual](#)

(72 pages)

[Motherboard Asus H110M-C D3 User Manual](#)

(79 pages)

[Motherboard Asus H110M-D D3 User Manual](#)

(51 pages)

[Motherboard Asus H110I User Manual](#)

(25 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-C User Manual](#)

(77 pages)

[Motherboard Asus H110M-D Instruction Manual](#)

(26 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M2/FPT Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M-P Manual](#)

(28 pages)

[Motherboard Asus H110M-CS Manual](#)

(27 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

[Motherboard Asus H110M-P/DVI Manual](#)

(28 pages)

Related Content for Asus Trooper H110 D3

[WS X299 SAGE Internal Connectors](#)

Asus WS X299 SAGE

[PRIME X570-PRO Internal Connectors](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Internal Connectors](#)

Asus M3N-H/HDMI

[P5KPL-E Internal Connectors](#)

Asus P5KPL-E

[MAXIMUS VII HERO Internal Connectors](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Internal Connectors](#)

Asus STRIX Z270H GAMING

[TUF X470-PLUS GAMING Internal Connectors](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Internal Connectors](#)

Asus PRIME X570-P