



BIOS menu screen

The BIOS setup program can be used under two modes: EZ Mode and Advanced Mode. You can change modes from the Exit menu or from the Exit/Advanced Mode button in the EZ Mode/

Advanced Mode screen.

EZ Mode

By default, the EZ Mode screen appears when you enter the BIOS setup program. The EZ Mode

provides you an overview of the basic system information, and allows you to select the display

language, system performance mode and boot device priority. To access the Advanced Mode, click

Advanced Mode or press <F7> for the advanced BIOS settings.

The default screen for entering the BIOS setup program can be changed.

Displays the CPU temperature,
DRAM information, CPU voltage
output, and CPU/chassis fan speed

SATA
information

- The boot device options vary depending on the devices you installed to the system.

- The Boot Menu (F8) button is available only when the boot device is installed to the system.

2-8
Selects the display language
of the BIOS setup program

Fan profile
Loads
optimized
default

Exits the BIOS setup program
without saving the changes,
saves the changes and resets
the system, or enters the

Advanced Mode

Chapter 2: BIOS Information

Displays the system
properties of the
selected mode on
the right hand side

Selects the boot
device priority

Search for more
answers in the
FAQ page.



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
43
44
45
46
47
48
49
50

Related Manuals for Asus Trooper H110 D3

[Motherboard Asus H110M2 D3 Manual](#)

(57 pages)

[Motherboard Asus H110I-PLUS D3 User Manual](#)

(72 pages)

[Motherboard Asus H110M-C D3 User Manual](#)

(79 pages)

[Motherboard Asus H110M-D D3 User Manual](#)

(51 pages)

[Motherboard Asus H110I User Manual](#)

(25 pages)

[Motherboard Asus H110M-K Instruction Manual](#)

(25 pages)

[Motherboard Asus H110M-C User Manual](#)

(77 pages)

[Motherboard Asus H110M-D Instruction Manual](#)

(26 pages)

[Motherboard Asus H110M-A Manual](#)

(55 pages)

[Motherboard Asus H110-PLUS Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M2/FPT Manual](#)

(26 pages)

[Motherboard Asus PRIME H110M-P Manual](#)

(28 pages)

[Motherboard Asus H110M-CS Manual](#)

(27 pages)

[Motherboard Asus H110M-C/HDMI Manual](#)

(27 pages)

[Motherboard Asus H110M-K X Manual](#)

(27 pages)

[Motherboard Asus H110M-P/DVI Manual](#)

(28 pages)

Related Content for Asus Trooper H110 D3

[P5KPL-E Bios Menu Screen](#)

Asus P5KPL-E

[PRIME H510T2-CSM R2.0 Bios Menu Screen](#)

Asus PRIME H510T2-CSM R2.0

[B250M-C PRO Bios Menu Screen](#)

Asus B250M-C PRO

[PRIME H610M-C/PS D4 Bios Menu Screen](#)

Asus PRIME H610M-C/PS D4

[Pro A520M-C II Bios Menu Screen](#)

Asus Pro A520M-C II

[Pro Q570M-C Bios Menu Screen](#)

Asus Pro Q570M-C

[Pro B760M-C Bios Menu Screen](#)

Asus Pro B760M-C

[WS C621E SAGE Series Bios Menu Screen](#)

Asus WS C621E SAGE Series