Save These Instructions - Whirlpool WFAU Installation Instructions Manual

•

Table of Contents









IMPORTANT SAFETY INSTRUCTIONS

Use only with type of gas approved for this furnace.

Refer to the furnace rating plate.

Install this furnace only in a location and position as

specifical in the Location Requirements section of

these instructions.

Prov de adequate combustion and ventilation air to the

furnace space as specified in the "Venting

Requirements" section of these instructions.

Compustion products must be discharged outdoors.

Connect this furnace to an approved vent system

only as specified in the "Venting Requirements"

section of these instructions.

Never test for gas leaks with an open flame. Use a

commercially available soap solution made specifically for the detection of leaks to check all

connections, as specified in the "Make Gas

Connections" section of these instructions.

Always install furnace to operate within the furnace's

inter de temperature-rise range with a duct system

which has an external static pressure within the

allowable range, as specified in the "Complete

Installation" section of these instructions. See furnace

rating plate.

The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list

of substances known to the State of California to cause cancer, birth defects, or other reproductive harm, and

requires businesses to warn of potential exposure to such substances.

WARNING: This product contains a chemical known to the State of California to cause cancer, birth defects or

other reproductive harm.

This appliance can cause low-level exposure to some of the substances listed, including benzene, formaldehyde,

carbon monoxide, toluene, and soot.

ADDITIONAL SAFETY INFORMATION

In the State of Massachusetts, the following installation instructions apply:

Installations and repairs must be performed by a qualified or licensed contractor, plumber, or gasfitter qualified or

licensed by the State of Massachusetts.

If using a ball valve, it shall be a T-handle type.

A flexible gas connector, when used, must not exceed 3 feet.

2

SAVE THESE INSTRUCTIONS

When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.

A gas-fired furnace for installation in a residential

garage must be installed as specified in the "Location

Requirements" section of these instructions.

The furnace is not to be used for temporary heating of

buildings or structures under construction.

The jurnace shall be installed so the electrical

components are protected from water.

Furnaces for indoor installation on combustible

flooring shall not be installed directly on carpeting, tile or other combustible material other than wood					
flooring.					
	Table of Contents				
	Previous Page				
	Next Page				

Quick Links: Troubleshooting	

Related Manuals for Whirlpool WFAU

Furnace Whirlpool WFAU Installation Instructions Manual

(24 pages)

Furnace Whirlpool Whirlpool furnace User Instructions

(12 pages)

<u>Furnace Whirlpool W2PG Installation Instructions Manual</u>

Package gas electric furnaces (20 pages)

Furnace Whirlpool WGFM29 Installation Instructions Manual

93% and 95% 2-stage variable-speed gas furnace (52 pages)

Furnace Whirlpool Gold WGFM195 Installation Instructions Manual

Gold gas-fired warm air furnace (52 pages)

Furnace Whirlpool WGFD28 Installation Instructions Manual

80% 2-stage variable speed gas furnace gold models (40 pages)

Furnace Whirlpool GAS FURNACE User Instructions

(8 pages)

Furnace Whirlpool WFCU Installation Instructions Manual

(28 pages)

Furnace Whirlpool WFCT Installation Instructions Manual

90+ multipositional gas furnace (32 pages)

Furnace Whirlpool GAS FURNACE User Instructions

(8 pages)

Furnace Whirlpool WGFD293 Installation Instructions Manual

93% and 95% 2-stage variable speed gas furnace (52 pages)

Furnace Whirlpool WGFM195 Installation Instructions Manual

(48 pages)

Furnace Whirlpool Gold WGFD295 Installation Instructions Manual

80% 2-stage variable speed gas furnace (40 pages)

Furnace Whirlpool WFCU Installation Instructions Manual

90+ gas furnace (24 pages)

Related Content for Whirlpool WFAU

WGFBLT Installation Instructions

Whirlpool WGFBLT

Gold WFD193 Installation Instructions

Whirlpool Gold WFD193

W2PG Furnace Installation Instructions

Whirlpool W2PG

WPG Installation Instructions

Whirlpool WPG

WFM18 Installation Instructions

Whirlpool WFM18

WGFD293 Installation Instructions

Whirlpool WGFD293

WGFD28 Installation Instructions

Whirlpool WGFD28

Gold WGFD295 Installation Instructions

Whirlpool Gold WGFD295

This manual is also suitable for:

WfluWfarWflrWfatWflt