

Toshiba dynaPad WT12PE-A Series Quick Start Manual

1
2
3
4
5
6
7
8
Table Of Contents
9

Table of Contents



Download this manual	Quick Links	



QUICK START

тм

WT12PE-A Series

dynaPad





Related Manuals for Toshiba dynaPad WT12PE-A Series

Notebook Toshiba WT12PE-A Series User Manual

(109 pages)

Tablet Toshiba wt200 User Manual

(101 pages)

Tablet Toshiba Encore WT8-A Series User Manual

(130 pages)

Tablet Toshiba WT8-A series User Manual

(80 pages)

Tablet Toshiba Portege WT20-B Series User Manual

(149 pages)

Tablet Toshiba Portege WT20-B Series Quick Start Manual

(8 pages)

Tablet Toshiba WT8PE-B User Manual

(107 pages)

Tablet Toshiba WT110 User Manual

(92 pages)

Tablet Toshiba Encore Mini WT7-C User Manual

(79 pages)

Tablet Toshiba WT10-A Series User Manual

(89 pages)

Tablet Toshiba AT300 User Manual

(88 pages)

Tablet Toshiba AT300SE Series User Manual

(80 pages)

Tablet Toshiba AT105-SP0160M User Manual

At105-sp0160m user's guide (132 pages)

Tablet Toshiba AT270 Manual Del Usuario

User guide (131 pages)

Tablet Toshiba T200 User Manual

Pen computer (181 pages)

Tablet Toshiba AT105-SP0102C Manual Del Usuario

User guide 2 (142 pages)

Summary of Contents for Toshiba dynaPad WT12PE-A Series

Page 1: Quick Start

QUICK START ™ WT12PE-A Series...

Page 2: Check The Components

Enhance your ownership experience by taking a few minutes to register your Toshiba Product at register.toshiba.com. Completing Product registration allows Toshiba to provide you with Product information updates, special offers and promotions. Failure to complete Product registration will not diminish your rights under the Standard Limited Warranty.

Page 3: Quick Tour

Quick Tour Front Touch screen Front web camera Note: When you rotate the device from portrait to landscape (or vice versa), the screen orientation automatically changes according to the rotation angle. To lock the screen so that it does not rotate automatically, orient the device in the desired screen rotation (portrait or landscape) and do...

Page 4 Power Button TruTalk™ microphones Volume increase/decrease button Strap hook slot Bottom Keyboad Dock Connector/Interface Left Charging indicator light Micro USB port* Micro HDMI™ port microSD slot ™ * For charging or data transfer. Right Pen Slot Micro USB port Headphone/Microphone jack TruPen Erase button (for TruNote™) Right click button...

Page 5: Start Menu

Navigation Start menu Select the Start button on your device. Start menu (left side) Start menu (right side) User Profile Tiles – Settings – Fast Change Account access Settings, Lock or to apps, Sign Out programs, folders, Most used – (Sample image) people, or List of frequently...

Page 6: General Safety Instructions

AC Adaptor Always use the Toshiba AC adaptor that was provided with your device or as specified by Toshiba and use correct power source specified on the regulatory label of device or adaptor. Always ensure a secure electrical connection. Be careful if you use a multiple connector to avoid current overload on one socket.

Page 7: Operating Environment

Unstable Surfaces Do not use Product on an unstable table, cart or stand. Viewing Recommendations Some individuals may experience health-related complications when exposed to certain images or flashing lights (for example when playing videos or games). Discontinue use and consult a physician if you experience any health-related complications.

Page 8: Need Help

Product Specifications are subject to change without notice. dynaPad is a trademark of Toshiba Corporation. TruTalk iand TruNote are trademarks of Toshiba America Information Systems, Inc. and/or Toshiba Corporation. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.