

Hdd/Ssd Smart Information; Intel(R) Thunderbolt Configuration - Asus SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



Power On By PCI-E/PCI [Disabled]

This item allows you to enable or disable the Wake-on-LAN function of the onboard LAN controller or other installed PCI-E LAN cards.

Configuration options: [Disabled] [Enabled]

Power On By RTC [Disabled]

This item allows you to enable or disable the RTC (Real-Time Clock) to generate a wake event and configure the RTC alarm date. When enabled, you can set the days, hours, minutes, or seconds to schedule an RTC alarm date.

Configuration options: [Disabled] [Enabled]

3.6.10

HDD/SSD SMART Information

This menu displays the SMART information of the connected devices.

3.6.11

Intel(R) Thunderbolt Configuration

Intel Thunderbolt Technology [USB 3.1 Mode]

This item allows you to enable or disable the Intel

Configuration options: [Disabled] [USB 3.1 Mode] [Enabled]

ThunderBolt Boot Support [Disabled]

This item allows you to enable or disable Thunderbolt attached device as a bootable device.

Configuration options: [Disabled] [Enabled]

3-36

Thunderbolt Function.

®

Chapter 3: BIOS Setup

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
97
98
99
100
101
102
103
104

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[PRIME X570-P Hdd/Ssd Smart Information](#)

Asus PRIME X570-P

[STRIX Z270H GAMING Hdd/Ssd Smart Information](#)

Asus STRIX Z270H GAMING

[ROG CROSSHAIR VIII IMPACT Hdd/Ssd Smart Information](#)

Asus ROG CROSSHAIR VIII IMPACT

[H310M-IM-A Hdd/Ssd Smart Information](#)

Asus H310M-IM-A

[ROG STRIX X399-E GAMING Hdd/Ssd Smart Information](#)

Asus ROG STRIX X399-E GAMING

[PRIME Z370-A II Series Hdd/Ssd Smart Information](#)

Asus PRIME Z370-A II Series

[STRIX Z270G GAMING Hdd/Ssd Smart Information](#)

Asus STRIX Z270G GAMING

[TUF X299 MARK 2 Hdd/Ssd Smart Information](#)

Asus TUF X299 MARK 2