

Monitor Menu - Asus SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



3.7

Monitor menu


The Monitor menu displays the system temperature/power status, and allows you to change the fan settings.

Scroll down to display the other BIOS items.

Thermal Radar Temperature / CPU Temperature / EXT_SENSOR1-3
Temperature [xxx°C/xxx°F]

The onboard hardware monitor automatically detects and displays the CPU, thermal radar, and EXT_SENSOR1-3 temperatures. Select [Ignore] if you do not wish to display the detected temperature.

CPU Fan Speed

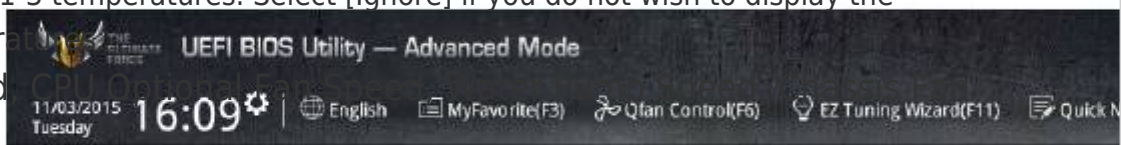

1-6 Speed, ASST Fan 1-2 Speed, Extension Fan 1-3 Speed [xxxx RPM] or [Ignore] / [N/A]

The onboard hardware monitor automatically detects and displays the CPU, chassis, and power fan speed in rotations per minute (RPM). If the fan is not connected to the motherboard, the field shows N/A. Select [Ignore] if you do not wish to display the detected speed.

CPU Core Voltage, 3.3V Voltage, 5V Voltage, 12V Voltage

The onboard hardware monitor automatically detects the voltage output through the onboard voltage regulators. Select [Ignore] if you do not want to detect this item.

SABERTOOTH Z170 S

3-37

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)
[...](#)
[100](#)
[101](#)
[102](#)
[103](#)

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[PRIME X570-PRO Monitor Menu](#)

Asus PRIME X570-PRO

[EX-B660M-V5 D4 Monitor Menu](#)

Asus EX-B660M-V5 D4

[STRIX Z270F GAMING Monitor Menu](#)

Asus STRIX Z270F GAMING

[MAXIMUS VII HERO Monitor Menu](#)

Asus MAXIMUS VII HERO

[AM1M-E Monitor Menu](#)

Asus AM1M-E

[EX-H310M-X Monitor Menu](#)

Asus EX-H310M-X

[STRIX Z270H GAMING Monitor Menu](#)

Asus STRIX Z270H GAMING

[H81M-D R2.0 Monitor Menu](#)

Asus H81M-D R2.0