



# Boot Option Priorities; Boot Override - Asus SABERTOOTH Z170 Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174



•

[Table of Contents](#)



•

## Bookmarks





## DBX Management

### Set New Key

Allows you to load the downloaded dbx from a USB storage device.

Configuration options: [Yes] [No]

### Append Key

Allows you to load the additional dbx from a storage device so that more db's images cannot be loaded.

### Delete Key

Allows you to delete the dbx file from your system.

The dbx file must be formatted as a UEFI variable structure with time-based authenticated variable.

## Boot Option Priorities

These items specify the boot device priority sequence from the available devices. The

number of device items that appears on the screen depends on the number of devices installed in the system.

•  
To access Windows supported).

•  
To select the boot device during system startup, press <F8> when the ASUS Logo appears.

## Boot Override

These items displays the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system. Click an item to start booting from the selected device.

SABERTOOTH Z170 S

®

OS in Safe Mode, press <F8> after POST (Windows

®

8 not

3-49

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

112

113

114

115

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

## Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)



(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

## Related Content for Asus SABERTOOTH Z170

[P8Q77-M Boot Option Priorities](#)

Asus P8Q77-M

[ROG STRIX B350-I GAMING Boot Option Priorities](#)

Asus ROG STRIX B350-I GAMING

[ROG STRIX Z370-E GAMING Boot Option Priorities](#)

Asus ROG STRIX Z370-E GAMING

[STRIX B250I GAMING Boot Option Priorities](#)

Asus STRIX B250I GAMING

[PRIME X299-Deluxe Series Boot Option Priorities](#)

Asus PRIME X299-Deluxe Series

[ROG STRIX B350-F GAMING Boot Option Priorities](#)

Asus ROG STRIX B350-F GAMING

[STRIX B250F GAMING Boot Option Priorities](#)

Asus STRIX B250F GAMING

[PRIME X370-PRO Boot Option Priorities](#)

Asus PRIME X370-PRO