



# Audio Configurations - Asus SABERTOOTH Z170 Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174



•

[Table of Contents](#)



•

## Bookmarks





## 4.7

### Audio configurations

The Realtek

audio CODEC provides 8-channel audio capability to deliver the ultimate audio

®

experience on your computer. The software provides Jack-Sensing function, S/PDIF Out support, and interrupt capability. The CODEC also includes the Realtek (Universal Audio Jack) technology for all audio ports, eliminating cable connection errors, and giving users plug and play convenience.

Follow the installation wizard to install the Realtek came with the motherboard package.

If the Realtek

audio software is correctly installed, you will find the Realtek

®

Manager icon on the taskbar. Double-click or tap on the icon to display the Realtek Audio Manager.

## Realtek

### HD Audio Manager

®

Control settings panel

4-36

HD

®

Configuration option tabs (vary with the audio devices connected)

Analog and digital connector status

proprietary UAJ

®

Audio Driver from the support DVD that

®

Realtek

## Chapter 4: Software Support

®

HD Audio

®

 
HD Audio Manager

®

Advanced settings

Set default device

button



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

157

158

159

160

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

## Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)



(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

## Related Content for Asus SABERTOOTH Z170

[Z170-WS Audio Configurations](#)

Asus Z170-WS

[X99-E-10G WS Audio Configurations](#)

Asus X99-E-10G WS

[SABERTOOTH 990FX R3.0 Audio Configurations](#)

Asus SABERTOOTH 990FX R3.0

[P10S WS Audio Configurations](#)

Asus P10S WS

[Z170-DELUXE Series Audio Configurations](#)

Asus Z170-DELUXE Series

[SABERTOOTH Z170 MARK 1 Audio Configurations](#)

Asus SABERTOOTH Z170 MARK 1

[Z170-Premium series Audio Configurations](#)

Asus Z170-Premium series

[A8V Audio Configurations](#)

Asus A8V