

Installing Serial Ata Hard Disks; Setting The Raid Item In Bios - Asus SABERTOOTH Z170 Manual

 
1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



5.1.2

Installing Serial ATA hard disks

The motherboard supports Serial ATA hard disk drives. For optimal performance, install identical drives of the same model and capacity when creating a disk array.

To install the SATA hard disks for a RAID configuration:

1.

Install the SATA hard disks into the drive bays.

2.

Connect the SATA signal cables.

3.

Connect a SATA power cable to the power connector on each drive.

5.1.3

Setting the RAID item in BIOS

You must enable the RAID function in the BIOS Setup before creating RAID sets using SATA HDDs. To do this:

1.

Enter the BIOS Setup during POST.

2.

Go to the Advanced menu > SATA Configuration, and then press <Enter>.

3.

Set the SATA Mode item to [RAID Mode].

4.

Save your changes, and then exit the BIOS Setup.

Refer to Chapter 3 for details on entering and navigating through the BIOS Setup

Due to chipset limitation, when SATA ports are set to RAID mode, all SATA ports run at RAID mode together.

5-2

Chapter 5: RAID Configurations

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

161

162

163

164

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[SABERTOOTH Z97 MARK 2/USB 3.1 Installing Serial Ata Hard Disks](#)

Asus SABERTOOTH Z97 MARK 2/USB 3.1

[PRIME Z270-AR Series Installing Serial Ata Hard Disks](#)

Asus PRIME Z270-AR Series

[RAMPAGE IV BLACK EDITION Installing Serial Ata Hard Disks](#)

Asus RAMPAGE IV BLACK EDITION

[ROG STRIX X299-XE GAMING Installing Serial Ata Hard Disks](#)

Asus ROG STRIX X299-XE GAMING

[STRIX Z270G GAMING Installing Serial Ata Hard Disks](#)

Asus STRIX Z270G GAMING

[ROG Strix X299-E Gaming Installing Serial Ata Hard Disks](#)

Asus ROG Strix X299-E Gaming

[90MB0VJ0-M0EAY0 Installing Serial Ata Hard Disks](#)

Asus 90MB0VJ0-M0EAY0

[TUF Z270 MARK 2 Installing Serial Ata Hard Disks](#)

Asus TUF Z270 MARK 2