

Intel ® Rapid Storage Technology
Option Rom Utility - Asus
SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



5.1.4

Intel

Rapid Storage Technology Option ROM utility

®

To enter the Intel

Rapid Storage Technology Option ROM utility:

®

1.

Turn on the system.

2.

During POST, press <Ctrl> + <I> to display the utility main menu.

1. Create RAID Volume

None defined.

The navigation keys at the bottom of the screen allow you to move through the menus and select the menu options.

The RAID BIOS setup screens shown in this section are for reference only and may not exactly match the items on your screen.

The utility supports maximum four hard disk drives for RAID configuration.

SABERTOOTH Z170 S

[MAIN MENU]

[DISK/VOLUME INFORMATION]



Non-RAID Disk
Non-RAID Disk
Non-RAID Disk
Non-RAID Disk



5-3

[Previous Page](#)
[Next Page](#)

1

...

162

163

164

165

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[RAMPAGE V EDITION 10 Intel ® Rapid Storage Technology Option Rom Utility](#)

Asus RAMPAGE V EDITION 10

[TUF X299 MARK 2 Intel ® Rapid Storage Technology Option Rom Utility](#)

Asus TUF X299 MARK 2

[P10S-X Exiting The Intel ® Rapid Storage Technology Enterprise Sata Option Rom Utility](#)

Asus P10S-X

[WS C422 SAGE/10G Intel ® Rapid Storage Technology Option Rom Utility](#)

Asus WS C422 SAGE/10G

[90MB0U00-M0EAY0 Intel ® Rapid Storage Technology Option Rom Utility](#)

Asus 90MB0U00-M0EAY0

[Pro WS X299 SAGE II Intel ® Rapid Storage Technology Option Rom Utility](#)

Asus Pro WS X299 SAGE II

[P11C-C/4L Intel ® Rapid Storage Technology Enterprise SATA Option Rom Utility](#)

Asus P11C-C/4L

[P10S-I Exiting The Intel ® Rapid Storage Technology Enterprise SATA Option Rom Utility](#)

Asus P10S-I