

Installing The Raid Driver During Windows ® Os Installation - Asus SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



Exiting the Intel Rapid Storage Technology Option ROM utility

®

To exit the utility:

1.

From the utility main menu, select 5. Exit, then press <Enter>. The following warning message appears:

2.

Press <Y> to exit or press <N> to return to the utility main menu.

5.2

Installing the RAID driver during Windows

installation

To install the RAID driver for Windows

1.

During the OS installation, click Load Driver to allow you to select the installation media containing the RAID driver.

2.

Insert the USB flash drive with RAID driver into the USB port or the support DVD into the optical drive, and then click Browse.

3.

Click the name of the device you've inserted, go to Drivers > RAID, and then select the RAID driver for the corresponding OS version. Click OK.

4.

Follow the succeeding screen instructions to complete the installation.

Before loading the RAID driver from a USB flash drive, you have to use another computer to copy the RAID driver from the support DVD to the USB flash drive.

To set up a Windows driver for your optical drive.

SABERTOOTH Z170 S

[CONFIRM EXIT]

OS:

®

UEFI operating system under RAID mode, ensure to load the UEFI

®

OS

®

5-7

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

166

167

168

169

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[Crosshair IV Extreme Installing The Raid Driver During Windows ® Os Installation](#)

Asus Crosshair IV Extreme

[Maximus VI Extreme Installing The Raid Driver During Windows ® Os Installation](#)

ASUS Maximus VI Extreme

[Z170-WS Installing The Raid Driver During Windows ® Os Installation](#)

Asus Z170-WS

[Z170-DELUXE Series Installing The Raid Driver During Windows ® Os Installation](#)

Asus Z170-DELUXE Series

[SABERTOOTH Z170 MARK 1 Installing The Raid Driver During Windows ® Os Installation](#)

Asus SABERTOOTH Z170 MARK 1

[Z170-Premium series Installing The Raid Driver During Windows ® Os Installation](#)

Asus Z170-Premium series

[maximus viii formula Installing The Raid Driver During Windows ® Os](#)

Installation

Asus maximus viii formula

[SABERTOOTH Z170 MARK 1 Installing The Raid Driver During Windows](#)

[® Os Installation](#)

Asus SABERTOOTH Z170 MARK 1