

Central Processing Unit (Cpu) - Asus SABERTOOTH Z170 Manual

| |
|-------------------|
| 1 |
| 2 |
| Table Of Contents |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| 16 |
| 17 |

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



1.2.3

Central Processing Unit (CPU)

The motherboard comes with a surface mount LGA1151 socket designed for the 6th Generation Intel

Core™ i7 / Intel

®

processors.

Ensure that you install the correct CPU designed for LGA1151 socket only. DO NOT install a CPU designed for other sockets on the LGA1151 socket.

• Ensure that all power cables are unplugged before installing the CPU.

• Upon purchase of the motherboard, ensure that the PnP cap is on the socket and the socket contacts are not bent. Contact your retailer immediately if the PnP cap



is missing, or if you see any damage to the PnP cap/socket contacts/motherboard components. ASUS will shoulder the cost of repair only if the damage is shipment/transit-related.

• Keep the cap after installing the motherboard. ASUS will process Return Merchandise Authorization (RMA) requests only if the motherboard comes with the cap on the LGA1151 socket.

• The product warranty does not cover damage to the socket contacts resulting from incorrect CPU installation/removal, or misplacement/loss/incorrect removal of the PnP cap.

SABERTOOTH Z170 S

Core™ i5 / Intel

Core™ i3, Pentium

®


®

, and Celeron

®

®

1-9

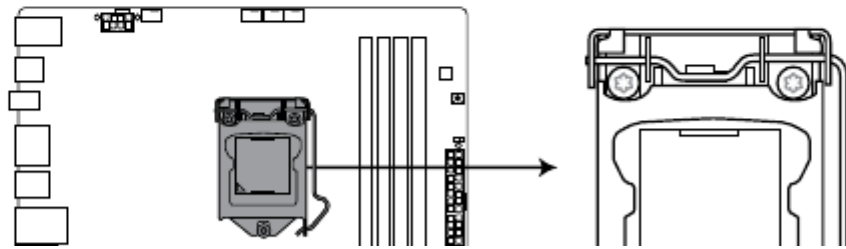

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
22
23
24
25
26
27
28
29

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[WS X299 SAGE Central Processing Unit \(Cpu\)](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Central Processing Unit \(Cpu\)](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Central Processing Unit \(Cpu\)](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI Central Processing Unit \(Cpu\)](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI Central Processing Unit \(Cpu\)](#)

Asus H110M-P/DVI

[PRIME X570-PRO Central Processing Unit \(Cpu\)](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Central Processing Unit \(Cpu\)](#)

Asus M3N-H/HDMI

[EX-B660M-V5 D4 Central Processing Unit \(Cpu\)](#)

Asus EX-B660M-V5 D4