



# Irq Assignments For This Motherboard - Asus SABERTOOTH Z170 Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174



•

[Table of Contents](#)



•

## Bookmarks





Single VGA/PCIe card

Dual VGA/PCIe card

• We recommend that you provide sufficient power when running CrossFireX™ or SLI™ mode.

• Connect a chassis fan to the motherboard connector labeled CHA\_FAN1-6 when using multiple graphics cards for better thermal environment.

### IRQ assignments for this motherboard

PCIe x16\_1

PCIe x16\_2

PCIe x16\_3

PCIe x1\_1

PCIe x1\_2  
PCIe x1\_3  
SMBUS Controller  
Intel SATA Controller  
Intel LAN1(i219)  
Intel xHCI  
HD Audio  
SABERTOOTH Z170 S

mode		

x16 (single VGA recommended)  
x8

shared



shared

shared

shared

shared

shared

shared

ManualsLib.com

shared

shared

N/A  
x8




---

---

shared

shared


ManualsLib.com





---



---


ManualsLib.com

[Previous Page](#)  
[Next Page](#)



1  
...  
26  
27  
28  
29  
30  
31  
32  
33

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

## Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

## Related Content for Asus SABERTOOTH Z170

[MAXIMUS IX FORMULA Irq Assignments For This Motherboard](#)

Asus MAXIMUS IX FORMULA

[Prime H270-Plus Irq Assignments For This Motherboard](#)

Asus Prime H270-Plus

[TUF Z270 Mark 1 Irq Assignments For This Motherboard](#)

Asus TUF Z270 Mark 1

[Z170 PRO GAMING/AURA Irq Assignments For This Motherboard](#)

Asus Z170 PRO GAMING/AURA

[B150-PRO Irq Assignments For This Motherboard](#)

Asus B150-PRO

[H110M-A/M.2 Irq Assignments For This Motherboard](#)

Asus H110M-A/M.2

[H110M-PLUS Irq Assignments For This Motherboard](#)

Asus H110M-PLUS

[E3-PRO V5 Irq Assignments For This Motherboard](#)

Asus E3-PRO V5