

Internal Connectors - Asus SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



1.2.9

Internal connectors

1.

Intel

Serial ATA 6.0 Gb/s connectors (7-pin SATA6G_56 [black];

®
SATAEXPRESS12 [gray])

These connectors connect to Serial ATA 6.0 Gb/s hard disk drives via Serial ATA 6 Gb/s signal cables.

If you installed Serial ATA hard disk drives, you can create a RAID 0, 1, 5, and 10 configuration with the Intel Z170 chipset.

•
•

1-18

Rapid Storage Technology through the onboard Intel

®

These connectors are set to [AHCI Mode] by default. If you intend to create a Serial ATA RAID set using these connectors, set the SATA Mode item in the BIOS to [RAID Mode].

Before creating a RAID set, refer to section 5.1 RAID configurations or the manual bundled in the motherboard support DVD.

Chapter 1: Product Introduction

®

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

[1](#)
[...](#)
[31](#)
[32](#)
[33](#)
[34](#)
[35](#)
[36](#)
[37](#)
[38](#)

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[WS X299 SAGE Internal Connectors](#)

Asus WS X299 SAGE

[PRIME X570-PRO Internal Connectors](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Internal Connectors](#)

Asus M3N-H/HDMI

[P5KPL-E Internal Connectors](#)

Asus P5KPL-E

[MAXIMUS VII HERO Internal Connectors](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Internal Connectors](#)

Asus STRIX Z270H GAMING

[TUF X470-PLUS GAMING Internal Connectors](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Internal Connectors](#)

Asus PRIME X570-P