



# Motherboard Rear And Audio Connections; Rear I/O Connection - Asus SABERTOOTH Z170 Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174



•

[Table of Contents](#)



•

## Bookmarks






## 2.3

### Motherboard rear and audio connections

#### 2.3.1

##### Rear I/O connection

1.  
USB 2.0 ports 7-10  
TUF Detective port (supports TUF  
2.  
Detective 2 only)

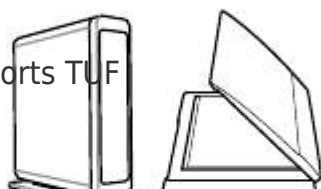

3.

DisplayPort

4.

Intel LAN port\*

5.

USB BIOS Flashback button

6.

HDMI port

\*and \*\*: Refer to the tables on the next page for LAN port LEDs, and audio port definitions.

2-16

7.

USB 3.0 ports 56 (supports USB 3.0 Boost, bottom port supports USB BIOS Flashback)

8.

USB Type-C port (supports USB 3.1 Boost)

9.

USB 3.1 port (supports USB 3.1 Boost)


10.

Optical S/PDIF Out port

11.

Audio I/O ports\*\*

Chapter 2: Basic Installation

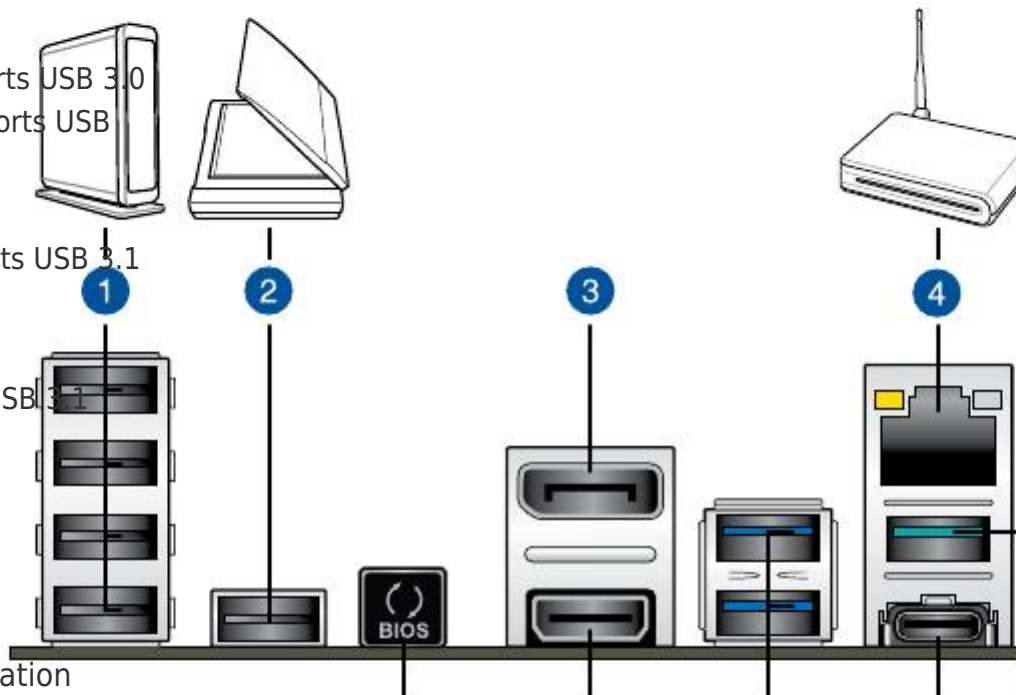

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
57  
58  
59  
60  
61  
62  
63  
64

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

## Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)



(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

## Related Content for Asus SABERTOOTH Z170

[TUF GAMING Z590-PLUS Motherboard Rear And Audio Connections](#)

Asus TUF GAMING Z590-PLUS

[MAXIMUS VII HERO Motherboard Rear And Audio Connections](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Motherboard Rear And Audio Connections](#)

Asus STRIX Z270H GAMING

[PRIME Z590-V Motherboard Rear And Audio Connections](#)

Asus PRIME Z590-V

[ROG MAXIMUS XII EXTREME Motherboard Rear And Audio Connections](#)

Asus ROG MAXIMUS XII EXTREME

[Pro WS W680-ACE Motherboard Rear And Audio Connections](#)

Asus Pro WS W680-ACE

[ROG MAXIMUS XII Z490 APEX Motherboard Rear And Audio Connections](#)

Asus ROG MAXIMUS XII Z490 APEX

[TUF X470-PLUS GAMING Motherboard Rear And Audio Connections](#)

Asus TUF X470-PLUS GAMING