

Starting Up For The First Time; Turning Off The Computer - Asus SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168


169
170
171
172
173
174



•

•

Bookmarks

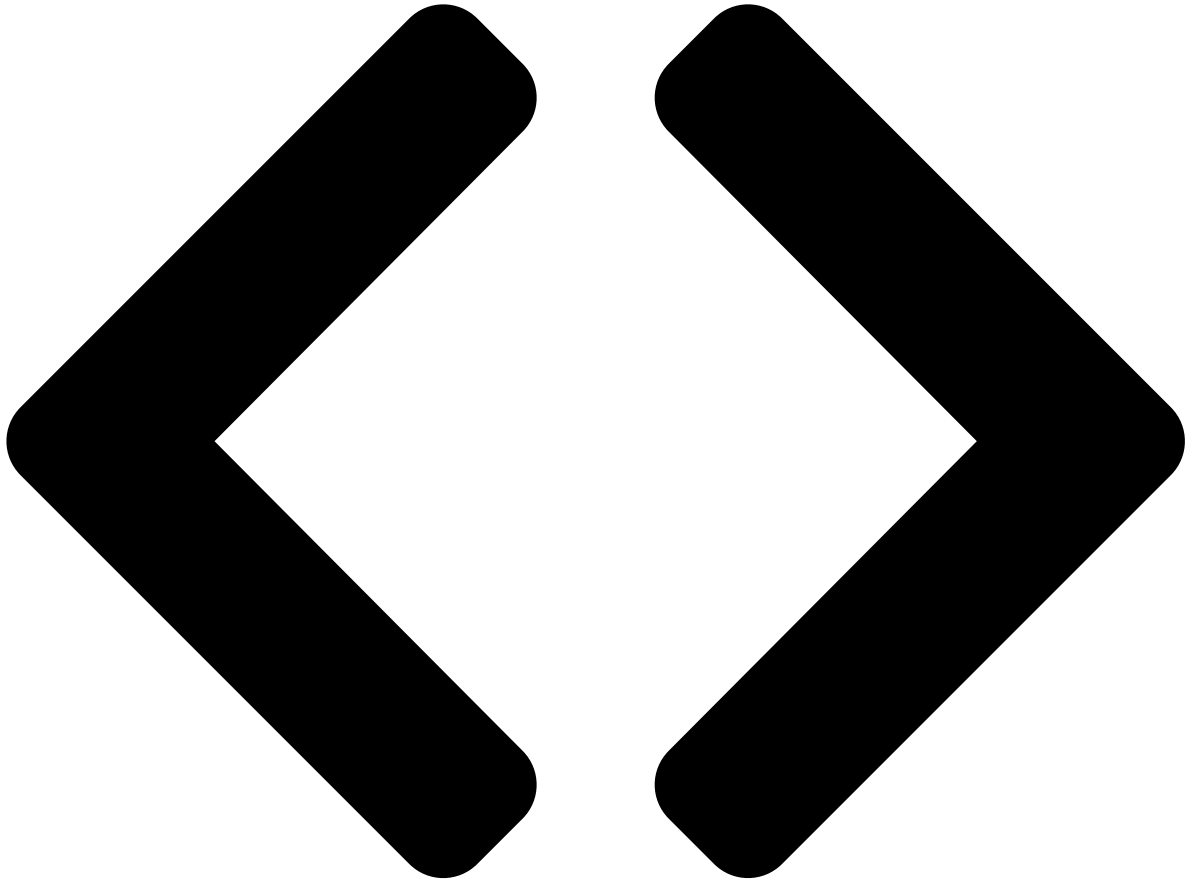

2.4

Starting up for the first time

1.

After making all the connections, replace the system case cover.

2.

Ensure that all switches are off.

3.

Connect the power cord to the power connector at the back of the system chassis.

4.

Connect the power cord to a power outlet that is equipped with a surge protector.

5.

Turn on the devices in the following order:

a.

Monitor

b.

External SCSI devices (starting with the last device on the chain)

c.

System power

6.

After applying power, the system power LED on the system front panel case lights up. For systems with ATX power supplies, the system LED lights up when you press the ATX power button. If your monitor complies with the "green" standards or if it has a "power standby" feature, the monitor LED may light up or change from orange to green after the system LED turns on.

The system then runs the power-on self tests (POST). While the tests are running, the BIOS beeps (refer to the BIOS beep codes table) or additional messages appear on the screen. If you do not see anything within 30 seconds from the time you turned on the power, the system may have failed a power-on test. Check the jumper settings and connections or call your retailer for assistance.

One short beep

One continuous beep followed by two short beeps then a pause (repeated)

One continuous beep followed by three short beeps

One continuous beep followed by four short beeps

7.

At power on, hold down the <Delete> key to enter the BIOS Setup. Follow the instructions in Chapter 3.

2.5

Turning off the computer

While the system is ON, press the power button for less than four seconds to put the system on sleep mode or soft-off mode, depending on the BIOS setting. Press the power switch for more than four seconds to let the system enter the soft-off mode regardless of the BIOS setting.

2-20

VGA detected

Quick boot set to disabled

No keyboard detected

No memory detected

No VGA detected

Hardware component failure

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
61
62
63
64
65
66
67
68

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[ROG CROSSHAIR VIII EXTREME Starting Up For The First Time](#)

Asus ROG CROSSHAIR VIII EXTREME

[PRIME X570-PRO Starting Up For The First Time](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Starting Up For The First Time](#)

Asus M3N-H/HDMI

[TUF GAMING Z590-PLUS Starting Up For The First Time](#)

Asus TUF GAMING Z590-PLUS

[MAXIMUS VII HERO Starting Up For The First Time](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Starting Up For The First Time](#)

Asus STRIX Z270H GAMING

[PRIME Z590-V Starting Up For The First Time](#)

Asus PRIME Z590-V

[ROG MAXIMUS XII EXTREME Starting Up For The First Time](#)

Asus ROG MAXIMUS XII EXTREME