

Ez Mode - Asus SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

•

Bookmarks



3.2.1

EZ Mode

The EZ Mode provides you an overview of the basic system information, and allows you to select the display language, system performance, mode and boot device priority. To access the Advanced Mode, select Advanced Mode or press the <F7> hotkey for the advanced BIOS settings.

The default screen for entering the BIOS setup program can be changed. Refer to the Setup Mode item in section Boot menu for details.

Displays the CPU/motherboard temperature, CPU voltage output, CPU/chassis/power fan speed, and SATA information

Enables or disables the SATA RAID mode for Intel Rapid Storage Technology

Displays the CPU Fan's speed. Click



the button to manually tune the fans

The boot device options vary depending on the devices you installed to the system.

SABERTOOTH Z170 S

Displays the system properties of the selected mode.

Selects the display language

of the BIOS setup program

Saves the changes

and resets the system

Loads optimized

default settings

Click < or > to switch EZ System Tuning modes

Creates storage RAID and

configures system overclocking

Click to go to Advanced mode

Search on the FAQ

Click to display boot devices

Selects the boot device priority

3-3



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
64
65
66
67
68
69
70
71

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[PRIME X570-PRO Ez Mode](#)

Asus PRIME X570-PRO

[STRIX Z270F GAMING Ez Mode](#)

Asus STRIX Z270F GAMING

[B450M-A/CSM Ez Mode](#)

Asus B450M-A/CSM

[MAXIMUS VII HERO Ez Mode](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Ez Mode](#)

Asus STRIX Z270H GAMING

[PRIME B250M-J Ez Mode](#)

Asus PRIME B250M-J

[H110M-K X Ez Mode](#)

Asus H110M-K X

[PRIME H310M-C/PS R2.0 Ez Mode](#)

Asus PRIME H310M-C/PS R2.0