



# Network Stack Configuration - Asus SABERTOOTH Z170 Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174



•

[Table of Contents](#)



•

## Bookmarks





The Mass Storage Devices item shows the auto-detected values. If no USB device is detected, the item shows None.

### Legacy USB Support [Enabled]

[Enabled]

Your system supports the USB devices in legacy operating systems.

[Disabled]

Your USB devices can be used for BIOS setup only and cannot be recognized in the boot devices list.

[Auto]

Your system automatically detects the presence of USB devices at startup. If any USB devices are detected, the legacy USB support is enabled.

### XHCI Hand-off [Disabled]

[Enabled]

Enables the support for operating systems without an XHCI hand-off

feature.

[Disabled]

Disables the XHCI Hand-off support.

### USB Keyboard and Mouse Simulator [Enabled]

[Enabled]

Enables the support for operating systems without a USB keyboard and mouse feature to simulate a USB keyboard and mouse in Windows 7.

[Disabled]

Disables the USB Keyboard and Mouse Simulator.

Ensure to install USB driver in your system before you disable this item.

### USB Single Port Control

This item allows you to enable or disable the individual USB ports.

Refer to section 1.2.2 Motherboard layout for the location of the USB ports.

## 3.6.7

## Network Stack Configuration

### Network stack [Disable]

This item allows you to disable or enable the UEFI network stack.

Configuration options: [Disable] [Enable]

The following item appears only when you set the Network Stack to [Enabled].

### Ipv4/Ipv6 PXE Support [Enabled]

This item allows you to enable or disable the Ipv4/Ipv6 PXE wake event.

Configuration options: [Disabled] [Enabled]

SABERTOOTH Z170 S

3-33

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
94  
95  
96  
97  
98  
99  
100  
101

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

## Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)



(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

## Related Content for Asus SABERTOOTH Z170

[MAXIMUS VII HERO Network Stack Configuration](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Network Stack Configuration](#)

Asus STRIX Z270H GAMING

[TUF Z270 MARK 1 Network Stack Configuration](#)

Asus TUF Z270 MARK 1

[TUF X470-PLUS GAMING Network Stack Configuration](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Network Stack Configuration](#)

Asus PRIME X570-P

[STRIX Z270H GAMING Network Stack Configuration](#)

Asus STRIX Z270H GAMING

[ROG CROSSHAIR VIII IMPACT Network Stack Configuration](#)

Asus ROG CROSSHAIR VIII IMPACT

[WS C621E SAGE Series Network Stack Configuration](#)

Asus WS C621E SAGE Series