

Onboard Devices Configuration - Asus SABERTOOTH Z170 Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



3.6.8

Onboard Devices Configuration

Scroll down to view the other BIOS items.

HD Audio Controller [Enabled]

This item allows you to use the Azalia High Definition Audio Controller

Configuration options: [Disabled] [Enabled]

The following items appear only when you set the HD Audio Controller to [Enabled].

Front Panel Type

This item allows you

to select the front panel audio type (AC'97 or high-definition audio) depending on the audio standard that the front panel

audio module supports.

[HD Audio]



[AC97]

SPDIF Out Type [SPDIF]

[SPDIF]

[HDMI]

PCI-EX16_3 Bandwidth [Auto]

[Auto]

[X4 mode]

SATA Mode Configuration: [SATA Express_1][M.2]

[M.2]

[SATA Express] S

3-34

Sets the front panel

audio.

Sets the front panel

Sets to an SPDIF

Sets to an HDMI

Run at X2 mode with


Run at X4 mode for high

SATA mode will be switched

devices.

devices.

Chapter 3: BIOS Setup

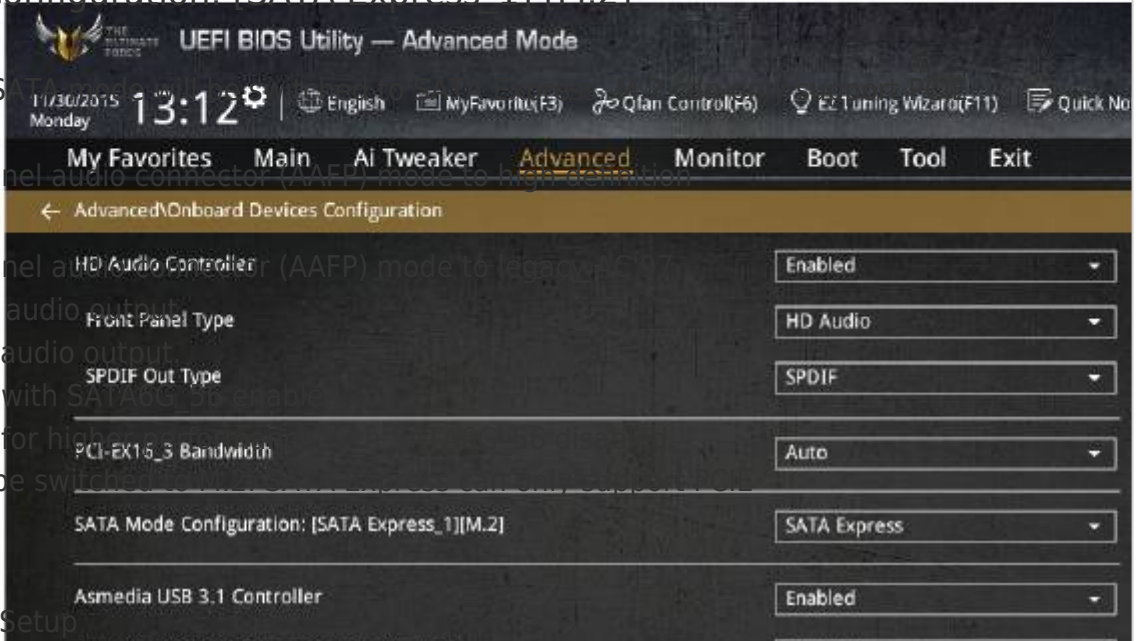

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
95
96
97
98
99
100
101
102

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[MAXIMUS VII HERO Onboard Devices Configuration](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Onboard Devices Configuration](#)

Asus STRIX Z270H GAMING

[ASRock B550 Phantom Gaming 4/ac Onboard Devices Configuration](#)

Asus ASRock B550 Phantom Gaming 4/ac

[TUF Z270 MARK 1 Onboard Devices Configuration](#)

Asus TUF Z270 MARK 1

[TUF X470-PLUS GAMING Onboard Devices Configuration](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Onboard Devices Configuration](#)

Asus PRIME X570-P

[STRIX Z270H GAMING Onboard Devices Configuration](#)

Asus STRIX Z270H GAMING

[ROG CROSSHAIR VIII IMPACT Onboard Devices Configuration](#)

Asus ROG CROSSHAIR VIII IMPACT