

Apm Configuration - Asus SABERTOOTH Z170 Manual

 
1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174



•

[Table of Contents](#)

•

Bookmarks



Asmedia USB 3.1 Controller [Enabled]

This item allows you to disable or enable the Intel

Configuration options: [Disabled] [Enabled]

Asmedia USB 3.1 Battery Charging Support [Disabled]

This item allows you to disable or enable the ASMedia USB 3.1 Battery Charging Support.

Configuration options: [Disabled] [Enabled]

USB Type C Power Switch [Auto]

[Auto]

The system will automatically detect your USB Type C devices and provide suitable power if needed.

[Enabled]

The USB Type C port will always provide power to your devices.

Intel LAN Controller [Enabled]

This item allows you to enable or disable the Intel LAN1/2 controllers.

Configuration options: [Disabled] [Enabled]

The following item appears only when you set the Intel LAN Controller to [Enabled].

Intel PXE Option ROM [Disabled]

This item allows you to enable or disable the PXE OptionRom of the Intel controller.

Configuration options: [Enabled] [Disabled]

3.6.9

APM Configuration

ErP Ready [Disabled]

This item allows you to switch off some power at S4+S5 or S5 to get the system ready for ErP requirement. When set to [Enabled], all other PME options are switched off.

Configuration options: [Disabled] [Enabled (S4+S5)] [Enabled (S5)]

Restore AC Power Loss [Power Off]

This item allows your system to go to ON state, OFF state, or both states after an AC power loss. When setting your system to [Last State], it goes to the previous state before the AC power loss.

Configuration options: [Power Off] [Power On] [Last State]

SABERTOOTH Z170 S

USB 3.1 controller of your system.

®

LAN

®

3-35



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
96
97
98
99
100
101
102
103

Quick Links:

[Motherboard Layout](#)

[Internal Connectors](#)

[Sata Device Connection](#)

[Front I/O Connector](#)

Related Manuals for Asus SABERTOOTH Z170

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard ASUS Z170-K User Manual](#)

(85 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus Z170M-PLUS User Manual](#)

(89 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Manual](#)

(176 pages)

[Motherboard Asus Z170I PRO GAMING User Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus SABERTOOTH Z170

[P5KPL-E Apm Configuration](#)

Asus P5KPL-E

[STRIX Z270F GAMING Apm Configuration](#)

Asus STRIX Z270F GAMING

[MAXIMUS VII HERO Apm Configuration](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Apm Configuration](#)

Asus STRIX Z270H GAMING

[TUF Z270 MARK 1 Apm Configuration](#)

Asus TUF Z270 MARK 1

[TUF X470-PLUS GAMING Apm Configuration](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Apm Configuration](#)

Asus PRIME X570-P

[STRIX Z270H GAMING Apm Configuration](#)

Asus STRIX Z270H GAMING