

Error Code And Self-Diagnostic Mode - Toshiba e-studio200i Service Handbook

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268

269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318

319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368

369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418

419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468

469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518

 
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568

569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618

619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668

669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718

719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762



•


[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

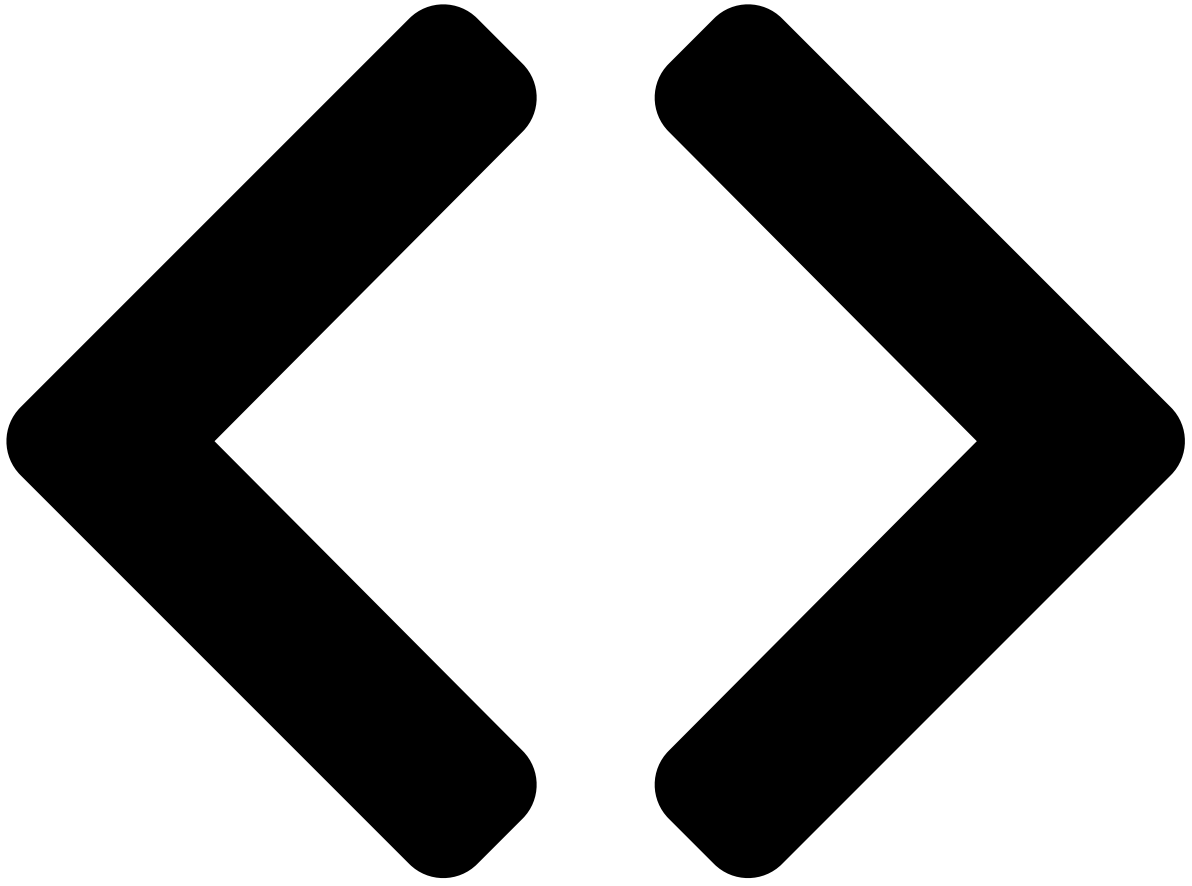

2.

ERROR CODE AND SELF-DIAGNOSTIC MODE

2.1

Error Code List

One of the following error codes is displayed at the upper right of the screen while pressing the [CLEAR] button and the digital key [8] simultaneously when the "CLEAR PAPER" or "CALL SERVICE" symbol is blinking.

2.1.1

Jam

Error code

Classification

--

E010

Paper exit jam

E020

E030

Other paper jam

E061

E062

E063

E064

E065

E090

E110

Paper misfeeding

E120

E130

E140

E150

© 2004 - 2010 TOSHIBA TEC CORPORATION All rights reserved

Contents

Jam not reaching the exit sensor: The paper which has passed through the fuser unit does not reach the exit sensor.

Stop jam at the exit sensor: The trailing edge of the paper does not pass the exit sensor after its leading edge has reached this sensor.

Power-ON jam: The paper is remaining on the paper transport path when power is turned ON.

Incorrect paper size setting for upper drawer: The size of paper in the 1st drawer differs from size setting of the equipment.

Incorrect paper size setting for lower drawer: The size of paper in the 2nd drawer differs from size setting of the equipment.

Incorrect paper size setting for PFP upper drawer: The size of paper in the 3rd drawer differs from size setting of the equipment.

Incorrect paper size setting for PFP lower drawer: The size of paper in the 4th drawer differs from size setting of the equipment.

Incorrect paper size setting for bypass tray: The size of paper in the bypass tray differs from size setting of the equipment.

HDD abnormality causes jam: Image data to be printed cannot be prepared.

ADU misfeeding (Paper not reaching the 1st transport sensor): The paper which has passed through ADU does not reach the 1st transport sensor during duplex printing.

Bypass misfeeding (Paper not reaching the 1st transport sensor): The paper fed from the bypass tray does not reach the 1st transport sensor.

Upper drawer misfeeding (Paper not reaching the 1st transport sensor): The paper fed from the upper

ManualsLib.com

drawer does not reach the 1st transport sensor.
 Lower drawer misfeeding (Paper not reaching the
 2nd transport sensor): The paper fed from the lower
 drawer does not reach the 2nd transport sensor.
 PFP upper drawer misfeeding (Paper not reaching
 the PFP upper drawer feed sensor): The paper fed
 from the PFP upper drawer does not reach the PFP
 upper drawer feed sensor.

e-STUDIO200L/202L/203L/230/230L/232/233/280/282/283

2 - 1

06/09

Troubleshooting

P. 5-1

P. 5-1

P. 5-2

P. 5-2

P. 5-2

P. 5-2

P. 5-2

P. 5-2

P. 5-3

P. 5-15

P. 5-16

P. 5-17

P. 5-18

P. 5-19

ERROR CODE AND SELF-DIAGNOSTIC MODE

--

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
34
35
36
37
38
39
40
41

Quick Links:

[Error Code and Self-Diagnostic Mode](#)

Chapters

[Table of Contents](#) 7

[OS Update/Ui Data Update](#) 617

[OS Update/Hd Data Update](#) 675

Troubleshooting

[TROUBLESHOOTING](#) 455

[Troubleshooting for the Image](#) 550

Related Manuals for Toshiba e-studio200l

[All in One Printer Toshiba e-STUDIO230L Service Handbook](#)

(758 pages)

[All in One Printer Toshiba e-studio200l Service Manual](#)

Multifunctional digital systems (708 pages)

[All in One Printer Toshiba e-STUDIO200L Service Manual](#)

Multifunctional digital systems (354 pages)

[All in One Printer Toshiba e-STUDIO200L/230/280 SERIES Service Manual](#)

(322 pages)

[All in One Printer Toshiba e-STUDIO200L Repair Manual](#)

Multifunctional digital systems (136 pages)

[All in One Printer Toshiba E-studio3511 Operator's Manual](#)

Multifunctional digital system (102 pages)

[All in One Printer Toshiba e-STUDIO230 User Manual](#)

Set up & start up basic copier operations key operator functions (37 pages)

[Digital systems Toshiba E-STUDIO352 Printing Manual](#)

Multifunctional digital systems (356 pages)

[All in One Printer Toshiba e-STUDIO202L Operator's Manual](#)

(350 pages)

[All in One Printer Toshiba E-STUDIO230 Operator's Manual](#)

Basic functions (316 pages)

[All in One Printer Toshiba e-STUDIO202L Scanning Manual](#)

(148 pages)

[All in One Printer Toshiba e-studio352 Network Fax Manual](#)

(126 pages)

[All in One Printer Toshiba e-STUDIO352 Quick Start Manual](#)

Multifunctional digital systems (92 pages)

[Printer Accessories Toshiba E-STUDIO AS/400 User Manual](#)

Print solution (52 pages)

[Printer Toshiba e-STUDIO 282 Sales Manual](#)

Toshiba printer sales guide (48 pages)

[All in One Printer Toshiba e-STUDIO202L Operator's Manual](#)

Multifunctional digital systems (20 pages)

Related Content for Toshiba e-studio200l

[e-STUDIO163 Error Code And Self-Diagnostic Mode](#)

Toshiba e-STUDIO163

[e-studio166 Error Code And Self-Diagnostic Mode](#)

Toshiba e-studio166

[e-Studio3511 Error Code And Self-Diagnostic Mode](#)

Toshiba e-Studio3511

[e-STUDIO 163 Error Code And Self-Diagnostic Mode](#)

Toshiba e-STUDIO 163

[e-STUDIO350 Error Code And Self-Diagnostic Mode](#)

Toshiba e-STUDIO350

[e-STUDIO181 Error Code And Self-Diagnostic Mode](#)

Toshiba e-STUDIO181

[e-STUDIO556 Self-Diagnostic Mode](#)

Toshiba e-STUDIO556

[e-STUDIO477S Self-Diagnostic Mode](#)

Toshiba e-STUDIO477S

This manual is also suitable for:

[E-studio230IE-studio232E-studio282E-studio203IE-studio233E-studio283](#) ... [Show all](#)