



# Automatic Operation; Automatic Operation (Auto Changeover) - Toshiba RAS-16SKVP-ND Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230



•



 
 




- 

Troubleshooting

•

## Bookmarks

Available languages

-  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More



## AUTOMATIC OPERATION

When you set the air conditioner to AUTO mode, it automatically selects cooling, heating, or fan only operation depending on the room temperature. (see page 18.)

The fan speed and louver are also automatically controlled.

### Start

a

#### button

Press this button to start the air conditioner.

b AUTO button (AUTO)

Press AUTO button.

c Temperature button (TEMP)

Set the desired temperature.

## AUTOMATIC OPERATION

When you set the air conditioner to AUTO mode, it automatically selects cooling, heating, or fan only operation depending on the room temperature. (see page 18.)

The fan speed and louver are also automatically controlled.

### Start

① button

Press this button to start the air conditioner.

② AUTO button (AUTO)

Press AUTO button.

③ Temperature button (TEMP)

- The OPERATION indicator (green) on the display panel of the indoor unit lights. The operating mode is selected according to the room temperature and operation starts after approximately 3 minutes.
- If the AUTO mode is uncomfortable, you can select the desired conditions manually. The fan speed and louver position can be changed, and MODE is also changed from AUTO to A when the fan speed or louver position is changed. The fan speed indicator is also shown.

**Stop button**

Press this button again to stop the air conditioner.

**AUTOMATIC OPERATION**

When you set the air conditioner to AUTO mode, it automatically selects cooling, heating, or fan only operation depending on the room temperature. (see page 18.)

**AUTOMATIC OPERATION (AUTO CHANGEOVER)**

When you set the air conditioner to A mode or switch over from AUTO operation because of a change in settings, the air conditioner automatically selects cooling, heating, or fan only operation depending on the room temperature. (

**Start button**

Press this button to start the air conditioner.

- Start**
- ① **power button**  
Press this button to start the air conditioner.
  - ② **AUTO button (AUTO)**  
Press AUTO button.
  - ③ **Temperature button (TEMP)**  
Set the desired temperature.

b Mode select button (MODE)  
Select A.

c Temperature button (TEMP)  
Set the desired temperature.

d Fan speed button (FAN)  
Select one of "AUTO" LOW, HIGH.

- The OPERATION indicator (green) on the display panel of the indoor unit lights. The operating mode is selected according to the room temperature and operation starts after approximately 3 minutes.
- If the AUTO mode is uncomfortable, you can select the desired conditions manually. The fan speed and louver position can be changed, and MODE is also changed from AUTO to A when the fan speed or louver position is changed. The fan speed indicator is also shown.

- The OPERATION indicator (green) on the display panel of the indoor unit lights. The operating mode is selected according to the room temperature and operation starts after approximately 3 minutes.

- The temperature, fan speed, and louver position can be changed. You can select the desired conditions manually.

**Stop button**

Press this button again to stop the air conditioner.

- Stop**
- ① **power button**  
Press this button again to stop the air conditioner.

**AUTOMATIC OPERATION (AUTO CHANGEOVER)**

When you set the air conditioner to A mode or switch over from AUTO operation because of a change in settings, the air conditioner automatically selects cooling, heating, or fan only operation depending on the room temperature. (see page 18.)

www.ilmalämpöpumput.com

8  
b  
c  
a  
see page 18.)

- Start**
- ① **power button**  
Press this button to start the air conditioner.
  - ② **Mode select button (MODE)**  
Select A.
  - ③ **Temperature button (TEMP)**  
Set the desired temperature.
  - ④ **Fan speed button (FAN)**  
Select one of "AUTO" LOW —, LOW+ — — —, MED — — — —, MED+ — — — — —, HIGH — — — — —.



[Previous Page](#)  
[Next Page](#)

1  
...  
9  
10  
11  
12  
13  
14  
15  
16

Quick Links:

[Air Conditioner](#)

[Remote Controller and Its Functions](#)

[Specifications](#)

## Related Manuals for Toshiba RAS-16SKVP-ND

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-107SKV Series Owner's Manual](#)

Toshiba split type air conditioners indoor/outdoor unit (3 pages)

[Air Conditioner Toshiba RAS-10N3AV2-A Service Manual](#)

Split type (116 pages)

[Air Conditioner Toshiba RAS-16SKV2-E1 Service Manual](#)

Toshiba split type air conditioner service manual (105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-13NKV-E Service Manual](#)

(96 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-10PKVPG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-05J2KVG-EE Service Manual](#)

Split type (135 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

## Related Content for Toshiba RAS-16SKVP-ND

[35S4KVPG-ND Automatic Operation](#)

Toshiba 35S4KVPG-ND

[35E2KVG-ND Automatic Operation](#)

Toshiba 35E2KVG-ND

[MMY-MUP0721HT9P-UL Outdoor Unit Automatic Backup Operation](#)

[Outline](#)

Toshiba MMY-MUP0721HT9P-UL

[RAS-35G3KVSG-ND Automatic Operation](#)

Toshiba RAS-35G3KVSG-ND

[RAS-B05CKVG-EE Automatic Operation](#)

Toshiba RAS-B05CKVG-EE

[RAS-M10N4KCV Automatic Operation](#)

Toshiba RAS-M10N4KCV

[RAS-M10N4KV Automatic Operation](#)

Toshiba RAS-M10N4KV

[RAS-24E2KVG-E Automatic Operation](#)

This manual is also suitable for:

[Ras-13skvp-ndRas-16savp-ndRas-13savp-ndRas-10savp-ndRas-10skvp-nd](#)