



# Usual Maintenance - Toshiba RAS-16SKVP-ND Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230



•









- 

Troubleshooting

•
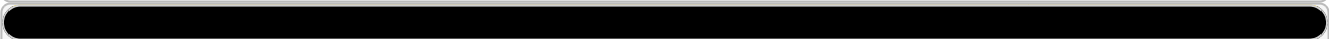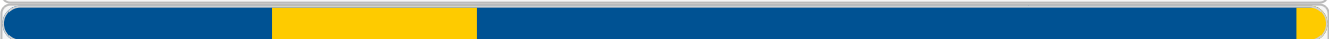
## Bookmarks

Available languages


-  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More



Toshiba Daiseikai ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy.

01\_OwnersManual\_EN.fm Page 20 Wednesday, January 10, 2007 3:54 PM

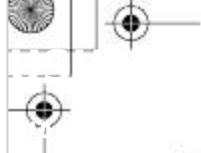

Before you clean the air conditioner, be sure to turn off the circuit breaker or main power switch.

### **Cleaning of indoor unit and remote controller**

- Use a dry cloth to wipe the indoor unit and remote controller.
- When the air conditioner is extremely dirty, use a cloth dipped in cold water to wipe the indoor unit.
- Never use a damp cloth on the remote controller.
- Do not use a chemical-based duster for wiping or leave such materials on the unit for extended periods of time. Doing so could damage or cause the surface of the unit to fade.
- Do not use benzine, thinner, polishing powder, or other solvents for cleaning.

These can cause the plastic surface to crack or deform.

**When not using the unit for at least 1 month**

- (1) Perform fan operation for 3 to 4 hours to dry the inside of the unit.
- If a high temperature setting is used with cooling operation, fan operation is performed.
- (2) Stop the air conditioner and turn off the circuit breaker.
- (3) Clean the air filters.
- (4) Remove the batteries from the remote controller.

**Check before operation**

- Check that the air filters are installed.
- Check that the air outlet and inlet of the outdoor unit are not blocked.

**Cleaning the air filter**

Clean the air filters every 2 weeks.  
 The performance of the air conditioner will degrade if the air filters are covered with dust.  
 Clean the air filters as often as possible.

**Preparation:**

1. Turn off the air conditioner using the remote controller.
2. Open the air inlet grille.

**1**

Open the air inlet grille.  
 Lift the air inlet grille up to the horizontal position.

**2**

Grasp the left and right handles of the air filter and lift it up slightly, and then pull it downward to take it out from the filter holder.

**3**

Use a vacuum cleaner to remove the dust from the filters or wash them with water.  
 After washing the air filters, dry them in the shade.

EN

20

[www.ilmalämpöpumput.com](http://www.ilmalämpöpumput.com)

Wipe with a dry cloth  
 Thinner  
 Cooling with  
 high  
 temperature  
 setting.  
 Air  
 filter



[Previous Page](#)  
[Next Page](#)

1  
...  
21  
22  
23  
24  
25  
26  
27  
28

Quick Links:

[Air Conditioner](#)

[Remote Controller and Its Functions](#)

[Specifications](#)

## Related Manuals for Toshiba RAS-16SKVP-ND

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-107SKV Series Owner's Manual](#)

Toshiba split type air conditioners indoor/outdoor unit (3 pages)

[Air Conditioner Toshiba RAS-10N3AV2-A Service Manual](#)

Split type (116 pages)

[Air Conditioner Toshiba RAS-16SKV2-E1 Service Manual](#)

Toshiba split type air conditioner service manual (105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-13NKV-E Service Manual](#)

(96 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-10PKVPG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-05J2KVG-EE Service Manual](#)

Split type (135 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

## Related Content for Toshiba RAS-16SKVP-ND

[MMY-MUP0801HT8P-E Maintenance](#)

Toshiba MMY-MUP0801HT8P-E

[MMY-MAP0806FT8P-E Maintenance](#)

Toshiba MMY-MAP0806FT8P-E

[RAS-M10S4MUVG-E Maintenance](#)

Toshiba RAS-M10S4MUVG-E

[RAS-M05G3YVG-E Maintenance](#)

Toshiba RAS-M05G3YVG-E

[MMD-UP0051BHP-E Maintenance](#)

Toshiba MMD-UP0051BHP-E

[RAV-HM1101KRTP-E Maintenance](#)

Toshiba RAV-HM1101KRTP-E

[RAV-HM MUTP Series Maintenance](#)

Toshiba RAV-HM MUTP Series

[MMD-UP0181HP-E Maintenance](#)

Toshiba MMD-UP0181HP-E

This manual is also suitable for:

[Ras-13skvp-ndRas-16savp-ndRas-13savp-ndRas-10savp-ndRas-10skvp-nd](#)