

Special Maintenance - Toshiba RAS-16SKVP-ND Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

 
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•



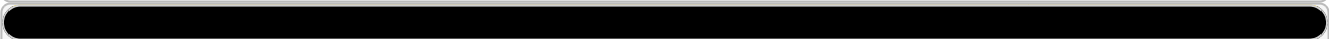
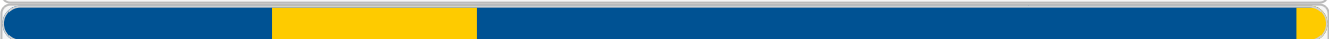




-

Troubleshooting

•

Bookmarks

Available languages

-  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More



SPECIAL MAINTENANCE

Cleaning the plasma pure filter

Preparation:

1. Turn off the air conditioner using the remote controller.
2. Turn off the power supply.

• Clean the plasma pure filter when the FILTER indicator (orange) turns on.
(This indicator turns on after PURE operation of about 1000 hours.)

• After cleaning is finished, push the RESET button on the indoor unit.

• Perform cleaning every six months.

• Even if the FILTER indicator does not turn on, clean the plasma pure filter whenever the unit makes a humming, clicking, or buzzing sound. If the indicator turns on during the night, the air conditioner can still be used until the morning without a problem, but be sure to perform cleaning as soon as possible.

1. Turn off the air conditioner using the remote controller.
 2. Turn off the power supply.
- Clean the plasma pure filter when the FILTER indicator (orange) turns on.
(This indicator turns on after PURE operation of about 1000 hours.)

• After cleaning is finished, push the RESET button on the indoor unit.

Lift up the air inlet grille until it clicks into place.

Grasp the left and right handles of the air filter and lift up slightly and then pull downward to remove the filter from the filter holder.

3

Take out the plasma pure filter.

- Grasp the handles, and then pull out as shown in a and b.

Checks after cleaning the plasma pure filter

1. Confirm the FILTER indicator does not turn on by activating PURE operation for one hour or more.

<If it does not turn on, it is normal.>

2. If the FILTER indicator turns on, turn off the air conditioner using the remote controller.

- a) Fitting of the plasma pure filter
- b) Fitting of the air inlet grille

And, reconfirm the FILTER indicator does not turn on by activating PURE operation for another one hour or more.

<If it does not turn on, this is normal.>

3. In case the FILTER indicator does turn on, please call a service representative.

Cleaning the plasma pure filter

Preparations

1. Turn off the air conditioner using the remote controller.
2. Turn off the power supply.

• Clean the plasma pure filter when the FILTER indicator (orange) turns on.
(This indicator turns on after PURE operation of about 1000 hours.)

• After cleaning is finished, push the RESET button on the indoor unit.

- Perform cleaning every six months or so.
- Even if the FILTER indicator does not turn on, clean the plasma pure filter whenever the unit makes a sound. If the indicator turns on during the night, the air conditioner can still be used until the morning.

• After cleaning is finished, clean as soon as possible.

EN

22

www.ilmalämpöpumput.com

1

2

- 1 Open the air inlet grille.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
23
24
25
26
27
28
29
30

Quick Links:

[Air Conditioner](#)

[Remote Controller and Its Functions](#)

[Specifications](#)

Related Manuals for Toshiba RAS-16SKVP-ND

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-107SKV Series Owner's Manual](#)

Toshiba split type air conditioners indoor/outdoor unit (3 pages)

[Air Conditioner Toshiba RAS-10N3AV2-A Service Manual](#)

Split type (116 pages)

[Air Conditioner Toshiba RAS-16SKV2-E1 Service Manual](#)

Toshiba split type air conditioner service manual (105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-13NKV-E Service Manual](#)

(96 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-10PKVPG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-05J2KVG-EE Service Manual](#)

Split type (135 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

Related Content for Toshiba RAS-16SKVP-ND

[MMY-MUP0801HT8P-E Maintenance](#)

Toshiba MMY-MUP0801HT8P-E

[MMY-MAP0806FT8P-E Maintenance](#)

Toshiba MMY-MAP0806FT8P-E

[RAS-M10S4MUVG-E Maintenance](#)

Toshiba RAS-M10S4MUVG-E

[RAS-M05G3YVG-E Maintenance](#)

Toshiba RAS-M05G3YVG-E

[MMD-UP0051BHP-E Maintenance](#)

Toshiba MMD-UP0051BHP-E

[RAV-HM1101KRTP-E Maintenance](#)

Toshiba RAV-HM1101KRTP-E

[RAV-HM MUTP Series Maintenance](#)

Toshiba RAV-HM MUTP Series

[MMD-UP0181HP-E Maintenance](#)

Toshiba MMD-UP0181HP-E

This manual is also suitable for:

[Ras-13skvp-ndRas-16savg-ndRas-13savg-ndRas-10savg-ndRas-10skvp-nd](#)