



Names Of Parts; Names And  
Functions Of Indicators And Controls  
On Indoor Unit - Toshiba  
RAS-16SKVP-ND Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230



•



 
 




- 

Troubleshooting


•

## Bookmarks

Available languages

-  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More

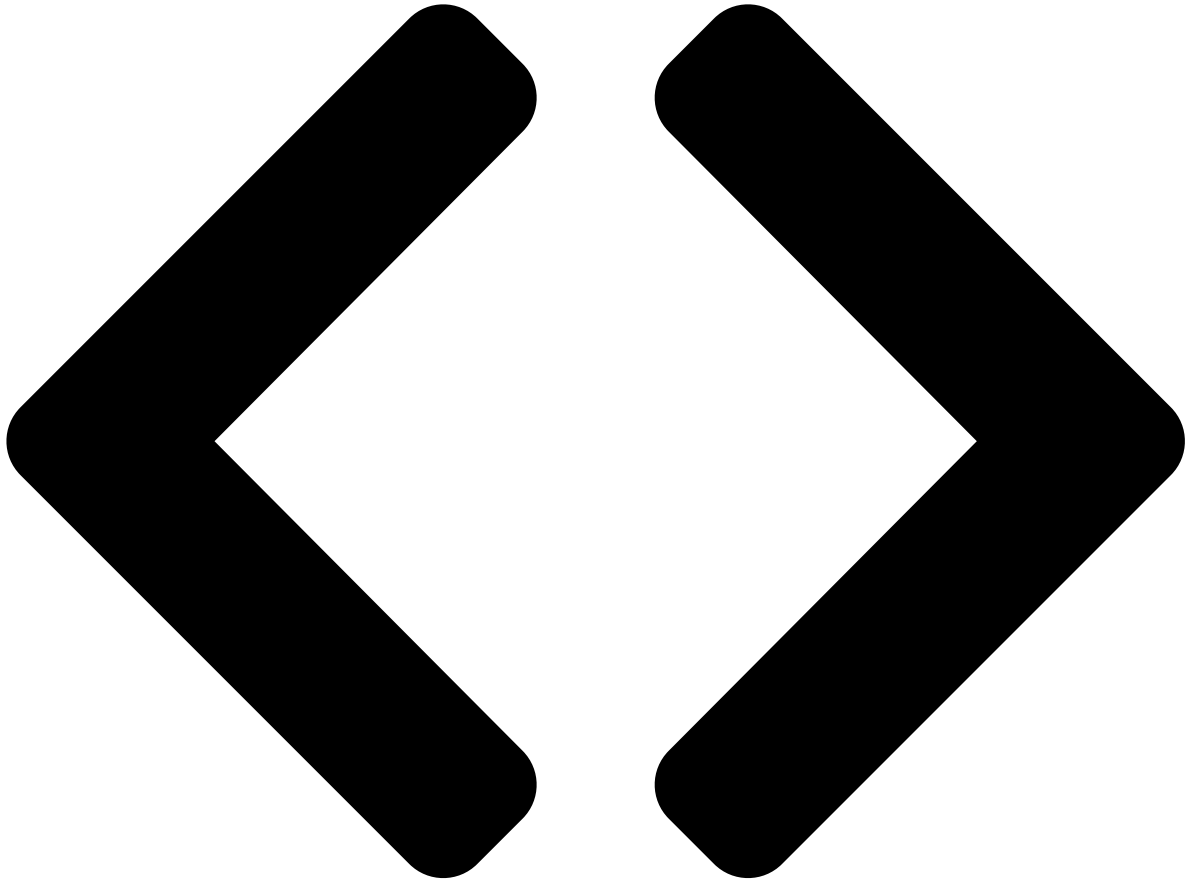

## NAMES OF PARTS

### Outdoor unit

a Refrigerant connecting pipe and electric wires

b Air inlet (Side and rear)

c Air outlet

### Indoor unit

d Room temperature sensor

e Front panel

f Air inlet grille

g Air filter

h Air outlet

i Horizontal air flow louver

Located at the back of the vertical air flow louver

## NAMES OF PARTS

### Outdoor unit

① Refrigerant connecting pipe and electric wires

② Air inlet (Side and rear)

③ Air outlet

### Indoor unit

④ Room temperature sensor

- j Vertical air flow louver
- k Display panel
- l Infrared signal receiver
- m Remote controller
- n Plasma pure filter

## NAMES AND FUNCTIONS OF INDICATORS AND CONTROLS ON INDOOR UNIT

### Outdoor unit

The operating states are shown below.

- a RESET button
- b FILTER indicator (Orange)
- c TIMER indicator (Yellow)
- d PURE indicator (Blue)
- e OPERATION indicator (Green)

- ① Refrigerant connecting pipe and electric wires
- ② Air inlet (Side and rear)
- ③ Air outlet

### Indoor unit

The operation indicators flash rapidly (5 times per second) when a safety protection feature is activated.


- f S.CLEAN indicator (Green)
- When the unit shuts down after having operated for 10 or more minutes in the cooling or dry mode, the cleaning operation is started automatically, and the S.CLEAN indicator turns on.

**RESET button** Located at the back of the vertical air flow louver.

The RESET button has the following two functions.

- Reset function
  - Temporary operation function
- Use when the FILTER indicator (orange) is on.
- Use when you misplace or lose the remote controller, or when its batteries are used up. (see page 19.)

- ④ Room temperature sensor
- ⑤ Front panel
- ⑥ Air inlet grille
- ⑦ Air filter
- ⑧ Air outlet
- ⑨ Horizontal air flow louver
- ⑩ Vertical air flow louver
- ⑪ Display panel
- ⑫ Infrared signal receiver
- ⑬ Remote controller
- ⑭ Plasma pure filter

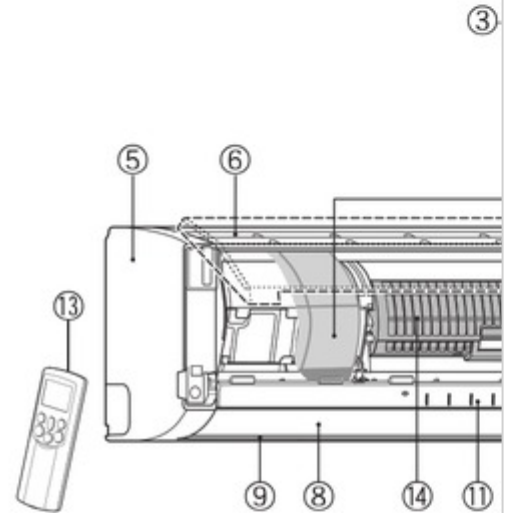

- f
- e
- m
- a
- see page 21.)
- 3

www.ilmalämpöpumput.com


- b
- c
- g
- i h
- n
- k
- l
- j
- b
- c
- d
- e
- a
- d
- f

## NAMES AND FUNCTIONS OF INDICATORS AND CONTROLS ON INDOOR UNIT

### Display panel

The operating states are shown below.

- ① RESET button
  - ② FILTER indicator (Orange)
  - ③ TIMER indicator (Yellow)
  - ④ PURE indicator (Blue)
  - ⑤ OPERATION indicator (Green)
- The operation indicators flash rapidly (5 times per second) when a safety protection feature is activated.
- ⑥ S.CLEAN indicator (Green)
- When the unit shuts down after having operated for 10 or more minutes in the cooling or dry mode, the cleaning operation is

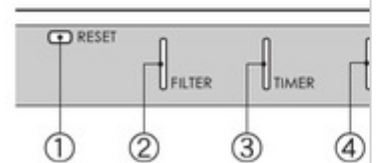



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
4  
5  
6  
7  
8  
9  
10  
11

Quick Links:

[Air Conditioner](#)

[Remote Controller and Its Functions](#)

[Specifications](#)

## Related Manuals for Toshiba RAS-16SKVP-ND

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-107SKV Series Owner's Manual](#)

Toshiba split type air conditioners indoor/outdoor unit (3 pages)

[Air Conditioner Toshiba RAS-10N3AV2-A Service Manual](#)

Split type (116 pages)

[Air Conditioner Toshiba RAS-16SKV2-E1 Service Manual](#)

Toshiba split type air conditioner service manual (105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-13NKV-E Service Manual](#)

(96 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-10PKVPG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-05J2KVG-EE Service Manual](#)

Split type (135 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

## Related Content for Toshiba RAS-16SKVP-ND

[MMY-MUP0801T8P Part Names](#)

Toshiba MMY-MUP0801T8P

[MMY-MUP0801HT8P-E Part Names](#)

Toshiba MMY-MUP0801HT8P-E

[RAS-22BKV-A1 Specifications Of Electrical Parts](#)

Toshiba RAS-22BKV-A1

[MMY-MAP0806FT8P-E Part Names Of Outdoor And Indoor Units](#)

Toshiba MMY-MAP0806FT8P-E

[RBM-Y1124FE Accessory Parts And Parts To Be Procured Locally](#)

Toshiba RBM-Y1124FE

[RAS-M10S4MUVG-E Part Names](#)

Toshiba RAS-M10S4MUVG-E

[RAS-M05G3YVG-E Part Names](#)

Toshiba RAS-M05G3YVG-E

[RBC-AXU31-UL Part Names And Functions](#)

Toshiba RBC-AXU31-UL

This manual is also suitable for:

[Ras-13skvp-ndRas-16savp-ndRas-13savp-ndRas-10savp-ndRas-10skvp-nd](#)