



# Remote Controller And Its Functions - Toshiba RAS-16SKVP-ND Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230



•



 
 




- 

Troubleshooting

•

## Bookmarks

Available languages

-  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More



## REMOTE CONTROLLER AND ITS FUNCTIONS

a Infrared signal transmitter

Transmits signals to the indoor unit.

b

**button**

Press the button to start operation. (A receiving beep is heard.) Press the button again to stop operation. (A receiving beep is heard.)

If no receiving sound is heard from the indoor unit, press the button again.

c Mode select button (MODE)

Press this button to select a mode. Each time you press the button, the modes cycle in order from A: Auto changeover control.

## REMOTE CONTROLLER AND ITS FUNCTIONS

① **Infrared signal transmitter**

Transmits signals to the indoor unit.

② **button**

Press the button to start operation. (A receiving beep is heard.) Press the button again to stop operation. (A receiving beep is heard.)

③ **Mode select button (MODE)**

Press this button to select a mode. Each time you press the button, the modes cycle in order from A: Auto changeover control.

④ **Automatic operation button**

Press this button to operate the indoor unit automatically.

⑤ **SLEEP MODE button**

Press this button to start sleep mode.

⑥ **MY COMFORT button**

Press this button to operate the indoor unit with the settings stored using the remote controller. (page 15)

: COOL,  
back to A.

(A receiving beep is heard.)  
Temperature button (

TEMP  
... The temperature setting is raised to 30°C.  
... The temperature setting is lowered to 17°C.

(A receiving beep is heard.)  
Fan speed button (FAN)

Press this button to select the fan speed. When you select AUTO, the fan speed is automatically adjusted according to the room temperature. You can also manually select the desired fan speed from five available settings.

(LOW  
, LOW+  
, MED  
HIGH  
) (A receiving beep is heard.)

Auto louver button (SWING)

Press this button to swing the louver. (A receiving beep is heard.)  
Press the button again to stop the louver from swinging. (A receiving beep is heard.)

Set louver button (FIX)

Press this button to adjust the air flow direction. (A receiving beep is heard.)

ON timer button (ON)

Use this button to change the clock and ON timer times.  
To move up the time, press ▲  
To move down the time, press ▼

OFF timer button (OFF)

Use this button to change the OFF timer times.  
To move up the time, press ▲  
To move down the time, press ▼

Reserve button (SET)

Press this button to store the time settings. (A receiving beep is heard.)

Cancel button (CLR)

Press this button to cancel the ON timer and OFF timer. (A receiving beep is heard.)

High power button (HI POWER)

Press this button to start high power operation. (see page 18.)

Memory button (MEMO)

Press this button to read from the memory the setting indicated on the remote controller and until the mark is displayed. (

EN  
: DRY,  
: HEAT and  
)  
, MED+  
, see page 16.)  
, see page 16.)  
of the ON  
button.  
ON  
of the ON  
button.  
ON  
of the OFF

## REMOTE CONTROLLER AND ITS FUNCTIONS

① **Infrared signal transmitter**  
Transmits signals to the indoor unit.

② **Power button**  
Press the button to start operation. (A receiving beep is heard.) Press the button again to stop operation. (A receiving beep is heard.)  
If no receiving sound is heard from the indoor unit, press the button again.

③ **Mode select button (MODE)**  
Press this button to select a mode. Each time you press the button, the modes cycle in order from A: Auto changeover control, ☆: COOL, ☹: DRY, ☀: HEAT and back to A. (A receiving beep is heard.)

④ **Temperature button (TEMP)**

▲ ... The temperature setting is raised to 30°C.  
▼ ... The temperature setting is lowered to 17°C.  
(A receiving beep is heard.)

⑤ **Fan speed button (FAN)**  
Press this button to select the fan speed. When you select AUTO, the fan speed is automatically adjusted according to the room temperature. You can also manually select the desired fan speed from five available settings.

(LOW — LOW+ — MED — MED+ — HIGH) (A receiving beep is heard.)

⑥ **Auto louver button (SWING)**  
Press this button to swing the louver. (A receiving beep is heard.)  
Press the button again to stop the louver from swinging. (A receiving beep is heard.) (see page 16.)

⑦ **Set louver button (FIX)**  
Press this button to adjust the air flow direction. (A receiving beep is heard.) (see page 16.)

⑧ **ON timer button (ON)**  
Use this button to change the clock and ON timer times.  
To move up the time, press ▲ of the ON button.  
To move down the time, press ▼ of the ON button.

⑨ **OFF timer button (OFF)**  
Use this button to change the OFF timer times.  
To move up the time, press ▲ of the OFF button.  
To move down the time, press ▼ of the OFF button.

⑩ **Reserve button (SET)**  
Press this button to store the time settings. (A receiving beep is heard.)

⑪ **Cancel button (CLR)**  
Press this button to cancel the ON timer and OFF timer. (A

⑭ **Automatic operation button**  
Press this button to operate the unit automatically. (A receiving beep is heard.)


⑮ **SLEEP MODE button**  
Press this button to start sleep mode operation. (A receiving beep is heard.)

⑯ **MY COMFORT button**  
Press this button to operate the unit with the settings stored using the My Comfort function. (see page 15.)

⑰ **PURE button (PURE)**  
Press this button to start the Pure mode operation. Press the button again to stop the operation.

⑱ **Off timer button (OFF)**  
Press this button to start the OFF timer operation. You can select the OFF timer settings (1, 3, 5 or 9 hours).

⑲ **8°C operation button (8°C)**  
Press this button to start the 8°C operation. (see page 10.)

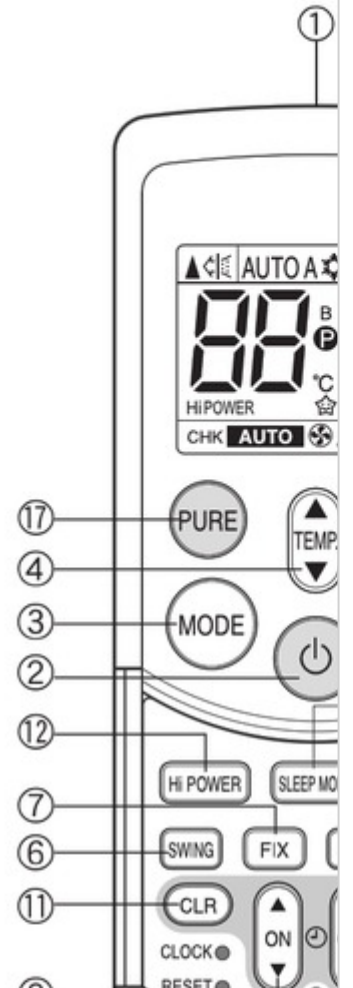



button.  
of the OFF  
button.  
see

see page 15.)

www.ilmalämpöpumput.com

n Automatic operation button (AUTO)

Press this button to operate the air conditioner

automatically.

(A receiving beep is heard.)

o SLEEP MODE button

Press this button to start sleep

operation. (A receiving beep is heard.)

o MY COMFORT button

Press this button to operate the air conditioner according to

the settings stored using the MEMO button.

page 15.)

o PURE button (PURE)

Press this button to start the electrical air purifying

operation.

Press the button again to stop operation.

o Off timer button (OFF)

Press this button to start the OFF timer operation.

You can select the OFF timer time from among four

settings (1, 3, 5 or 9 hours).

o 8°C operation button (8°C)

Press this button to start the 8°C set temperature heating

operation. (

see page 10.)

q

d

c

b

l

g

f

k

h

4

see page 18.)

see page 18.)

see

a

n

p

o

m

e

r

j

## REMOTE CONTROLLER AND ITS FUNCTIONS

### ① Infrared signal transmitter

Transmits signals to the indoor unit.

### ② Start button

Press the button to start operation. (A receiving beep is

heard.) Press the button again to stop operation. (A

receiving beep is heard.)

If no receiving sound is heard from the indoor unit, press

the button again.

### ③ Mode select button (MODE)

Press this button to select a mode. Each time you press

the button, the modes cycle in order from A: Auto

changeover control, : COOL, : DRY, : HEAT and

back to A.

(A receiving beep is heard.)

### ④ Temperature button (TEMP)

The temperature setting is raised to 30°C.

▼ ... The temperature setting is lowered to 17°C.

(A receiving beep is heard.)

### ⑤ Fan speed button (FAN)


Press this button to select the fan speed. When you select

AUTO, the fan speed is automatically adjusted according to

the room temperature. You can also manually select the

desired fan speed from five available settings.

(LOW , LOW+ , MED , MED+ ,

HIGH ) (A receiving beep is heard.)

### ⑥ Auto louver button (SWING)

Press this button to swing the louver. (A receiving beep is

heard.)

Press the button again to stop the louver from swinging. (A

receiving beep is heard.) (see page 16.)


### ⑦ Set louver button (FIX)

Press this button to adjust the air flow direction. (A

receiving beep is heard.) (see page 16.)

### ⑧ ON timer button (ON)


Use this button to change the clock and ON timer times.

To move up the time, press ▲ of the ON  button.

To move down the time, press ▼ of the ON  button.

### ⑨ OFF timer button (OFF)

Use this button to change the OFF timer times.

To move up the time, press ▲ of the OFF  button.

To move down the time, press ▼ of the OFF  button.

### ⑩ Reserve button (SET)

Press this button to store the time settings. (A receiving

beep is heard.)

### ⑪ Cancel button (CLR)

Press this button to cancel the ON timer and OFF timer. (A

### ⑭ Automatic operation button

Press this button to operate the

air conditioner

automatically.

(A receiving beep is heard.) (

### ⑮ SLEEP MODE button

Press this button to start sleep

### ⑯ MY COMFORT button

Press this button to operate the

air conditioner according to

the settings stored using the

MEMO button.

### ⑰ PURE button (PURE)

Press this button to start the

electrical air purifying

operation.

Press the button again to stop

### ⑱ Off timer button (OFF)

Press this button to start the

OFF timer operation.

You can select the OFF timer


settings (1, 3, 5 or 9 hours).

### ⑲ 8°C operation button (8°C)

Press this button to start the

8°C set temperature heating

operation. (see page 10.)

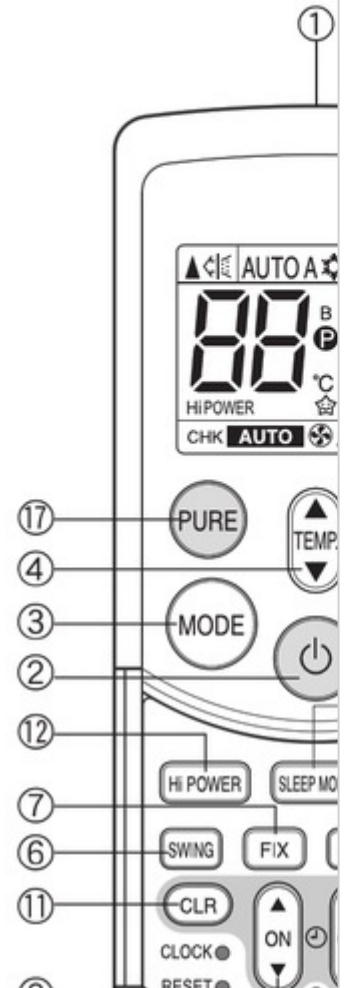



[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1  
...  
5  
6  
7  
8  
9  
10  
11  
12

Quick Links:

[Air Conditioner](#)

[Remote Controller and Its Functions](#)

[Specifications](#)

## Related Manuals for Toshiba RAS-16SKVP-ND

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-107SKV Series Owner's Manual](#)

Toshiba split type air conditioners indoor/outdoor unit (3 pages)

[Air Conditioner Toshiba RAS-10N3AV2-A Service Manual](#)

Split type (116 pages)

[Air Conditioner Toshiba RAS-16SKV2-E1 Service Manual](#)

Toshiba split type air conditioner service manual (105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-13NKV-E Service Manual](#)

(96 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-10PKVPG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-05J2KVG-EE Service Manual](#)

Split type (135 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

## Related Content for Toshiba RAS-16SKVP-ND

[RAS-24N3KV2-A Remote Controller And Its Functions](#)

Toshiba RAS-24N3KV2-A

[RAS-18, 22SKV-E Remote Controller And Its Functions](#)

Toshiba RAS-18, 22SKV-E

[RAV-SM562XT-E Remote Controller And Its Functions](#)

Toshiba RAV-SM562XT-E

[RAS-18SAV2-E1 Remote Controller And Its Functions](#)

Toshiba RAS-18SAV2-E1

[RAV-SM562KRT-E Wireless Remote Controller And Its Functions](#)

Toshiba RAV-SM562KRT-E

[RAS-M24N3KV2-E Remote Controller And Its Functions](#)

Toshiba RAS-M24N3KV2-E

[RAS-M10PKVP-E Remote Controller And Its Functions](#)

Toshiba RAS-M10PKVP-E

[RAS-M10PKVP-E Remote Controller And Its Functions](#)

Toshiba RAS-M10PKVP-E

This manual is also suitable for:

[Ras-13skvp-ndRas-16savp-ndRas-13savp-ndRas-10savp-ndRas-10skvp-nd](#)