

Names And Functions Of Indicators On Remote Controller; Preparation And Check Before Use - Toshiba RAS-16SKVP-ND Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

 
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•



 
 


 

-

Troubleshooting

•

Bookmarks

Available languages

-  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More



NAMES AND FUNCTIONS OF INDICATORS ON REMOTE CONTROLLER

Display

All indicators, except for the clock time indicator, are displayed by pressing the

a Transmission mark

This transmission mark (▲) indicates when the remote controller transmits signals to the indoor unit.

b Mode indicator

Indicates the current operation mode.

(AUTO: Automatic control, A: Auto changeover control, : HEAT)

c Temperature indicator

Indicates the temperature setting (17°C to 30°C).

d PURE indicator

Shows that the electrical air-purifying operation is in progress.

NAMES AND FUNCTIONS OF INDICATORS ON REMOTE CONTROLLER

Display



All indicators, except for the clock time indicator, are displayed by pressing the  button.

① Transmission mark

This transmission mark (▲) indicates when the remote controller transmits signals to the indoor unit.

② Mode indicator

Indicates the current operation mode.

(AUTO: Automatic control, A: Auto changeover control, : COOL, : DRY,



Indicates the selected fan speed. AUTO or one of five fan speed levels (LOW, MED+, MED, HIGH, OFF)

LOW+, MED+, MED, HIGH, OFF

Indicates AUTO when the operating mode is either AUTO or TIMER and clock time indicator

The time setting for timer operation or the clock time is indicated

The current time is always indicated except during TIMER operation

Indicates when Hi POWER operation starts

Press the Hi POWER button to start and press it again to stop operation.

(MEMORY) indicator

Flashes for 3 seconds when the MEMO button is pressed during operation. The mark is flashing

Press another button to turn off the mark.

SLEEP MODE indicator

Indicates when the SLEEP MODE is activated.

Press the SLEEP MODE button to start and press it again to stop operation.

A, B change indicator remote controller

When the remote controller switching function is set, "B" appears in the remote controller display. (When the remote controller setting is "A", there is no indication at this position.)

FAN speed indicator

Indicates the selected fan speed. AUTO or one of five fan speed levels (LOW, MED+, MED, HIGH, OFF)

Indicates AUTO when the operating mode is either AUTO or TIMER and clock time indicator

The time setting for timer operation or the clock time is indicated

The current time is always indicated except during TIMER operation.

Indicates when Hi POWER operation starts.

Press the Hi POWER button to start and press it again to stop operation.

(MEMORY) indicator

Flashes for 3 seconds when the MEMO button is pressed during operation. The mark is flashing

Press another button to turn off the mark.

SLEEP MODE indicator

Indicates when the SLEEP MODE is activated.

Press the SLEEP MODE button to start and press it again to stop operation.

A, B change indicator remote controller

When the remote controller switching function is set, "B" appears in the remote controller display. (When the remote controller setting is "A", there is no indication at this position.)

Remote controller switching function

If two indoor units are installed in the same room or adjoining rooms, both units may start and the remote controller is operated. This can be prevented by setting the switching function so that each indoor unit is operated only by the corresponding remote controller.

To use the remote controller switching function, contact the air conditioner dealer or the installation company.

In the illustration, all indicators are shown for purposes of explanation. During operation, only the relevant indicators are shown on the remote controller.

In the illustration, all indicators are shown

for purposes of explanation. During

operation, only the relevant indicators are

shown on the remote controller.

In the illustration, all indicators are shown

for purposes of explanation. During

operation, only the relevant indicators are

shown on the remote controller.

In the illustration, all indicators are shown

for purposes of explanation. During

operation, only the relevant indicators are

shown on the remote controller.

NAMES AND FUNCTIONS OF INDICATORS ON REMOTE CONTROLLER

Display

All indicators, except for the clock time indicator, are displayed by pressing the button.

① Transmission mark

This transmission mark () indicates when the remote controller transmits signals to the indoor unit. The mark is flashing

② Mode indicator

Indicates the current operation mode.

(AUTO: Automatic control, A: Auto changeover control, : COOL, : DRY, : HEAT)

③ Temperature indicator

Indicates the temperature setting (17°C to 30°C).

④ PURE indicator

Shows that the electrical air purifying operation is in progress.

⑤ FAN speed indicator

Indicates the selected fan speed. AUTO or one of five fan speed levels (LOW, MED+, MED, HIGH, OFF)

Indicates AUTO when the operating mode is either AUTO or TIMER and clock time indicator

The time setting for timer operation or the clock time is indicated

The current time is always indicated except during TIMER operation.

⑦ Hi POWER indicator

Indicates when Hi POWER operation starts.

Press the Hi POWER button to start and press it again to stop operation.

⑧ (MEMORY) indicator

Flashes for 3 seconds when the MEMO button is pressed during operation. The mark is flashing

⑨ SLEEP MODE indicator

Indicates when the SLEEP MODE is activated.

Press the SLEEP MODE button to start and press it again to stop operation.

A, B change indicator remote controller

When the remote controller switching function is set, "B" appears in the remote controller display. (When the remote controller setting is "A", there is no indication at this position.)

Remote controller switching function

- If two indoor units are installed in the same room or adjoining rooms, both units may start and the remote controller is operated. This can be prevented by setting the switching function so that each indoor unit is operated only by the corresponding remote controller.
- To use the remote controller switching function, contact the air conditioner dealer or the installation company.



In the illustration, all indicators are shown for purposes of explanation. During operation, only the relevant indicators are shown on the remote controller.

PREPARATION AND CHECK BEFORE USE

Loading the remote controller batteries

a Remove the cover, and insert the batteries.

b Press the RESET button. The clock time indicator flashes. Press the RESET button using an object with a narrow tip.

c Reattach the cover.

Remote controller switching function

- If two indoor units are installed in the same room or adjoining rooms, both units may start and the remote controller is operated. This can be prevented by setting the switching function so that each indoor unit is operated only by the corresponding remote controller.
- To use the remote controller switching function, contact the air conditioner dealer or the installation company.

PREPARATION AND CHECK BEFORE USE

Loading the remote controller batteries

① Remove the cover, and insert the batteries.

② Press the RESET button.

The clock time indicator flashes. Press the RESET button using an object with a narrow tip.

③ Reattach the cover.





[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
6
7
8
9
10
11
12
13

Quick Links:

[Air Conditioner](#)

[Remote Controller and Its Functions](#)

[Specifications](#)

Related Manuals for Toshiba RAS-16SKVP-ND

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-107SKV Series Owner's Manual](#)

Toshiba split type air conditioners indoor/outdoor unit (3 pages)

[Air Conditioner Toshiba RAS-10N3AV2-A Service Manual](#)

Split type (116 pages)

[Air Conditioner Toshiba RAS-16SKV2-E1 Service Manual](#)

Toshiba split type air conditioner service manual (105 pages)

[Air Conditioner Toshiba RAS-B10 Series Installation Manual](#)

(68 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-13NKV-E Service Manual](#)

(96 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-07BKVG-E Service Manual](#)

Split type (126 pages)

[Air Conditioner Toshiba RAS-10PKVPG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-05J2KVG-EE Service Manual](#)

Split type (135 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

Related Content for Toshiba RAS-16SKVP-ND

[MMY-MAP0806FT8P-E Part Names And Functions Of The Remote Controller](#)

Toshiba MMY-MAP0806FT8P-E

[RAS-M10S4MUVG-E Part Names And Functions Of The Remote Controller](#)

Toshiba RAS-M10S4MUVG-E

[RAS-M05G3YVG-E Request To Constructor Or Dealer 2 Part Names And Functions Of The Remote Controller](#)

Toshiba RAS-M05G3YVG-E

[RAV-HM301MUTP-E Part Names And Functions Of The Remote Controller](#)

Toshiba RAV-HM301MUTP-E

[RAV-HM301U1TP-E Part Names And Functions Of The Remote Controller](#)

Toshiba RAV-HM301U1TP-E

[MMK-UP0271HP-E Names And Functions Of Indications On Wireless Remote Controller](#)

Toshiba MMK-UP0271HP-E

[Carrier MMD-UP0481HFP-UL Part Names And Functions Of The Remote Controller](#)

Toshiba Carrier MMD-UP0481HFP-UL

[MMK-UP0301HP-UL Names And Functions Of Indications On Wireless Remote Controller](#)

Toshiba MMK-UP0301HP-UL

This manual is also suitable for:

[Ras-13skvp-ndRas-16savp-ndRas-13savp-ndRas-10savp-ndRas-10skvp-nd](#)