



# Indoor Unit Installation - Toshiba RAS-10SKVP-ND Installation Manual

 


1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132



•









[Table of Contents](#)



•
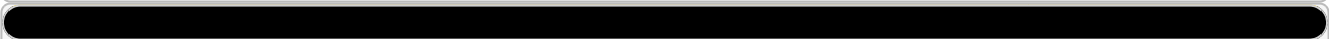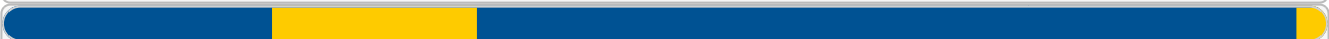
## Bookmarks

Available languages

-  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More



## Indoor Unit Installation

InstallationManual.book Page 11 Tuesday, January 9, 2007 3:22 PM

1. Pass the pipe through the hole in the wall, and hook the indoor unit on the installation plate at the upper hooks.
2. Swing the indoor unit to right and left to confirm that it is firmly hooked on the installation plate.
- 3.

While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate. Pull the indoor unit toward you to confirm that it is firmly hooked on the installation plate.

- For detaching the indoor unit from the installation plate pull the indoor unit toward you while pushing the bottom up at the specified places.
3. While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate. Pull confirm that it is firmly hooked on the installation plate.

### Drainage

 
1. Run the drain hose at a downward sloped angle.

### NOTE

- Hole should be made at a slight downward slant on the outdoor side.
- 2.

### Indoor Unit Installation

1. Pass the pipe through the hole in the wall, and hook the indoor unit on the installation plate at the
2. Swing the indoor unit to right and left to confirm that it is firmly hooked on the installation plate.
3. While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate. Pull

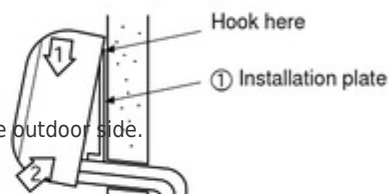

Put water in the drain pan and make sure that the water is being drained outside.

3.

When connecting extension drain hose, insulate the connection part of extension drain hose with shield pipe.

**CAUTION**

Install the drain pipe for proper drainage. Improper drainage can result in water dripping inside the room.

This air conditioner has been designed to drain water collected from

condensation which forms on the back of the indoor unit, to the drain pan.

Therefore, do not locate the power cord and other parts at a height above the

drain guide.

**Indoor Unit Installation**

Hook here

Installation plate

Hook

Do not route the drain hose upwards.

50 mm or more

Do not put the drain hose end into water.

Shield pipe

Inside the room

Drain hose

Press (unhook)

Push

Push

Do not form the drain hose into a waved shape.

Extension drain hose

Space for pipes

**11**

 
 
Do not put the drain hose end in a drainage ditch.

Wall


Drain guide

**EN**

1. Pass the pipe through the hole in the wall, and hook the indoor unit on the installation plate at the
2. Swing the indoor unit to right and left to confirm that it is firmly hooked on the installation plate.
3. While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate. Pull confirm that it is firmly hooked on the installation plate.

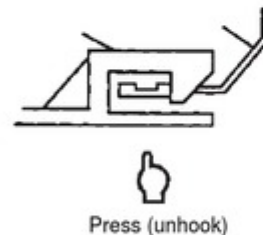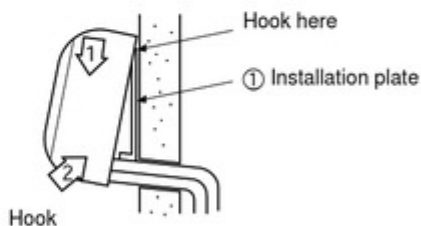

 For detaching the indoor unit from the installation plate pull the indoor unit toward you while pushing places.

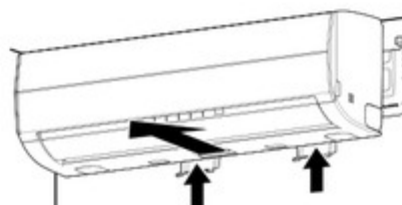

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
10  
11  
12  
13  
14  
15  
16  
17



Quick Links:

[Installation Manual](#)

[Air Conditioner](#)

[Installation Diagram of Indoor and Outdoor...](#)

[Electrical Work](#)

[Test Operation](#)

## Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKV2 Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-07SKHP-E Service Manual](#)

(71 pages)

[Air Conditioner Toshiba RAS-M18SAH-E Service Manual](#)

Multi split wall type (71 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-10SKVP-ND

[RAS-25N4KVPG-ND In Case Of Indoor Unit Is Fixed To Installation Plate With Screws](#)

Toshiba RAS-25N4KVPG-ND

[MMK-UP0051DHPL-E Installation Of Indoor Unit](#)

Toshiba MMK-UP0051DHPL-E

[RAS-M05G3KVSG-E Installation Diagram Of Indoor Unit](#)

Toshiba RAS-M05G3KVSG-E

[RAV-SM561KRT-E Installation Of Indoor Unit](#)

Toshiba RAV-SM561KRT-E

[MMY-SUG0801MT8P-E Indoor Unit Installation](#)

Toshiba MMY-SUG0801MT8P-E

[Super Modular Unit MMU-AP0091H Indoor Unit Installation](#)

Toshiba Super Modular Unit MMU-AP0091H

[RAS-25E2KVPG-ND In Case Of Indoor Unit Is Fixed To Installation Plate With Screws](#)

Toshiba RAS-25E2KVPG-ND

[RAS-M10SMUV-E Installation Of Indoor Unit](#)

Toshiba RAS-M10SMUV-E

This manual is also suitable for:

Ras-10savp-ndRas-13skvp-ndRas-13savp-ndRas-16savp-ndRas-16skvp-nd