


Installation Diagram Of Indoor And Outdoor Units - Toshiba RAS-10SKVP- ND Installation Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

 118
119
120
121
122
123
124
125
126
127
128
129
130
131
132











•

[Table of Contents](#)

•

  Bookmarks

Available languages

 -  EN
-  FR
-  DE
-  SE
-  RU
-  DK
-  FI
-  NO

More



2 INSTALLATION DIAGRAM OF INDOOR AND OUTDOOR UNITS

InstallationManual.book Page 3 Tuesday, January 9, 2007 3:22 PM

b Wireless remote controller

Air filters

d Remote controller holder

g Remote controller holder

mounting screw

Before installing the wireless

remote controller

• With the remote controller

cover removed, correctly

load the supplied batteries

while observing their


polarity.

b Wireless remote controller

Cover

c Batteries

2 INSTALLATION DIAGRAM OF INDOOR AND OUTDOOR UNITS

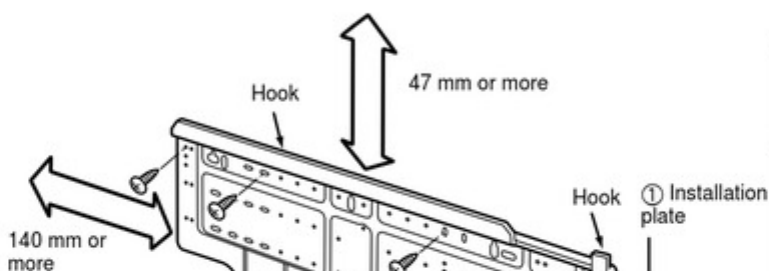

Hook

140 mm or more

Hook

e Plasma pure filter

80 mm or more only

when unobstructed to

the front and both sides

In principle,

leave open

(C)

100 mm or more

from wall

200 mm or more

(B)

When installing the

outdoor unit, leave

open in at least two

of directions (A),

Ensure sufficient

(B), (C) and (D)

space to allow

shown in the right

drainage

figure.

47 mm or more

a Installation

Hook

plate

74 mm or more

f Mounting screw

Z

Shield pipe

(for extension

drain hose)

Y

50 mm or more

from wall

As shown in the

figure, position

power cord and

(D)

connecting

cable

downward, and

lead out along

pipng

connection port.

(A)

250 mm or more

from wall

power cord

Extension drain hose

(Option: RB-821SV)

3

For the rear left and left

pipng

Wall

Insert the cushion between

the indoor unit and wall, and

tilt the indoor unit for better

installation work.

Do not allow the drain hose

to become slack.

Cut the piping

hole slightly


sloped

Make sure the drain hose is

sloped downward.

The auxiliary piping can be

2 INSTALLATION DIAGRAM OF INDOOR AND OUTDOOR UNITS

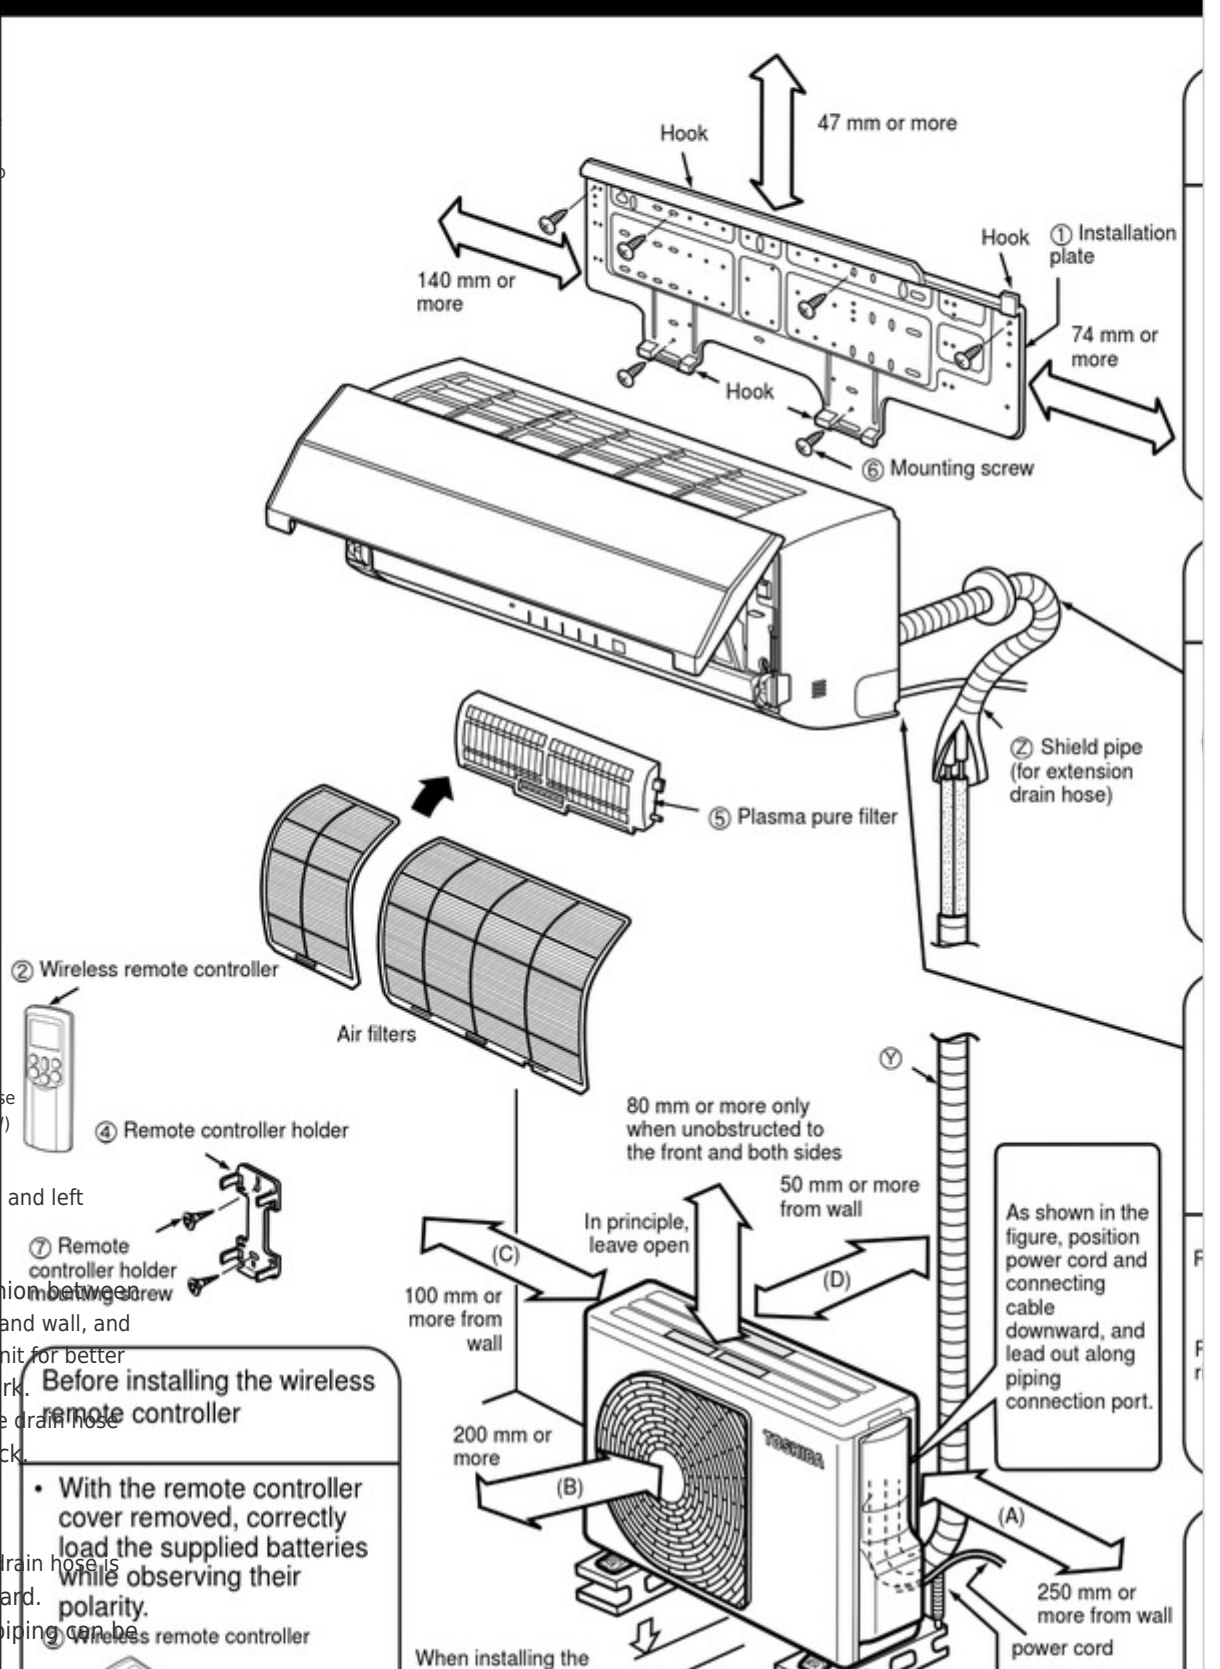

connected at the left, rear
left, rear right, right, bottom
right or bottom left as shown
below.

- Right
- Rear
- Left
- Rear left
- right
- Bottom right
- Bottom left

Insulate the refrigerant pipes
separately, not together.

6 mm thick heat resisting
polyethylene foam

EN

2 INSTALLATION DIAGRAM OF INDOOR AND OUTDOOR UNITS



[Table of Contents](#)

Next Page

1
2
3
4
5
6
7
8
9

Quick Links:

[Installation Manual](#)

[Air Conditioner](#)

[Installation Diagram of Indoor and Outdoor...](#)

[Electrical Work](#)

[Test Operation](#)

Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKV2 Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-07SKHP-E Service Manual](#)

(71 pages)

[Air Conditioner Toshiba RAS-M18SAH-E Service Manual](#)

Multi split wall type (71 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP-ND

[RAS-25S4KVPG-ND Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-25S4KVPG-ND

[RAS-B10N4KVRG-E1 Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-B10N4KVRG-E1

[RAS-07G3KVSG-TR Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-07G3KVSG-TR

[RAS-B16J2AVSG-E Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-B16J2AVSG-E

[RAS-B22N3KV2-E1 Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-B22N3KV2-E1

[RAS-16N3KV2 Series Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-16N3KV2 Series

[RAS-24J2KVG-EE Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-24J2KVG-EE

[RAS-B10PKVSG-E Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-B10PKVSG-E

This manual is also suitable for:

[Ras-10savp-ndRas-13skvp-ndRas-13savp-ndRas-16savp-ndRas-16skvp-nd](#)