



Toshiba D-VR660KU Owner's Manual

 
Dvd video recorder / video cassette recorder

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133



•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

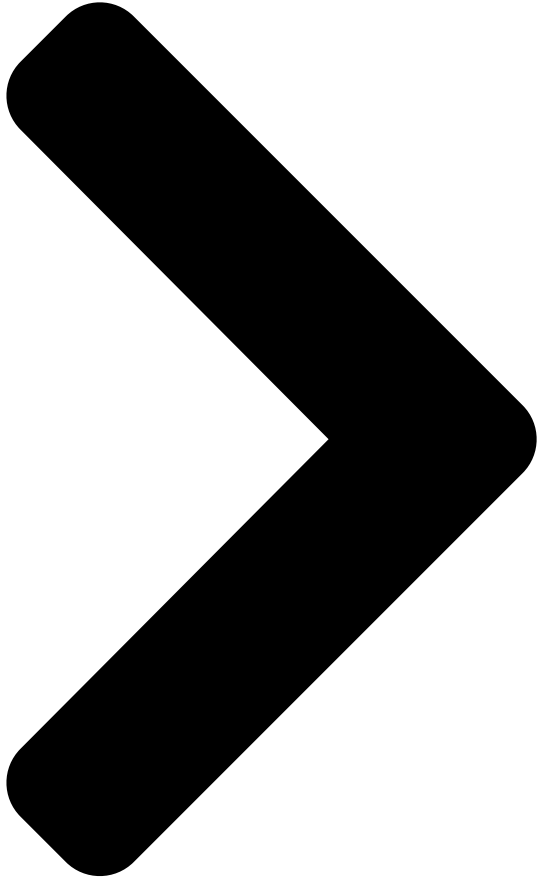

DVD VIDEO RECORDER / VIDEO CASSETTE RECORDER

D-VR660KU

OWNER'S MANUAL

© 2008 Toshiba Corporation

Downloaded From Disc-Player.com Toshiba Manuals

Owner's Record



The model number and serial number are on the back of your DVD Recorder. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this DVD Recorder.

Model number:

Serial number:

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Chapters

[Table of Contents](#) 6

[Information On Playback](#) 61

[List of the Default Settings](#) 96

Related Manuals for Toshiba D-VR660KU

[DVD VCR Combo Toshiba D-VR660KU Owner's Manual](#)

Dvd video recorder and video cassette recorder (133 pages)

[DVD VCR Combo Toshiba D-VR650KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (123 pages)

[Cassette Player Toshiba KT-4568 Service Data](#)

Stereo radio cassette player (16 pages)

[Cassette Player Toshiba KT-4087 Service Data](#)

Stereo radio cassette recorder (16 pages)

[Cassette Player Toshiba KT-R2 Instruction Manual](#)

Stereo cassette recorder (15 pages)

[Cassette Player Toshiba KT-S1 Service Data](#)

Stereo cassette player (16 pages)

[Cassette Player Toshiba PC-E70 Manual](#)

Stereo cassette deck (19 pages)

[Cassette Player Toshiba RT-S933 Instruction Manual](#)

Stereo radio cassette recorder (23 pages)

[Cassette Player Toshiba PC-X88AD Service Data](#)

Stereo (36 pages)

[Cassette Player Toshiba KT-RS1 Service Data](#)

Stereo cassette player (16 pages)

[Cassette Player Toshiba KT-V890 Manual](#)

Stereo radio cassette recorder (16 pages)

[Cassette Player Toshiba SD-22VB Service Manual](#)

Dvd video player & video cassette recorder (111 pages)

[Cassette Player Toshiba RT-7057 Service Data](#)

Stereo radio cassette recorder (16 pages)

[Cassette Player Toshiba RT-200S Service Data](#)

Stereo radio cassette recorder (11 pages)

[Cassette Player Toshiba KT-AS1 Owner's Manual](#)

Stereo cassette player (20 pages)

[Cassette Player Toshiba PC-G33 Service Data](#)

Stereo cassette deck (17 pages)

Summary of Contents for Toshiba D-VR660KU

Page 1 The model number and serial number are on the back of your DVD Recorder. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with

your Toshiba dealer about this DVD Recorder. Model number: Serial number: ©...

[Page 2: Precautions](#)

Make your contribution to the environment!!! • Used up batteries do not belong in the dust bin.
• You can dispose of them at a collection point for used up batteries or special waste. Contact your council for details. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 3: Important Safety Instructions](#)

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 4](#) 480 progressive scan output, it is recommended that the user switch the connection to the "standard definition" output. If there are questions regarding your TV set compatibility with this 480p DVD recorder, please contact Toshiba Customer Service. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 5](#) 2. If a video head cleaner does not solve the problem, please consult your dealer or an Authorized Service Center. Note • Remember to read the instructions along with the video head cleaner before use. • Clean video heads only when problems occur. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 6: Table Of Contents](#)

DTV Closed Caption 35 Closed Caption Style36 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 7](#) SPECIFICATIONS 119 LIMITED WARRANTY120 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 8: Features](#)

Description refers to CD-RW/-R with JPEG files Description refers to DVD-RW/-R, DVD+RW/+R and CD-RW/-R with DivX ® files If you do not find any of the symbols listed above under the Downloaded From Disc-Player.com Toshiba Manuals function heading, the operation is applicable to all media.

[Page 9](#) Divide a title ✓ Combine titles ✓ ✓ Hide chapters ✓ ✓ ✓ ✓ ✓ ✓ Delete a title Create a ✓ playlist ✓ Protect a title ✓: Available Gray: Not available *CPRM compatible disc only. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 10](#) Performance of any other discs are not guaranteed. • CD-ROM • Compact Disc-Interactive (CD-I) • Toshiba is not liable for any damage or loss caused directly • Video Single Disc (VSD) • DVD-ROM or indirectly by the malfunction of this recorder, including, without limitation, any one of the following: •...

[Page 11: Functional Overview](#)

Use to connect external device with an RCA audio cable. damage to the unit. 9. S-VIDEO IN jack (L1) (DVD/VCR) • This unit does not have the RF modulator. Use to connect the S-video output of external device with an Downloaded From Disc-Player.com Toshiba Manuals S-video cable.

[Page 12: Installing The Batteries In The Remote Control](#)

• Always remove batteries from remote control if they are dead or if the remote control is not to be used for an extended period of time. This will prevent battery acid from leaking into the battery compartment. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 13](#) Be sure to use [OPEN/CLOSE A] or [A EJECT / C STOP] turn the unit on. on the unit. 18. HDMI button (DVD) Downloaded From Disc-Player.com Toshiba Manuals • Press to set the HDMI connector's video signal output mode.

[Page 14: The Vcr / Dvd Recorder Switching](#)

TIME SLIP PLAY SKIP STOP SKIP PAUSE DVD button VCR button DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM SE-R0294 Note • You cannot switch to another mode (DVD or VCR) in

the timer-standby mode. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 15: Guide To On-Screen Displays And Menus](#)

[K / L] to scroll. Note • “No description provided.” is displayed when the • In some descriptions on this manual, only one disc program guide is not provided. type is indicated as an example. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 16](#) • If you press [DISPLAY] one more time, artist name will be displayed. Artist Name • If you press [DISPLAY] one more time, album name will be displayed. Album Name • If there is no artist, track or album name, “Not Available” will be displayed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 17: Main Menu](#)

Allows you to activate the program playback feature. CD Playback Mode 7. Slide Show: (JPEG files only) Random Play Program Play Allows you to select the display time of the slide show Slide Show mode. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 18: Front Panel Display Guide](#)

Appears when a disc is loaded Appears when HDMI output on the disc tray. mode (1080i) is selected. Appears when data is being Appears when HDMI output recorded on a disc. mode (1080p) is selected. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 19: Antenna Cable Connection](#)

• If you use an antenna to receive analog TV, it should also work for DTV reception. Outdoor or attic antennas will be more effective than set-top versions. • RF output is for tuner pass through only. DVD playback through the RF is not possible. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 20: Rf Modulator Connection](#)

• RCA video cable x 1 Please purchase the rest of the necessary cables at your local store. Note • The quality of picture may become poor if this unit is connected to an RF modulator. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 21: Connection To A Cable / Satellite Box](#)

Code, which provides guidelines for proper grounding - in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 22: Connection To A Tv](#)

DVD if you are not connecting DVD AUDIO OUT when you made either S-video or component video out connection. • Progressive signal will not be output from the VIDEO OUT or S-VIDEO OUT jack. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 23: Compatible Port](#)

Front Panel Display Video Output Signal 480 Progressive Press [HDMI] 720 Progressive Press [HDMI] 1080 interlaced Press [HDMI] 1080 Progressive Press [HDMI] • The HDMI mode that is not supported by display device will be skipped. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 24](#) • If the connected equipment is not compatible with HDMI BITSTREAM, DTS sound will not be output. • When the power failure occurs, or when you unplug the unit, some problems in the HDMI setting might occur. Please check and set the HDMI setting again. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 25: Connection To An Audio System](#)

• By connecting this unit to the DTS decoder, you can enjoy Multi-channel Surround System which reproduces the original sound as truthfully as possible. Multi-channel Surround System is developed by the DTS, Inc. • Playing back a DVD using incorrect settings may generate noise distortion and may also damage the speakers. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 26: Initial Setting](#)

Proceed to step 5 in "Manual Clock Setting" on page 31. • If a PBS (public broadcasting station) is available in your area, press [RETURN] or [SETUP] to exit, then follow "Auto Clock Setting" on page 30. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 27: Channel Setting](#)

To select a channel directly (including the ones not • The selection will depend on how you receive the TV memorized), use [the Number buttons] and [-] (for channels. digital TV channels). Downloaded From Disc-Player.com Toshiba Manuals...

[Page 28: Adding/Deleting Channels](#)

29 to continue. DIGITAL DISC MENU TOP MENU ENTER ENTER CLEAR RETURN RETURN INSTANT 1.3x/0.8x TIME SLIP SKIP PLAY PLAY SKIP STOP SKIP PAUSE DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM SE-R0294 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 29](#) Your setting will be activated. Press [SETUP] to exit. WARNING: • For the digital TV channels, you cannot recover the deleted channels once they are deleted unless you perform the auto channel preset again. Press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 30: Setting The Clock](#)

• The clock may set itself automatically after this unit receive the antenna/cable signal and plug in the power cord. Press [SETUP] to exit and turn off the • Only the analog PBS channel signal is effective for unit. auto clock setting. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 31: Manual Clock Setting](#)

30 seconds when you set the clock manually. • For setting the day, year, hour and minute, [the Number buttons] can also be used. • You can set the built-in calendar from the year 2007 up to 2057. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 32: Tuner Settings](#)

NTSC ATSC 18:00 Smallest Smallest DTV4-1 18:30 DTV4-1 DTV4-2 DTV4-3 19:00 Smallest DTV4-1 DTV4-3 19:30 Smallest DTV4-1 DTV4-2 20:00 : change automatically : change manually by using [CH Downloaded From Disc-Player.com Toshiba Manuals...

[Page 33: Selecting Tv Audio](#)

• The timer recording for digital TV cannot record any audio language other than English. • [AUDIO] does not control external device audio. • When there is only one audio channel on the broadcast, pressing [AUDIO] does not display anything. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 34](#) Refer to the following table to check an appropriate setting. Selected Broadcast Disc Audio audio audio recording output Stereo STEREO+SAP STEREO STEREO STEREO STEREO STEREO MONO+SAP MONO MONO MONO MONO MONO STEREO+SAP STEREO STEREO STEREO MONO+SAP MONO MONO MONO Downloaded From Disc-Player.com Toshiba Manuals...

[Page 35: Dtv Closed Caption](#)

Select if you do not want DTV CC. This is the default. Service 1 to Service 6: Select one of these before changing any other item in the closed caption menu. Choose "Service 1" under normal circumstances. Press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 36: Closed Caption Style](#)

Video Screen Saver Font Size User Setting Recording FL Dimmer Font Style Clock DTV CC Font Opacity CC Style Channel Font Color DivX V-Chip Edge Type HDMI Edge Color Reset All Back Opacity Back Color Downloaded From Disc-Player.com Toshiba Manuals...

[Page 37](#) Font Size Black FL Dimmer Recording Font Style Clock DTV CC Green Font Opacity Channel CC Style Font Color Blue DivX V-Chip Edge Type Yellow HDMI Magenta Edge Color Reset All Cyan Back Opacity Back Color Downloaded From Disc-Player.com Toshiba Manuals...

[Page 38: Formatting A Disc](#)

DVD-R and DVD+RW/+R. • You cannot mix two formats on one DVD-RW. If you insert a disc that has been recorded before, the recording format cannot be changed even if you change it in the main menu. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 39: Reformatting A Disc Manually](#)

• For DVD-RW, make sure that the recording format is set to the desired mode. (See steps 1 to 6 in Formatting 100% "Choosing the Recording Format of a Brand-New DVD-RW" on page 38.) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 40: Setting A Disc To Protect](#)

OFF" will appear instead of "OFF ON". DVD Menu Format Finalize Disc Protect ON Delete All Playlists To release the protection for the disc, select "Disc Protect ON OFF" at step 3, then follow rest of the procedures. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 41: Playing The Discs In Other Dvd Players](#)

Auto Finalize Recording Auto Finalize Disc Full Clock Aspect Ratio (Video mode) End of Timer Rec Channel Dubbing Mode Make Recording Compatible DivX HDMI Reset All Your setting will be activated. Press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 42: Finalizing A Disc](#)

RETURN RETURN INSTANT 1.3x/0.8x TIME SLIP SKIP PLAY PLAY SKIP STOP STOP SKIP Finalizing PAUSE This operation may take awhile to be completed. DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM Finalizing is completed. SE-R0294 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 43](#) To play back discs other than DVD+RW on other DVD players, you will need to finalize. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 44: Information On Dvd Recording](#)

• Since the recording is made by the VBR (variable bit rate) method, depending on the picture you are recording, the actual remaining time for recording may be a little shorter than the remaining time displayed on the TV screen. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 45: Settings For A Recording](#)

Clock DTV CC Caption Service Channel CC Style Recording DivX V-Chip HDMI Reset All 6) Press [SETUP] to exit. Note • If the "Caption Service" is set to "OFF", the caption will not be recorded. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 46: Recording Audio Select \(Xp\)](#)

4:3. audio data. • When the recording mode is set at other than XP, the unit records "Dolby Digital" audio automatically even if you selected "PCM". Downloaded From Disc-Player.com Toshiba Manuals...

[Page 47: One-Touch Timer Recording](#)

[the Number buttons] and [-] (for digital TV channels) to select a desired channel to record. Refer to "Switching Analog Mode/Digital Mode" and "Channel Selection" on page 32. CH 12 Instructions continue on the next page. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 48](#) • When one-touch timer recording is finished and the power is turned off, the unit will switch to the timer-standby mode automatically if a timer recording has been programmed. Press [TIMER SET] to cancel the timer-standby mode to use the unit continuously. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 49: Timer Recording](#)

• Cancel the timer-standby mode by pressing [TIMER SET] before operation for either DVD or VCR. When finished operating, press [TIMER SET] to resume the timer-standby mode. • In the timer-standby mode, you can turn on the power and use the component (VCR or DVD) which is

not currently timer-programmed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 50](#) 12 : 00AM 1 : 00AM overlapped program will be displayed in blue. REC To Mode To correct the timer program refer to 1 : 00 "Checking, canceling, or correcting the timer programming information" on page 52. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 51](#) • For selecting the channels with [K / L], you need to press [B] or [-] to decide the channel number. • For selecting the minor channels with [K / L], please make sure the minor channel you are selecting is existing. [K / L] does not skip the non-existed minor channels. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 52](#) [STOP C] on the remote control is not effective. Note • Press [TIMER PROG.] to check the timer recording in progress. When the timer recording is proceeding, that program will be highlighted in red. In this case, you cannot select any other program. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 53: Hints For Timer Recording](#)

• If the cut-off portion comes up to 3 minutes or more, this program will be displayed with errors number E40 in the PROG. A timer programming list. PROG. B actual PROG. A PROG. B recording The first 2 minutes (at the longest) will be cut off. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 54: Settings For An External Device](#)

Recording Select Video Select Video - L1 (Rear) Clock Press [SETUP]. Video In Channel S-Video In DivX HDMI Reset All Use [K / L] to select "General Press [SETUP] to exit. Setting", then press [ENTER]. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 55: Recording From An External Device](#)

Press [I REC] on the unit to start recording. Start playback on the external device to record from. Press [C STOP] / [A EJECT / C STOP] on the unit to stop recording. This operation may take awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 56: Dv Dubbing](#)

"Start Rec" will appear. (faster than above) • When the unit is in dubbing, "Pause Rec" will appear. 5. Channel position • When you select "DV" by using [INPUT SELECT] or], "DV" will appear. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 57: Dvc To Dvd Dubbing](#)

Use [K / L] to select "DVD", then • Insert a recordable disc and make sure your DVC is in press [ENTER]. video mode. Then press [STOP C]. Use [INPUT SELECT] or [CH to select "DV". AB-1234 0:00:00 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 58: Dvc To Vcr Dubbing](#)

• A DV terminal is a terminal that can use the transmission mode conforming to the IEEE 1394 standards called "Fire Wire". It serves as the interface that connects the PC and peripheral device such as "i.Link" (registered trademark of SONY). It enables digital dubbing between DV devices with little degradation. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 59: Dvd/Vcr Dubbing](#)

ENTER CLEAR RETURN INSTANT 1.3x/0.8x TIME SLIP SKIP PLAY PLAY PLAY SKIP STOP STOP SKIP PAUSE PAUSE DUBBING DUBBING REC MODE REC MODE REPEAT TIMER SET SEARCH ZOOM SE-R0294 Instructions continue on the next page. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 60](#) • This unit will automatically stop the duplication if playback with no image is for more than 3 minutes during VCR to DVD duplication. • Dubbing indicator will appear on the front panel display during dubbing. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 61: Information On Playback](#)

"title number", "chapter number", "track number", "folder number" or "file number" respectively. Some discs may not have these numbers. MP3/WMA/JPEG/DivX® folder 1 folder 2

[Page 62: Basic Playback](#)

Refer to "Using the Title/Disc Menu" on page 67. DUBBING REC MODE Press [STOP C] once to stop playback REPEAT TIMER SET SEARCH ZOOM temporarily. • Refer to "Resume Playback" on page 68. SE-R0294 Note • Some discs may start playback automatically. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 63: Playback From The Title List](#)

• Refer to "Resume Playback" on page 68. left of the title list is highlighted to display the To eject the disc, press [OPEN/CLOSE A] to previous page. open the disc tray, then remove the disc before turning off the unit. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 64: Mp3/Wma/Jpeg Files](#)

3 MP3 file1 4 MP3 file2 You must obtain any required permission from 5 WMA file1 copyright owners to download or use copyrighted 6 WMA file2 content. Toshiba cannot and does not grant such 1/ 2 permission. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 65: Playing Back A Divx](#)

Subtitle List DivX File1 DivX® with the subtitle starts playback. The subtitle cannot be displayed when the setting is "OFF". • If there is more than one extension, the extension selection appears in the subtitle list. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 66](#) • If you try to playback the DivX® file that has the screen - The subtitles that exceeds the playback time of the resolution which this unit does not support, the DivX® file will not be displayed. playback will be stopped and error message will appear. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 67: Using The Title/Disc Menu](#)

• Menus vary among discs. Refer to the information (Refer to page 101.) accompanying the disc for details. • [DISC MENU] or [TOP MENU] will not always be effective for all DVDs. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 68: Special Playback](#)

For some DivX® files, fast forward/fast reverse may not function. 2) Press [PLAY B] to return to the normal playback. Note • Forward/reverse speed will be indicated with icons as follows. forward (approx. speed) 20x: 40x: reverse (approx. speed) 20x: 40x: Downloaded From Disc-Player.com Toshiba Manuals...

[Page 69: Rapid Playback](#)

• Press and hold [SKIP j] / [SKIP i] to reverse/ advance continuously. 3) Press [PLAY B] to return to the normal playback. Note • Only step by step forward playback is available for playing back DivX® files. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 70: Zoom](#)

• To exit the zoom menu, press [DISPLAY] repeatedly. • To cancel the zoom function, select "x1.0" using [K / L], then press [ENTER] at step 3. • You cannot slide the zoomed picture on some JPEG files. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 71: Chasing Playback During Recording](#)

• This function is available only when you are recording on a DVD-RW in VR mode, with the Resume ON 1:01 recording mode LP, EP or SLP. To stop recording, press [STOP C] again. To cancel the resume, press [STOP C] again. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 72: Title](#)

If you play back the currently recording program and the set (refer to "Hints for Timer Recording" on page 53). playback reaches the scene recorded 1 minute before, the forwarding playback will automatically return to the normal playback. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 73: Track](#)

• In search mode display, total numbers of each search contents (title/chapter/time) are shown as a denominator. 1/ 5 1/ 5 0:01:00 / 1:23:45 DVD Video total number total time of titles of the title total number of chapters Downloaded From Disc-Player.com Toshiba Manuals...

[Page 74: Time Search](#)

3) Use [K / L / { / B] or [the Number buttons] to enter a desired time to search, then press [ENTER]. After the search, playback will start automatically. Note • Time search is available only in the same track, file or title. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 75: Slide Show](#)

Video Random playback will start. Repeat Title e.g.) audio CD 1/ 5 0:00:15 / 0:05:00 Random Note • To cancel random playback, press [STOP C] twice during random playback. "OFF" appears on the display menu. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 76: Program Playback](#)

• You can make program settings up to 50 tracks. • To cancel program playback, press [STOP C] twice during program playback. "OFF" appears on the TV screen. • You may also select a desired track using [the Number buttons] at step 4. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 77: Selecting The Format Of Audio And Video](#)

"- - -" next to 3. R the numbers. Note • Some discs will only allow you to change the soundtrack from the disc menu. Press [DISC MENU] or [TOP MENU] to display the disc menu. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 78: Switching Virtual Surround System](#)

EP or SLP, select "Type 1" or "Type 2". ("Type 2" is more effective.) When playing back discs with a few noises such as Downloaded From Disc-Player.com Toshiba Manuals DVD-video, select "OFF".

[Page 79: Adjusting Black Level](#)

: Make the darker parts of the picture more visible. Note • You can adjust black level setting only during playback. • The setting will be kept even when the unit is turned off. • The default setting is "ON". Downloaded From Disc-Player.com Toshiba Manuals...

[Page 80: Information On Disc Editing](#)

10. Preview window: Preview of the selected title is displayed here. 11. Playback status: Indicating the current playback status of the selected title. Press [RETURN] to exit the title list. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 81: Title No.5](#)

• For DVD+RW, if "Empty" appears right next to the other "Empty", those "Empty" combines into one. Title List Title List JAN/21/08 7:00AM CH22 SLP EMPTY TITLE 7:00AM (2:00:00) JAN/21/08 1 D elete the title No.5 Empty Empty Empty 1 / 1 1 / 1 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 82](#) "Yes" and then press [ENTER]. Title will be deleted. Press [RETURN] or [STOP C] to exit. Data will be written onto the disc momentarily. Writing to Disc This operation may take awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 83: Creating/Deleting Playlist](#)

• To delete all titles in the playlist, refer to "Erasing All Playlist" on page 84. • When a playlist contains 99 titles or more, or 999 chapters or more, "Add to Playlist" cannot be selected. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 84: Erasing All Playlist](#)

Delete All Playlist Playlist is deleted. Data will be written onto the disc momentarily. This operation may take awhile to be completed. Note • Deleting a playlist will not increase the

available recording time on the disc. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 85: Editing Discs](#)

Use [K / L] to select "Edit", then press [ENTER]. Title List JAN/ 1/08 12:00AM CH10 LP 12:00AM (2:00:00) JAN/ 1/08 CH10 LP Play From Start Edit Title Delete Add To Playlist 1 / 2 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 86](#) • Use [s / B] to move the cursor to the left and right. SE-R0294 • You can enter up to 30 letters. Note • Undefined letters in a title name are shown by "*". If you delete them, adjoining letters may change to "*" or other. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 87: Setting Chapter Marks](#)

• Besides the above-mentioned, it is not likely to be Data will be written onto the disc momentarily. able to add according to recorded time and number of chapters. This operation may take awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 88: Hiding Chapters](#)

If you want hidden chapters to be "Visible", Empty select the chapter to be shown. Then use [K / L] to select "Visible", then press [ENTER] 1 / 1 at the step 6 above. Data will be written onto the disc momentarily. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 89: Deleting A Part Of A Title](#)

"Scene Delete" before the number of chapter marks reaches 999.) • The recordable disc space will not increase even after deleting a part of a title on the playlist. Instructions continue on the next page. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 90](#) You can check the preview by pressing [ENTER]. This operation may take • Before and after 5 seconds of the deleted point awhile to be completed. will be playback for preview. start point end point Before editing Edited Downloaded From Disc-Player.com Toshiba Manuals...

[Page 91: Dividing A Title](#)

• You cannot divide a title of the disc when the awhile to be completed. number of recording titles reaches the maximum of 99 (-RW) or 49 (+RW), and the number of recording chapters reaches the maximum of 999 (-RW) or 254 (+RW). Downloaded From Disc-Player.com Toshiba Manuals...

[Page 92: Combining Titles](#)

Data will be written onto the disc momentarily. • If either one of the two original titles is deleted, the This operation may take combined new title is also deleted. awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 93: Setting Or Releasing The Title Protection](#)

To protect a whole disc (VR mode DVD-RW, DVD+RW/+R only): Select "Disc Protect OFF ON" from the DVD Menu, then select "Yes". Refer to "SETTING A DISC TO PROTECT" on page 40. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 94: Setting Or Clearing All Chapter Marks At Once](#)

• Maximum number of chapter for video mode DVD is 99 chapters per title. • The interval for auto chapter may be up to two minutes different from the time option you set. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 95: List Of The Default Settings](#)

Font Size Set font size of the displayed caption. Large → page 37 Middle Small Font Style Set font style of the displayed caption. Style1 → page 37 Style2 Style3 Style4 Style5 Style6 Style7 Style8 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 96](#) Clear the downloadable rating information and its DOWNLOADABLE RATING setting. Change Password Change the password. → page 104 Video Progressive Set to the progressive

scan mode (set to "ON") or → page 105 to the interlace scan mode (set to "OFF"). Downloaded From Disc-Player.com Toshiba Manuals...

[Page 97](#) Set to the default setting. → page 109 Note • Your change to each settings stays on even when the power is off. • An item which is not currently available is grayed in the settings. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 98: General Setting](#)

Submenu will appear. DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM Refer 1 to 7 on pages 99 to 101 and set the selected item. SE-R0294 When you finish with the setting, press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 99](#) "Parental Lock" menu, enter 4,7,3,7 parental lock, press [OPEN/CLOSE A] to activate the using [the Number buttons] in password input parental lock level. window. Password will be cleared and parental levels will be set to "OFF". Downloaded From Disc-Player.com Toshiba Manuals...

[Page 100](#) : If your amplifier/decoder is compatible with 96kHz PCM, select "96kHz". 96kHz sound will be output. Note When playing back disc with copyright protection • Even if you select "96kHz", the sound will be down sampled at 48kHz. Downloaded From Disc-Player.com Toshiba Manuals 100 EN...

[Page 101](#) (There are 30 frames per second of NTSC video). If "Other" is selected for , press 4-digit code using [the Number buttons]. Code Input • When you finish entering the code, press [ENTER]. Refer to the language code table on page 117. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 102: Display](#)

Use [K / L] to select a desired item, then press [ENTER]. CC Style OSD Language Refer to "Closed Caption Style" on pages 36-37. Screen Saver FL Dimmer DTV CC CC Style V-Chip Submenu will appear. Downloaded From Disc-Player.com Toshiba Manuals 102 EN...

[Page 103: Tv-Ma](#)

[Canadian French Rating] Rating Category 18 ans+ Adult audience only higher 16 ans+ Unsuitable for ages under 16 13 ans+ Unsuitable for ages under 13 8 ans+ Unsuitable for ages under 8 General audience Exempt program lower Downloaded From Disc-Player.com Toshiba Manuals...

[Page 104: Canadian English Rating](#)

• Press [CLEAR] to erase numbers entered incorrectly. • When you forgot the access password, enter 4,7,3,7 using [the Number buttons] in password input window. Password will be cleared. Press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals 104 EN...

[Page 105: Video](#)

Select "4:3 Pan & Scan" for a full When you finish with the setting, height picture with both sides trimmed when playing back wide-screen picture. press [SETUP] to exit. If you have a widescreen TV: Select "16:9 Wide". Downloaded From Disc-Player.com Toshiba Manuals...

[Page 106: Divx](#)

Spanish DivX German HDMI Italian Playback Reset All Swedish Display Video Recording Clock Channel Your setting will be activated. DivX HDMI Reset All When you finish with the setting, press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals 106 EN...

[Page 107: Hdmi](#)

Y/Cb/Cr, HDMI signal is output as RGB regardless of the setting. General Setting Playback Display Format Video HDMI Audio Format Recording RGB Range Clock YCbCr Channel DivX HDMI Reset All Your setting will be activated. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 108: Ver.2](#)

• This setting is effective only for HDMI RGB output. General Setting Playback Display Format Video HDMI Audio RGB Range Recording RGB Range Normal Clock Enhanced Channel DivX HDMI Reset All Your setting will be activated. Downloaded From Disc-Player.com Toshiba Manuals 108 EN...

[Page 109: Reset All](#)

• The settings listed below will remain unchanged even after resetting to the factory default. - Clock setting - Channel setting - OSD language setting - Parental lock setting - DivX® VOD code - V-Chip setting - Timer programs Downloaded From Disc-Player.com Toshiba Manuals...

[Page 110: Track](#)

2) Press [STOP C] when the recording is completed. Accidental erasure prevention To prevent accidental recording on a recorded cassette tape, remove its erase- protection tab. To record on it later, cover erase-protection tab the hole with cellophane tape. Downloaded From Disc-Player.com Toshiba Manuals 110 EN...

[Page 111: One-Touch Timer Recording \(Otr\)](#)

• When the one-touch timer recording is finished and the power is turned off, the unit will switch to the standby mode automatically if a timer recording has been programmed. Press [TIMER SET] to cancel the standby mode for using the unit continuously. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 112: Time Search](#)

• Still/slow mode will stop after 5 minutes to prevent damage to the cassette tape and the video head. • To return to playback from the picture search/still/ slow mode, press [PLAY B]. Downloaded From Disc-Player.com Toshiba Manuals 112 EN...

[Page 113: Troubleshooting](#)

• "Make Recording Compatible" is not set to "ON", when recording onto DVD+RW/+R that was recorded on other unit. Timer recording is impossible. • Make sure appears on the front panel display of this unit. If not, press [TIMER SET]. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 114](#) • Resume playback was activated (page 68). Press [STOP C] twice. The disc does not start playback from the beginning. • You have inserted a disc whose title menu or DVD menu automatically appears on the TV screen when it is first inserted. Downloaded From Disc-Player.com Toshiba Manuals 114 EN...

[Page 115](#) The remote control does not function. • Check if a cassette tape is in this unit. The motor rotates even when • The motor may rotate for the duration of approximately 5 minutes for playback / recording is stopped. efficient operation. This is not a malfunction. Downloaded From Disc-Player.com Toshiba Manuals...

[Page 116: Frequently Asked Questions](#)

No, you cannot control the unit by PC. - Can I program a timer recording with cable/satellite box? Yes, you can. Select "L1" or "L2" as your recording channel, and leave the cable/satellite box on (pages 21, 49-53). Downloaded From Disc-Player.com Toshiba Manuals 116 EN...

[Page 117: Language Code](#)

6265 Wolof 6961 Greenlandic 5758 Persian 5247 Xhosa 7054 Guarani 5360 Polish 6258 Yiddish 5655 Gujarati 5367 Portuguese 6266 Yoruba 7161 Hausa 5447 Quechua 6367 Zulu 7267 Hebrew 5569 Rhaeto-Romance 6459 Hindi 5455 Romanian 6461 Downloaded From Disc-Player.com Toshiba Manuals...

[Page 118: Glossary](#)

+VR mode A recording format for DVD+RW/+R. +VR mode offers basic editing, and it is playable on most DVD players. Finalization is recommended before playing them back on other unit. Downloaded From Disc-Player.com Toshiba Manuals 118 EN...

[Page 119: Specifications](#)

2 V rms (output impedance: less than 1 k Ω) Jacks RCA jacks Digital audio output Output 1 (rear) COAXIAL Output level 500 mVp-p (75 Ω) Jack RCA jack DV input IEEE 1394 Jack DV input jack (4 pin) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 120: Limited Warranty](#)

Digital Audio Video ("DAV") Product - Exchange Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DAV PRODUCT AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 121](#) LIMITED WARRANTY Downloaded From Disc-Player.com Toshiba Manuals...

[Page 122](#) LIMITED WARRANTY Downloaded From Disc-Player.com Toshiba Manuals 122 EN...

[Page 123](#) MEMO Downloaded From Disc-Player.com Toshiba Manuals...

[Page 124](#) Printed in China 1VMN24613 / E9MG0UD Downloaded From Disc-Player.com Toshiba Manuals...

[Page 125](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 126](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 127](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 128](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 129](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 130](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 131](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 132](#) Downloaded From Disc-Player.com Toshiba Manuals...

[Page 133](#) Downloaded From Disc-Player.com Toshiba Manuals...