



# Display Assembly; Removing The Display Assembly - Toshiba Satellite L300 Maintenance Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217  
218



219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252



•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks





## 4 Replacement Procedures

### 4.8 Display Assembly

---

#### Removing the Display Assembly

*CAUTION: Use care to avoid that the antenna cable is not caught between the display assembly and computer.*

Remove the display assembly according to the following procedures and Figures 4-14, 4-15.

1. Turn the computer upside down and remove two M2.5x6 black flat head screws.
2. Restore the normal computer placement and open the display panel.
3. Disconnect the LCD/FL cable from CN5 on the system board.
4. Disconnect the CCD cable from CN7 on the system board.
5. Disconnect the MIC cable from CN3 on the system board.
6. Remove four M2.5x6 black flat head screws securing the LCD module to the bottom

cover.

7. Remove the wireless antenna cables, CCD cable and MIC from the bottom cover.

8. Remove the display module.

---

4-30

Downloaded from LpManual.com Manuals

M2 5x6 black flat head screw

*Figure 4-14 Removing the screws from the back of the computer*

*Satellite L300/L305 / Satellite Pro L300/ EQUIUM L300/ SATEGO L300 Maintenance Manual*

---

## 4.7 Display Assembly

[Table of Contents](#)



Next Page

1

...

168

169

170

171

Quick Links:

[Chapter 1 Hardware Overview](#)

[Figure 1-1 ID Parts Description Placement](#)

## Chapters

[Table of Contents](#) 6

[Table of Contents](#) 16

[Chapter 2 Troubleshooting](#) 39

[Chapter 3 Diagnostic Programs](#) 67

[Table of Contents](#) 135

[Appendix](#) 199

## Related Manuals for Toshiba Satellite L300

[Laptop Toshiba PSLC8U-03L023 - Satellite L305D-S5927 - Athlon X2](#)

[2.16 GHz Maintenance Manual](#)

Ps1b0 series;ps1b1 series; ps1b2 series; ps1b3 series (252 pages)

[Laptop Toshiba Satellite L300 Maintenance Manual](#)

Maintenance manual (244 pages)

[Laptop Toshiba L305D S5897 - Satellite - Turion 64 X2 2 GHz Manual](#)

[Del Usuario](#)

User's guide for satellite l300d/l305d spanish (233 pages)

[Laptop Toshiba L300-ST3502 User Manual](#)

L300-st3502 user's guide (230 pages)

[Laptop Toshiba PSLB9U-00R011 User Manual](#)

User manual (212 pages)

[Laptop Toshiba Satellite L300 Series User Manual](#)

(187 pages)

[Laptop Toshiba L300D series User Manual](#)

(186 pages)

[Laptop Toshiba Satellite L305D-S5974 Resource Manual](#)

User guide (64 pages)

[Laptop Toshiba Satellite L300 Series Resource Manual](#)

(56 pages)

[Laptop Toshiba Satellite L300D-ST3503 Resource Manual](#)

Toshiba satellite l300d-st3503: reference guide (56 pages)

[Laptop Toshiba Satellite Pro L300-EZ1004X Resource Manual](#)

Toshiba satellite pro l300-ez1004x: reference guide (52 pages)

[Laptop Toshiba Satellite Pro L300-EZ1004X Specifications](#)

Toshiba satellite pro l300-ez1004x: specifications (4 pages)

[Laptop Toshiba Satellite Pro L300-EZ1501 Specifications](#)

Toshiba satellite pro l300-ez1501: specifications (4 pages)

[Laptop Toshiba Satellite Pro L300-EZ1521 Specifications](#)

Toshiba satellite pro l300-ez1521: specifications (4 pages)

[Laptop Toshiba Satellite Pro L300-EZ1523 Specifications](#)

Toshiba satellite pro l300-ez1523: specifications (4 pages)

[Laptop Toshiba Satellite Pro L300-EZ1525 Specifications](#)

Toshiba satellite pro l300-ez1525: specifications (4 pages)

## Related Content for Toshiba Satellite L300

[Satellite A70 Display Assembly](#)

[Toshiba Satellite A70](#)

[Satellite M640 Display Assembly](#)

[Toshiba Satellite M640](#)

[Satellite M45 Display Assembly](#)

Toshiba Satellite M45

[Satellite A300 Display Assembly](#)

Toshiba Satellite A300

[Tecra A6 Display Assembly](#)

Toshiba Tecra A6

[Satellite P300 Display Assembly](#)

Toshiba Satellite P300

[Satellite P10 Series Display Assembly](#)

Toshiba Satellite P10 Series

[Tecra A5 Display Assembly](#)

Toshiba Tecra A5

This manual is also suitable for:

[Satellite I305](#)[Satellite pro I300](#)[Equium I300](#)[Satago I300](#)