



Asus RP-AC66 Quick Start Manual

Dual-band wireless-ac1750 repeater

1
2

--

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [Quick Start Manual](#)



RP-AC66

Dual-band Wireless-AC1750 Repeater

Quick Start Guide

E10754

First Edition

August 2015

 
 
Method One

RP-AC66
Dual-band Wireless-AC1750 Repeater

Power On

Place your RP-AC66 near your router/AP and plug it to a power outlet.

Wait until the power LED turns solid green.

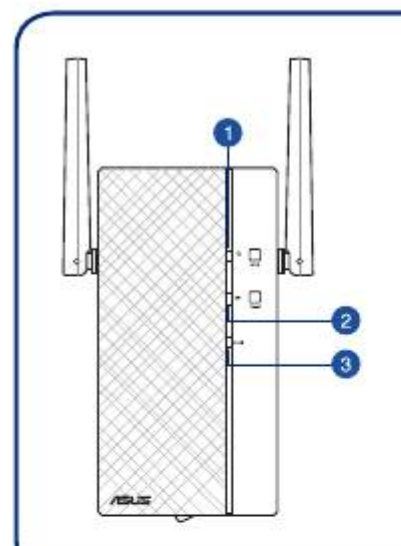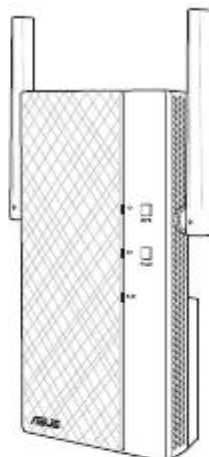

Place in an ideal location

After placing your RP-AC66 in an ideal location, RP-AC66 connects to your router/AP in about one (1) minute.

NOTES:

Place your RP-AC66 between your router/AP and wireless device to get the best repeater performance.

Place your RP-AC66 in a location where you can get green or orange Wi-Fi LED.

IMPORTANT!

To minimize interference, keep RP-AC66 away from devices like cordless phones, Bluetooth devices and microwave ovens.

We recommend that you place your RP-AC66 in open or spacious location.

 
 
Q1: What should I do if my router does not support WPS?

A1: You can use Method Two to set up RP-AC66.

Q2: Why is that the Wi-Fi LED does not light up after completing Method Two?

A2: You may have entered the wrong router SSID and password. Reset your RP-AC66, double check your router SSID/password, and set up RP-AC66 again.

E10754_RP-AC66_QSG_Special.indd 1

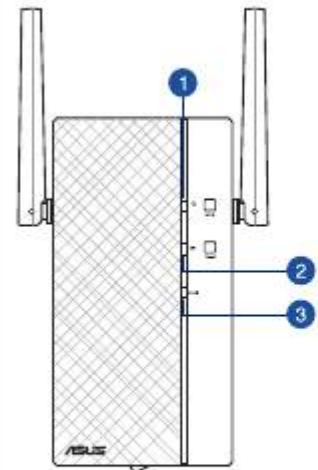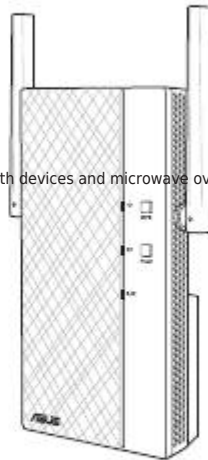

Connect via WPS (Wi-Fi Protected Setup)

1. Press the WPS button on your Router/AP.

NOTE: Ensure that your router/AP supports WPS. Otherwise, use Method TWO.

Frequently Asked

Q3: Why is it that I cannot see the login page after entering <http://repeater.asus.com> in the browser?

A3: Ensure that your computer is connected to the repeater network only, and set your computer to obtain an IP address automatically.

Q4: How do I reset RP-AC66?

A4: Press the RESET button on the front cover of RP-AC66 for about two (2)

1. Power LED

On: RP-AC66 is on

2. 5 GHz Wi-Fi LED

Green: RP-AC66 provides excellent Wi-Fi repeater performance.

Orange: RP-AC66 provides acceptable Wi-Fi repeater performance.

Red: RP-AC66 provides poor Wi-Fi repeater performance.

: RP-AC66 is not connected to a router/AP.

3. 2.4 GHz LED

Green: RP-AC66 provides excellent repeater performance.

Orange: RP-AC66 provides acceptable Wi-Fi repeater performance.

Red: RP-AC66 provides poor Wi-Fi repeater performance.

: RP-AC66 is not connected to a router/AP.

 
2. Press the WPS button on your RP-AC66 for more than two (2) seconds until the LEDs start to blink.

Enjoy!

Your RP-AC66's wireless network name (SSID) changes to your existing Wi-Fi network name, ending with _RPT or _RPT5G and shares your router/AP's Wireless Password.

about two (2) minutes and then turns solid green. The color of the LED indicates the Wi-Fi signal strength.

2015/8/28 14:24:19

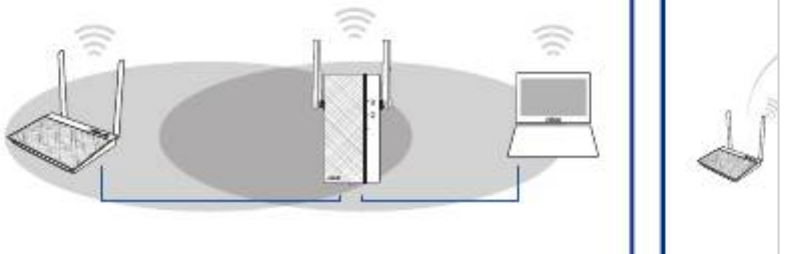

[Next Page](#)

1
2

Related Manuals for Asus RP-AC66

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (147 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (21 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (176 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (68 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band (180 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (156 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (2 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (52 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless-ac1200 dual-band repeater for easy setup (3 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (7 pages)

[Repeater Asus RP-AC87 Quick Start Manual](#)

Dual - band wireless repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC1900 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

Summary of Contents for Asus RP-AC66

[Page 1](#) NOTE: Ensure that your router/AP supports WPS. Otherwise, use Method TWO. Place in an ideal location Enjoy! After placing your RP-AC66 in an ideal location, RP-AC66 connects to your router/AP in about one (1) minute. NOTES: • Place your RP-AC66 between your router/AP and wireless device to get the best repeater performance.

[Page 2](#) NOTE: The screenshot below is from a desktop PC. Configure RP-AC66 IMPORTANT! For the best Wi-Fi repeater performance, place your RP-AC66 in an ideal location. Refer to Step 3 in Method One. 1. On a web browser, enter <http://repeater.asus.com>. 3. You can either tick "Use default setting" or enter the SSID and security key/password for your extended network.