

TOSHIBA

Toshiba D-R150SB Owner's Manual

Dvd video recorder

1
2
3
4
5
6
7
8
9
10
Table Of Contents
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

--

•

[Table of Contents](#)

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Quick Reference Manual](#)



DVD VIDEO RECORDER

D-R150SB

OWNER'S MANUAL
TOSHIBA

Read this booklet first.

PM002XXXX010

H

01_D-R150SB(E)_inst

[Downloaded From Disc-Player.com](http://www.Disc-Player.com) Toshiba Manuals

DIGITAL VIDEO

© 2005 Toshiba Corporation



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba D-R150SB

[DVD Recorder TOSHIBA D-R150SB Owner's Manual](#)

Dvd video recorder (48 pages)

[DVD Recorder TOSHIBA D-R150SB Quick Reference Manual](#)

Dvd video recorder (8 pages)

[DVR Toshiba D-R1SU Owner's Manual](#)

(213 pages)

[DVR Toshiba D-R1SU Service Manual](#)

(58 pages)

[DVR Toshiba D-R1SB Service Manual](#)

(49 pages)

[DVR Toshiba D-RW2SU Owner's Manual](#)

D-rw2su user's guide (157 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba D-R5SU Owner's Manual](#)

(58 pages)

[DVR Toshiba D-R4SU Owner's Manual](#)

(131 pages)

[DVR Toshiba D-R410KU Service Manual](#)

Toshiba d-r410ku dvd video recorder service manual (66 pages)

[DVR Toshiba D-R550 Owner's Manual](#)

Dvd video recorder (125 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Toshiba dr570ku dvd video recorder owner's manual (123 pages)

[DVR Toshiba D-R560KU Service Manual](#)

(72 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dvd video recorder (110 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba D-R265SE Service Manual](#)

(41 pages)

Summary of Contents for Toshiba D-R150SB

[Page 1](#) DIGITAL VIDEO DVD VIDEO RECORDER D-R150SB OWNER'S MANUAL INSTALLATION GUIDE Read this booklet first. PM002XXXX010 © 2005 Toshiba Corporation 01_D-R150SB(E)_inst 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 2: Introduction](#)

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible and invisible laser radiation when open and interlocks defeated. DO NOT STARE INTO BEAM. CLASS 1 LASER PRODUCT 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 3](#) For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 4: Important Safety Instructions](#)

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 5](#) 18. Do not place the apparatus on amplifiers or equipment that may produce heat. 19. Do not cover the ventilating holes for the inside cooling fan. 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 6: Precautions](#)

VTR. To avoid damage to this product, never place or store the unit in direct sunlight; hot, humid areas; or areas subject to excessive dust, oily smoke, cigarette smoke or vibration. 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 7](#) When the power plug is disconnected or when a changes rapidly. power failure occurs during any operation of this Toshiba is not liable for any damage or loss of product, all contents recorded on the disc may be recorded data caused by shock, shakes, misoperation erased.

[Page 8: Notes On Moisture Condensation](#)

After two or three hours, the unit will have warmed up and evaporated any moisture. Keep the unit connected to the wall outlet and moisture condensation will seldom occur. Wall outlet 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 9](#) Cannot be recorded DVD-R Recording once permitted DVD-RAM Cannot be recorded DVD-RW Recording DVD-R prohibited • Regardless of programme content, copies cannot be made within the same DVD-RW disc or DVD-R disc. 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 10: Installation Procedure](#)

Connect the recorder to a TV. pages 14 to 17) Connect optional equipment to the recorder. page 20) Make the initial settings. page 24) Your recorder is ready. Read the separate volume "OPERATIONS GUIDE". 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 11: Table Of Contents](#)

C: TV shape setting42 D: Remote control settings44 Operating a TV with the remote control of this recorder44 Operating the second and third TOSHIBA DVD video recorders with the remote control of this recorder 46 02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM...

[Page 12: Preparation Of The Remote Control](#)

- Do not leave the remote control near an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Do not disassemble the remote control.

02_D-R150SB(E)_inst02-12 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 13: Connections](#)

20) AV amplifier When you connect a TV equipped with SCART inputs Perform steps 1, 2 and 3. When you connect an audio system Perform steps 1, 2, 3 and 4. 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 14: Connecting An Aerial And Tv](#)

VHF/UHF aerial Aerial cable To VHF/UHF RF IN (FROM ANT.) To VHF/UHF RF OUT (TO TV) To aerial input Coaxial cable (supplied) For connecting a satellite system, see page 18. 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 15](#) • Connect the recorder directly to your TV. If you connect the recorder via a VTR, TV/VTR combination or video selector, the playback picture may be distorted due to copy protection. 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 16: Connecting To A Tv Equipped With Phono Type Jacks](#)

• If your television set has one audio input, connect the left and right audio outputs of the recorder to a Y cable adapter (not supplied) and then connect to your TV. 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 17: Connecting To A Tv Equipped With Component Video Inputs](#)

In case of 625 progressive scan picture problems, it is recommended that the user switch the connection to the "Standard Definition" output. If there are questions regarding our TV set compatibility with this model 625p DVD player, please contact our Customer Service Center. 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 18: Connecting A Satellite Receiver](#)

• According to the type of the TV set that you are connecting, set the output for the AV1(TV) socket. (page 38) • According to the type of video output signal used for the satellite receiver that you are connecting, set "AV2 input" with "Initial settings". (page 39) 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 19: By Using Rf Coaxial Cable](#)

After making this connection, you must allocate a channel on the recorder to receive satellite stations. Satellite receiver Aerial RF IN RF OUT To AV1(TV) SCART cable (not supplied) To SCART input To aerial input 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 20: Connecting To An Audio System](#)

Otherwise, the speakers and your hearing may be damaged by a sudden high volume sound. • Turn off the amplifier before you connect or disconnect the recorder's power cord. If you leave the amplifier power on, the speakers may be damaged. 03_D-R150SB(E)_inst_13-20 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 21: Basic Setup](#)

C: TV shape setting D: Remote control settings Operating a TV with the remote control of this recorder Operating the second and third TOSHIBA DVD video recorders with the remote control of this recorder 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 22: Starting Up The Recorder](#)

Avoid casual use of this measure. After a few seconds, a startup screen appears. The following icon will appear on the top right corner of the screen. The icon will continue flashing momentarily. e.g. Loading 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 23](#) While they are flashing, the recorder is operating as follows: Startup, reading a disc, finishing recording Loading Unloading a disc, finishing the recorder's operation loading Opening a disc tray Open Closing a disc tray Close 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 24: A: Initial Settings](#)

• When the power goes down or the power cord is unplugged, the clock data, channel data and timer programmes may be deleted. In this case, set up these items again. 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 25](#) Read the message, then press ENTER button. EASY NAVI button To display/exit a setting SETUP The message disappears. menu. message 1 selection e.g. The message disappears automatically in a few seconds. message No selection 04_D-R150SB(E)_inst_21-33

[Page 26: 1: Time And Date Setting](#)

Manual : You can set the clock manually. See "Manual clock setting" page 28 REC REC MODE ZOOM ANGLE Select "Manual" to set the clock if not set correctly by TV/DVR AUDIO "Auto". 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 27](#) "Manual" clock setting menu to enter the time and date. • This function does not work when the channel setting is not complete or the channel at position 1 does not have the clock information. (page 31) 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 28](#) • To go back to the previous menu, press button. • To exit the menu, press EASY NAVI button twice. "1: Time and date setting" is complete. Go to "2: Channel setting". (page 29) 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 29: 2: Channel Setting](#)

Manual : Manually sets the receiving channel and QUICK CHP DIVIDE channel skip. page 31 Select "Manual" to set the channel if not set DISPLAY SUBTITLE correctly by "Auto". REC REC MODE ZOOM ANGLE TV/DVR AUDIO (Continued) 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 30](#) • The Auto channel setting function may not work, depending on the radio reception or other conditions. If the Auto channel setting function does not work successfully, use the "Manual" channel setting menu to enter the channel information. 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 31](#) E21 - E69 (21 - 69) - (No display) CATV X, Y, Z (71, 72, 73) CATV (IRELAND) 1 - 53 (48MHz to 464MHz, 8MHz steps) CATV (CCIR) S1 - S41 (1 - 41) 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 32](#) You can enter a name in "Station". While selecting "Station", press button. An input window appears. Press buttons to select a character from 0-9, A-Z, -/+ and space. To shift to the next, press buttons. When complete, press button. 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 33](#) The selected receiving channels are set and you will go ENTER back to the "Initial settings" menu. • To cancel, select "No", then press ENTER button. • To exit the menu, press EASY NAVI button twice. 04_D-R150SB(E)_inst_21-33 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 34](#) "Yes", then press ENTER. The channel in Position 1 and the channel in Position 4 are swapped. "2: Channel setting" is complete. Go to "3: Just clock setting". (page 35) 05_D-R150SB(E)_inst_34-39 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 35: 3: Just Clock Setting](#)

PDC clock data broadcast. The daylight saving REPLAY SKIP time can also be adjusted. Go to step 5. QUICK CHP DIVIDE DISPLAY SUBTITLE REC REC MODE ZOOM ANGLE TV/DVR AUDIO 05_D-R150SB(E)_inst_34-39 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 36](#) • Clock adjusting process will be stopped if the recorder's power turns on while it is in progress. • This function will not work if the clock is ahead or behind by more than 1 hour and 15 minutes. 05_D-R150SB(E)_inst_34-39 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 37: 4: Input Signal Setting](#)

In this case, select "PAL" or "SECAM" according to the broadcast or the source. • To exit the menu, press EASY NAVI button twice. 05_D-R150SB(E)_inst_34-39 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 38: 5: Av1 Output Setting](#)

• To exit the menu, press EASY NAVI button twice. TV/DVR AUDIO Note • If the on-screen display disappears immediately after you select "RGB", you can restore it by connecting the recorder using the AV OUT VIDEO (yellow) jack. 05_D-R150SB(E)_inst_34-39 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 39: 6: Av2 Input Setting](#)

S-Video : Select this when the type of video signals of the connected equipment is S video. QUICK CHP DIVIDE DISPLAY SUBTITLE • To exit the menu, press EASY NAVI button twice. REC REC MODE ZOOM ANGLE TV/DVR AUDIO 05_D-R150SB(E)_inst_34-39 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 40: B: Output Sound Setting](#)

Analog 2ch Custom picture select Custom picture setting Auto Progressive conversion DISPLAY SUBTITLE Play DNR Audio out select Bitstream Virtual surround REC REC MODE ZOOM ANGLE NICAM Start TV/DVR AUDIO SETUP 06_D-R150SB(E)_inst_40-48 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 41](#) Once the proper setting is selected, press ENTER. The submenu disappears. To exit the setting menu, press EASY NAVI button twice. ENTER "B: Output sound setting" is complete. Go to "C: TV shape setting". (page 42) 06_D-R150SB(E)_inst_40-48 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 42: C: Tv Shape Setting](#)

SKIP e.g. QUICK CHP DIVIDE ENTER Display settings 4:3LB TV shape 4:3LB 4:3 normal Screen protector 16:9 wide DISPLAY SUBTITLE 16:9 shrink REC REC MODE ZOOM ANGLE Start TV/DVR AUDIO SETUP 06_D-R150SB(E)_inst_40-48 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 43](#) • When a DVD video disc has a particular available picture shape, the contents may not be compatible with other picture shape. "C: TV shape setting" is complete. Go to "D: Remote control settings". (page 44) 06_D-R150SB(E)_inst_40-48 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 44: D: Remote Control Settings](#)

TV VOL : To adjust the volume + 10 CLEAR TIME SLIP INPUT SEL. INPUT SEL. TV VOL T.SEARCH PROGRESSIVE TV VOL TOP MENU MENU SKIP REV SKIP FWD STOP PLAY 06_D-R150SB(E)_inst_40-48 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

[Page 45](#) 3131 Notes • TOSHIBA code is factory set. • Some brands have several codes. Try one by one until the remote control can operate your TV. • Depending on the TV, the remote control may not operate at all or some of the buttons may not work.

[Page 46: Operating The Second And Third Toshiba Dvd Video Recorders With The Remote Control Of This Recorder](#)

Operating the second and third TOSHIBA DVD video recorders with the remote control of this recorder Switches the codes to operate the recorder. If you use the second and third TOSHIBA DVD video recorders, set the different remote codes for each recorder to avoid confusion in the response of the recorders.

[Page 47](#) You can temporarily disable the reception of the remote control signals at the recorder, when the selection of DR 1, DR 2 and DR 3 is not sufficient while you are using several Toshiba DVD video recorders. Press CH buttons on the recorder at the same time for three seconds or more.

[Page 48](#) Printed in China 06_D-R150SB(E)_inst_40-48 05.7.13, 0:23 AM Downloaded From Disc-Player.com Toshiba Manuals...

